

Service Technical Information

MODEL NO.	AM-HX50 / HX55
SUBJECT	Loose PICK UP prism Warnings when replacing PICK UP

REF.No. :G - A0 - 012 - E0


DATE :27. APR. 2000

<CONTENTS>

Due to loose prism PICK UP, "NO DISC" may be displayed when playback is desired.
Complete the following procedures when this occurs.
Also, complete the following processes even when PICK UP is replaced in cases other than loose prism.

<COUNTERMEASURE>

Affix the sheet to the bottom surface of the PICK UP after replacement.
Align a corner of the sheet with line C so that the sheet sticks on between lines A and B.

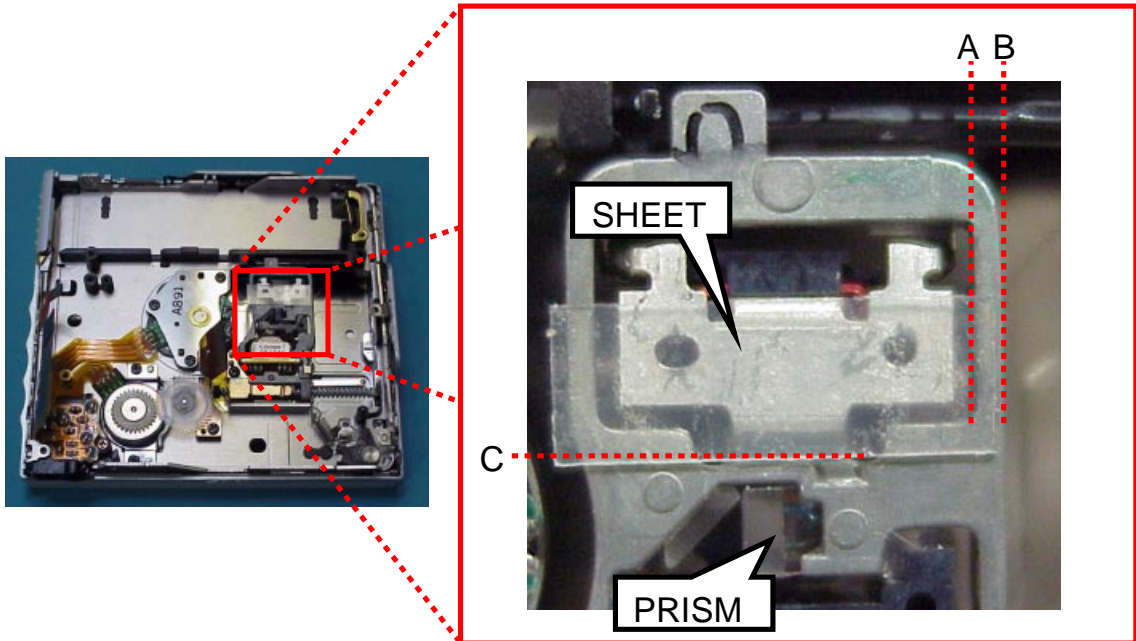

<NOTE>

Be sure that it does not protrude beyond line B (PICK UP).
Don't touch the prism.

Ref.	Parts Code	Description	Remarks
-	8A-HM3-232-110	SH,PU	-

G	R	Code No.	Access Code	Modified Ser. No.	Parts Schedule
-	-	-	-	-	-