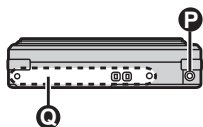
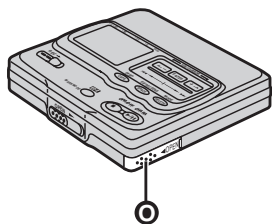
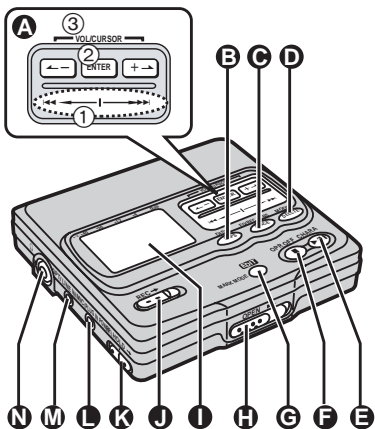
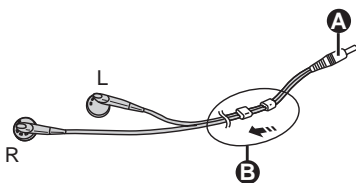
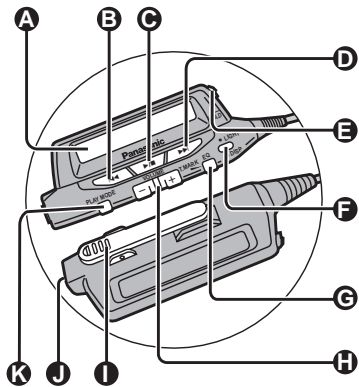


A**B****Main unit****A Flatswitch**

- ① Track select, menu select, track number select, character select (|◀◀◀, ▶▶▶|)
- ② To confirm items selected with ①, to add track marks (ENTER)
- ③ Volume and cursor buttons (←, +, →, VOL/CURSOR)

 
B Display, capital/lower case button (DISP, CAPS)**C** Tone/recording sensitivity/space button (EQ/REC SENS, SPACE)**D** Play and record mode/character delete button (MODE, DELETE)**E** Play/record/pause/operation on/character type button (▶/||, CHARA)**F** Stop/power off/edit cancel button (■, OPR OFF)**G** Changing edit mode, changing track mark mode, completing edit button (EDIT, MARK MODE)**H** Open switch (OPEN ▶)**I** Display**J** Recording pause/operation on switch (REC →)**K** Hold switch (HOLD →)**L** Microphone jack [MIC (PLUG IN POWER)]**M** Optical digital in/line in jack (OPT/LINE IN)**N** Headphone jack (👂)**O** Rechargeable battery compartment cover (◀ OPEN)**P** DC IN jack (DC IN = 1.8 V ⬡-C-⬡)**Q** Connection terminal for battery case**Stereo earphones****A** Plug**B** Slider


Slide up to prevent tangling the cord when the earphones are not in use.

A

Wired remote control

- A** Display
- B** Skip/search (backward) button (◀◀)
- C** Play/record/stop button (▶/■)
- D** Skip/search (forward) button (▶▶)
- E** Hold switch (HOLD)
- F** Light/display button (•LIGHT, — DISP)
- G** Tone control/track mark button (EQ, T.MARK)
- H** Volume control button (—, VOLUME, +)
- I** Clip
- J** Earphone jack
- K** Play mode button (PLAY MODE)

An operation tone sounds when buttons on the remote control are pressed. This tone is represented in these instructions by “”.

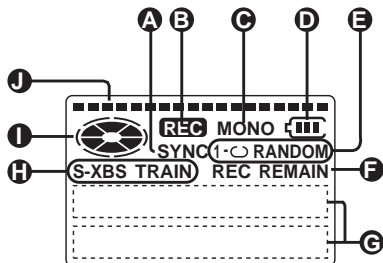B

Display information

- A** Synchronized recording display
- B** Recording display
- C** Monaural play/record display
- D** Battery indication
- E** Play mode
- F** Remaining recording time
- G** Text
- H** Sound quality
- I** Disc mark
- J** Level meter