



- ⑨ **Edit button (EDIT)**
- ⑩ **Enter button (ENTER)**
- ⑪ **CD edit recording button (CD EDIT)**
- ⑫ **MD slot**
- ⑬ **Eject button (▲ EJECT)**
- ⑭ **Record button and indicator (REC)**
- ⑮ **Marking mode select switch (MARKING)**
- ⑯ **One track/all tracks switch (TRACK)**
- ⑰ **Skip/search buttons (◀◀ / ◀◀, ▶▶ / ▶▶)**
- ⑱ **Stop button (■)**
- ⑲ **Pause button (||)**
- ⑳ **Playback button and indicator (▶)**

The color of the indicator the button depends on the operation taking place.

If stopped: orange

If playing or recording: green