


Main unit

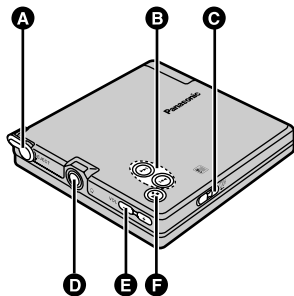

- A** Eject lever (EJECT)
- B** Skip/search buttons (|◀, ▶|)
- C** Hold switch (HOLD)
- D** Headphone jack (📞)
- E** Volume control buttons (VOL, -, +)
- F** Play/stop button (▶/■)
- G** Rechargeable battery compartment
- H** Battery case and charger terminal

