

SONY.

3-861-445-111

Personal MiniDisc System


Operating Instructions



ZS-M7

©1998 by Sony Corporation

Listening to the radio

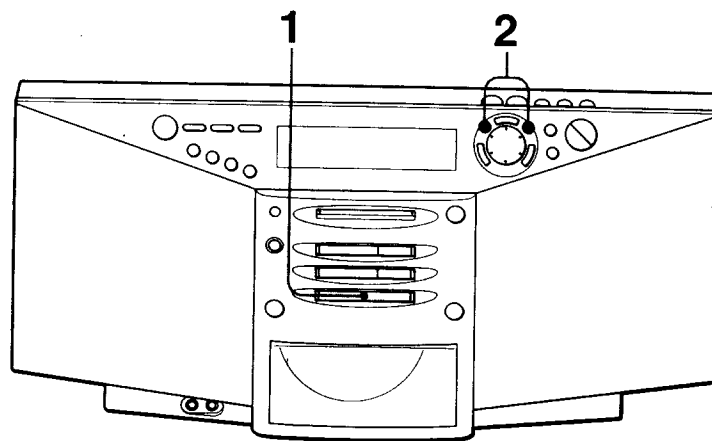


Connect the AC power cord (see page 49).

1




Press **BAND** until the band you want appears in the display (direct power-on).

 Display



"FM" or "AM" appears


2

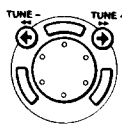

Hold down **TUNE +** or **TUNE -** until the frequency digits begin to change in the display.

The player automatically scans the radio frequencies and stops when it finds a clear station.

 If you can't tune in a station, press **TUNE +** or **TUNE -** repeatedly until you tune in the station you want.



Indicates an FM stereo broadcast

Table of contents

Basic Operations

- 4 Playing a CD
 - 6 Recording a whole CD (Synchronized recording)
 - 8 Playing an MD
 - 10 Listening to the radio
-

The CD Player•The MD Player

- 12 Using the display
- 15 Locating a specific track
- 16 Playing tracks repeatedly (Repeat Play)
- 17 Creating your own program (Program Play)
- 19 Playing tracks in random order (Shuffle Play)

The Radio

- 20 Presetting radio stations
- 22 Playing preset radio stations

Recording

- 23 Recording the track you are listening to (Synchronized recording of a single track – REC IT Function)
- 24 Recording the tracks you programmed (Synchronized recording of the tracks you programmed)
- 26 Recording from the radio or a CD
- 28 Recording on a recorded MD

Editing recorded tracks on the MD

- 29 Before editing
- 31 Erasing recordings (Erase Function)
- 34 Dividing recorded tracks (Divide Function)
- 36 Combining recorded tracks (Combine Function)
- 38 Moving recorded tracks (Move Function)
- 39 Labeling recordings (Name Function)

The Timer

- 42 Setting the clock
- 44 Waking up to music
- 46 Timer-recording radio programs
- 48 Falling asleep to music


Setting Up

- 49 Preparing the system
- 52 Connecting optional components
- 54 Adjusting the audio emphasis

Additional Information

- 55 Precautions
- 57 System limitations of the MD
- 59 Getting to know the MD
- 61 Troubleshooting
- 64 Error messages
- 65 Specifications
- 66 Index

Playing a CD

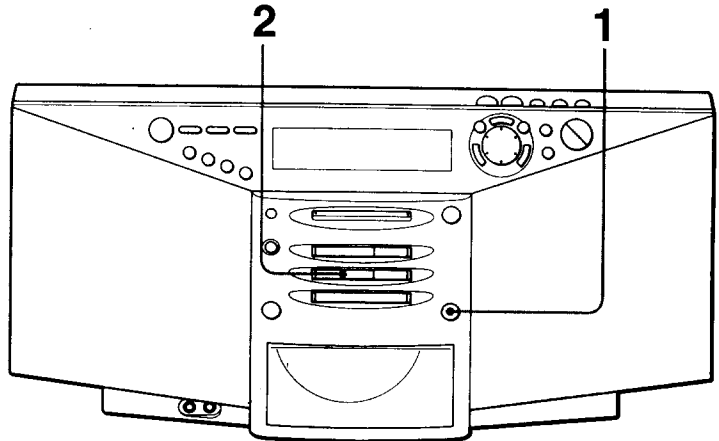


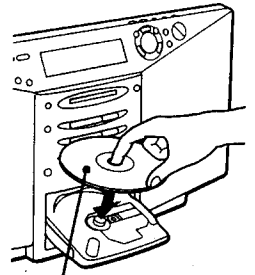
Connect the AC power cord (see page 49).

1

CD OPEN/CLOSE




Press  CD OPEN/CLOSE (direct power-on) and place the CD on the CD tray until it clicks into place.



With the label side up


2




Press CD .

The CD tray closes and the player plays all the tracks once.

Display

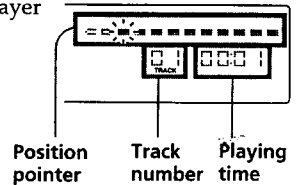


Use these buttons for additional operations

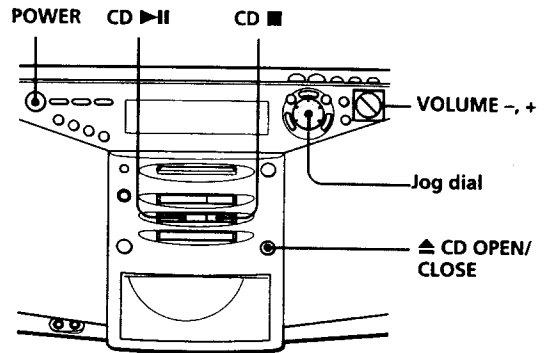


Tips

- Next time you want to listen to a CD, just press CD ►||. The player turns on automatically and starts playing the CD.
- **What is the position pointer in the display?** It shows about where on the CD track the player is playing.

To	Do this
adjust the volume	Press VOLUME +, - (VOL +, - on the remote).
stop playback	Press CD ■.
pause playback	Press CD ► (CD on the remote). Press the button again to resume play after pause.
go to the next track	Turn the jog dial clockwise. (On the remote, press ► .)
go back to the previous track	Turn the jog dial counterclockwise. (On the remote, press ◀◀.)
remove the CD	Press ▲ CD OPEN/CLOSE.
turn on/off the player	Press POWER.

 

4

 


Press DISC ALL.

The player starts recording automatically.


If the MD has any previous recording, recording will be made from the last recorded position.

Position pointer (showing playing position on the CD and recording position on the MD)

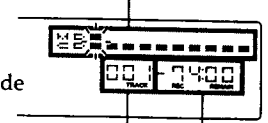

Track number of MD Remaining recording time of MD


Notes

-  After you stop recording, do not disconnect the AC power cord or move the player while "TOC EDIT" is flashing in the display. If you do so, recording may not be done properly.
- When you record a whole CD, you cannot pause recording.

Tips

- Adjusting the volume or the audio emphasis (page 54) will not affect the recording level. Keep the volume at a moderate level so as to prevent the sound from skipping.
- To record over the previous recording, see page 28.
- Once the clock is set, the recording date and time are stamped automatically (page 42).

Use these buttons for additional operations

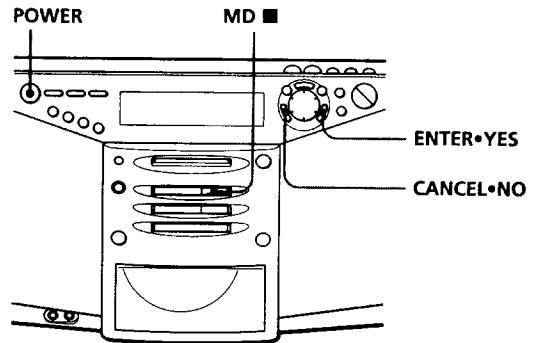

To	Press
stop recording	MD ■ or CD ■
turn on/off the player	POWER


If "CD>MD OK?" alternates with time display

There is not enough space on the MD to record the whole CD.

If it is all right to record as much as possible and cancel recording of some tracks, press ENTER*YES. To stop recording, press CANCEL*NO.

If any other messages are displayed, see page 64.

Playing an MD

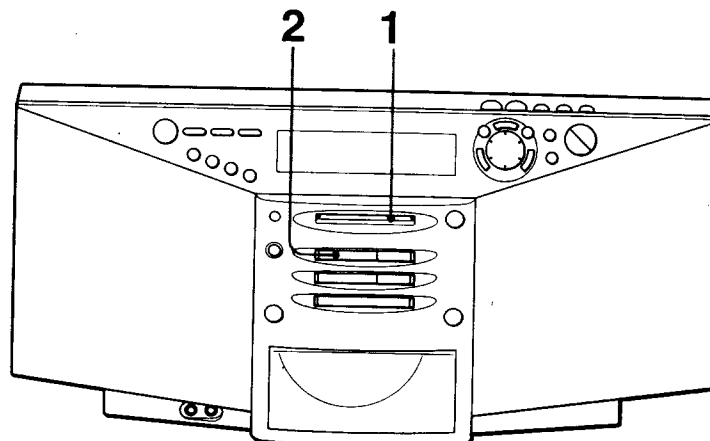

Connect the AC power cord (see page 49).

1 Insert the MD (direct power-on). **Display**

With the label side up

Insert in the direction of the arrow

SELECTION
004 38:50
TRACK

After "TOC Reading" is displayed, the disc name will be displayed if it is labeled.


2 Press MD ►II. **Track name is displayed if it is labeled.**

The player plays all the tracks once.

LOVE SONG
001 00:01
TRACK

Track number Playing time


Use these buttons for additional operations

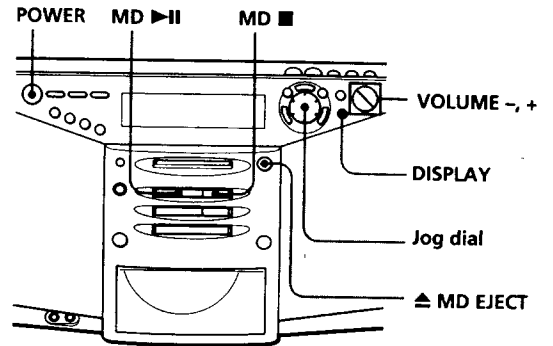

Tip
 Next time you want to listen to a MD, just press MD ►||. The player turns on automatically and starts playing the MD.

To	Do this
adjust the volume	Press VOLUME +, - (VOL +, - on the remote).
stop playback	Press MD ■.
pause playback	Press MD ► (MD on the remote). Press the button again to resume play after pause.
go to the next track	Turn the jog dial clockwise. (On the remote, press ►.)
go back to the previous track	Turn the jog dial counterclockwise. (On the remote, press ◀.)
remove the MD	Press ▲ MD EJECT.
turn on/off the player	Press POWER.
check the playing position in the display using the position pointer	Press DISPLAY.

Listening to the radio

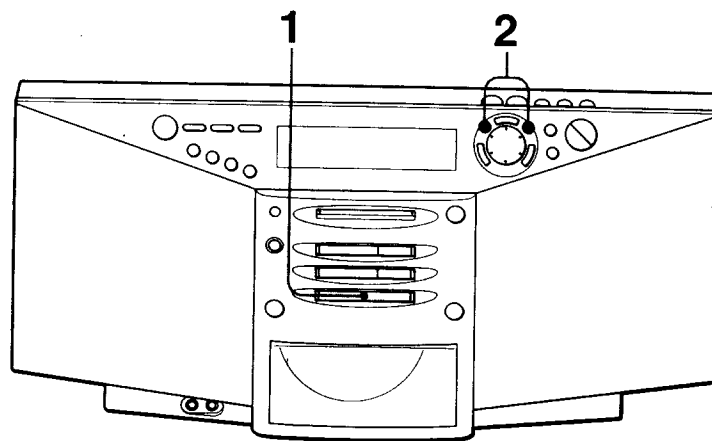


Connect the AC power cord (see page 49).

1




Press **BAND** until the band you want appears in the display (direct power-on).

 Display



"FM" or "AM" appears


2

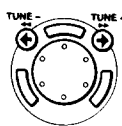

Hold down **TUNE +** or **TUNE -** until the frequency digits begin to change in the display.

The player automatically scans the radio frequencies and stops when it finds a clear station.

 If you can't tune in a station, press **TUNE +** or **TUNE -** repeatedly until you tune in the station you want.




Indicates an FM stereo broadcast

Tips

- If the FM broadcast is noisy, press MONO/ST (MODE on the remote) until "MONO" appears in the display and radio will play in monaural.
- Next time you want to listen to the radio, just press BAND. The player turns on automatically and starts playing the previous station.

Use these buttons for additional operations

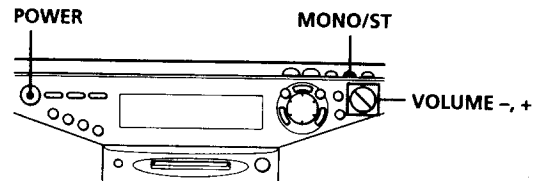


To	Press
adjust the volume	VOLUME +, - (VOL +, - on the remote)
turn on/off the radio	POWER

To improve broadcast reception


FM:

Reorient the aerial for FM.

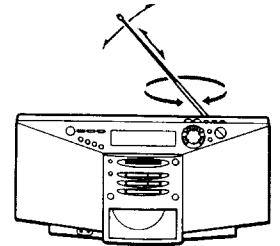

AM:


Keep the AM loop aerial as far as possible from the player and reorient it.

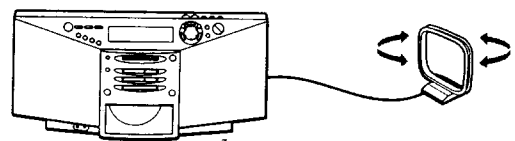

If the broadcast is still noisy, connect the external aerial (page 50).


Using the display

You can check information about the CD and MD using the display.

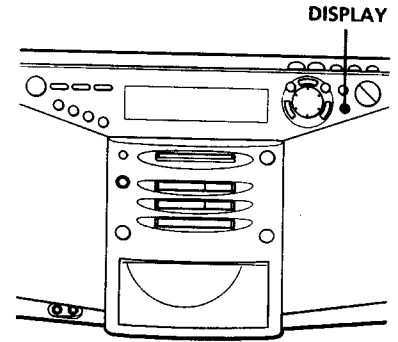

During stop (CD)

The total track number and playing time are displayed.

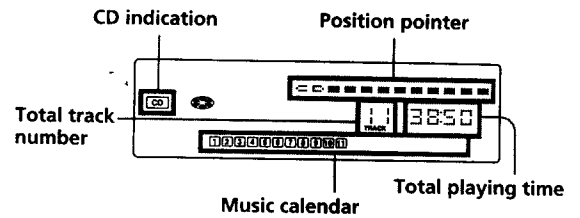

If the CD has more than 20 tracks, "OVER 20" appears in the display.

During play (CD)

The current track number and playing time are displayed. The track numbers in the music calendar disappear after they are played.

Note

During repeat play (page 16), program play (page 17) and shuffle play (page 19), the number of tracks left and remaining time on the CD will not be displayed.

Tip

The disc name is displayed only with the MDs that have been electronically labeled.


To check the remaining time

Press DISPLAY.

To display	Press DISPLAY
the current track number and remaining time on the current track	once
the number of tracks left and remaining time on the CD	twice
the current track number and playing time	three times

During stop (MD)

The total track number and playing time are displayed.

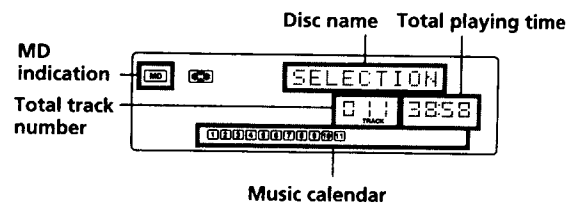

If the MD has more than 20 tracks, "OVER 20" appears in the display.

To check the remaining recording time on the MD

Press DISPLAY.

The position pointer also appears in the display.

continued

Using the display (continued)

Note

During repeat play (page 16), program play (page 17) and shuffle play (page 19), the number of tracks left and remaining time on the MD will not be displayed.

During play (MD)

The current track number, playing time and the track name are displayed. The track numbers in the music calendar disappear after they are played.

To check the remaining time, recording date and time, etc.


Press DISPLAY.

To display	Press DISPLAY
the current track number, remaining time on the current track and position pointer	once
the number of tracks left, remaining time on the MD and the disc name	twice
recording date and time*	three times
the current track number, playing time and the track name	four times

* Once the clock is set, the recording date and time are stamped automatically (page 42).

Locating a specific track

You can quickly locate any track on a CD or an MD using the number buttons. You can also find a specific point in a track while playing a CD or an MD.

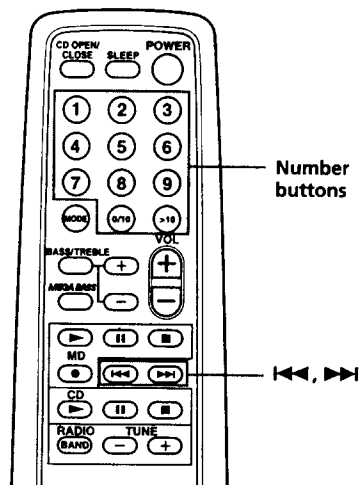

Note

You cannot locate a specific track if "REPEAT PGM", "REPEAT SHUFFLE", "PGM" or "SHUFFLE" is lit in the display. Turn off the indication by pressing ■.

Tips


- To locate a track numbered over 10, press >10 first, then the corresponding number buttons.
Example:
To play the track number 23, press >10 first, then 2 and 3.
To play the track number 10, you can use the 0/10 button as well as >10, 1 and 0.
- To select a track on an MD numbered 100 or more, press >10 twice, then the corresponding number buttons.

To locate	Press
a specific track directly	the number button of the track.
a point while listening to the sound	▶▶ (forward) or ◀◀ (backward) while playing and hold down until you find the point. (On the player, use ▶▶ or ◀◀.)
a point while observing the display	▶▶ (forward) or ◀◀ (backward) in pause and hold down until you find the point. (On the player, use ▶▶ or ◀◀.)

Playing tracks repeatedly

(Repeat Play)

You can play tracks repeatedly in normal, shuffle or program play modes (page 17).

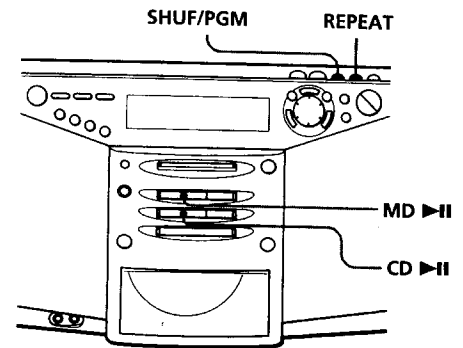

On the remote

- During play, press MODE repeatedly until "REPEAT 1" or "REPEAT" appears in the display. During play, you cannot select "REPEAT SHUFFLE" or "REPEAT PGM".
- You can also select the repeat play during stop. Press MODE repeatedly until "REPEAT 1", "REPEAT", "REPEAT SHUFFLE" or "REPEAT PGM" appears in the display. Then, play the CD or the MD.

To repeat	Do this
a single track	<ol style="list-style-type: none"> 1 Play the track you want. 2 Press REPEAT repeatedly until "REPEAT 1" appears in the display.
all the tracks	<ol style="list-style-type: none"> 1 Start normal play. 2 Press REPEAT repeatedly until "REPEAT" appears in the display.
tracks in random order	<ol style="list-style-type: none"> 1 Start shuffle play (page 19). 2 Press REPEAT repeatedly until "REPEAT SHUFFLE" appears in the display.
programed tracks	<ol style="list-style-type: none"> 1 Start program play (page 17). 2 Press REPEAT repeatedly until "REPEAT PGM" appears in the display.


To cancel Repeat Play

Stop play first. Then, press REPEAT until "REPEAT" disappears from the display.

Creating your own program

(Program Play)

You can arrange the playing order of up to 20 tracks on a CD or an MD.

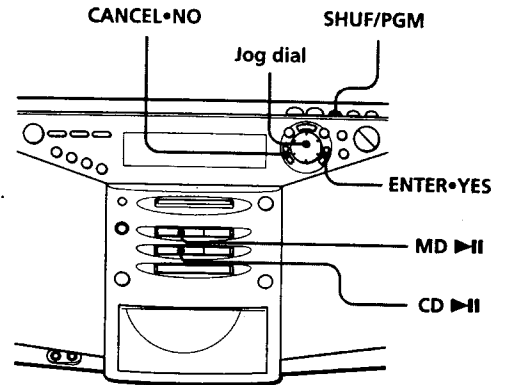

On the remote

Press MODE until "PGM" appears in the display, then press the number button to select the track.

Tip

If you made a mistake, press CANCEL•NO and re-enter the track number by turning the jog dial and press ENTER•YES.


Before you begin, make sure that the CD or MD player is in stop mode.

- 1 Press SHUF/PGM until "PGM" appears in the display.
- 2 Turn the jog dial to select the track you want to program, and press ENTER•YES.


Repeat this step.

Programed tracks appear in the music calendar.

(In case of CD)

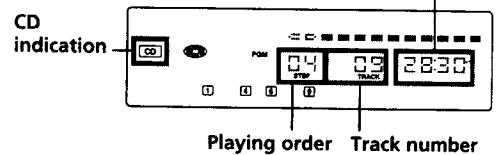

(In case of MD)

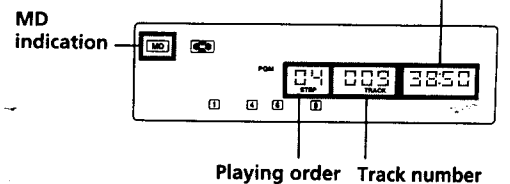

- 3 Press CD >|| (or MD >||) to start program play.

continued

Creating your own program (Program Play) (continued)

Tips

- If the program play is finished, the program is saved. You can play the same program again by pressing ►II.
- If you open the CD tray, the program is erased.
- If you take out the MD, the program is erased.
- During play, total programmed time cannot be displayed.

To cancel Program Play

Stop play first. Then, press SHUF/PGM until "PGM" disappears from the display.

To check the order of tracks before play

Before starting the program play, press ENTER•YES.

"PGM Check" appears in the display. Every time you press ENTER•YES, the track number appears in the programmed order.

To change the current program

Change before starting the program play.

To	Do this
erase the last track in the program	<ol style="list-style-type: none">1 Press CANCEL•NO. The track programmed last is erased.2 Re-enter the track numbers by turning the jog dial and pressing ENTER•YES.
change the whole program completely	<ol style="list-style-type: none">1 Press ■ to erase the whole program.2 Create a new program following the programming procedure.

Playing tracks in random order

(Shuffle Play)


You can play tracks in random order.

Tip

During shuffle play, you cannot select the previous track by turning the jog dial (or by pressing **◀◀** on the remote).

On the remote

Press **MODE** until "SHUFFLE" appears in the display.

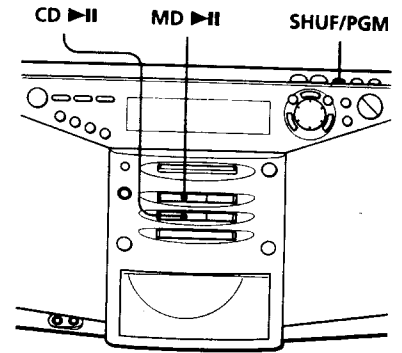

Before you begin, make sure that the CD or MD player is in stop mode.


- 1 Press **SHUF/PGM** until "SHUFFLE" appears in the display.
- 2 Press **CD ▶||** (or **MD ▶||**) to start shuffle play.

To cancel Shuffle Play

Stop play first. Then, press **SHUF/PGM** until "SHUFFLE" disappears from the display.

Presetting radio stations

You can store radio stations into the player's memory. You can preset up to 24 stations, 12 for each band in any order.

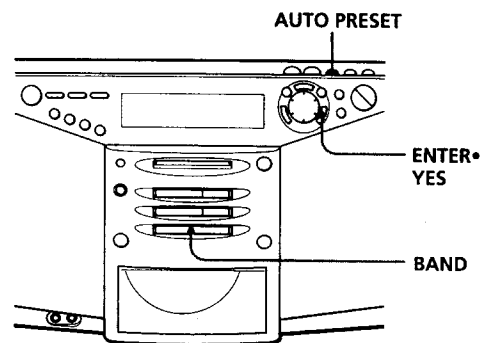

- 1 Press BAND until the band you want appears in the display.
- 2 Hold down AUTO PRESET until "AUTO PRESET" flashes in the display.

The stations are stored in memory from the lower frequencies (from the preset number 1, in numerical order) as long as the station has a signal strong enough.

When you've done presetting, the station stored in the preset number 1 will be tuned in automatically.

On the remote

- 1 Press BAND until the band you want appears in the display.
- 2 Press TUNE + or - until you tune in the station you want.
- 3 Hold down the number button that you want to preset the new station on for 2 seconds.

To select the preset number 11 or 12, press >10 first, then press 1 or 2.

If a station cannot be preset automatically

You need to preset a station with a weak signal manually. Also, when you want to replace preset stations with a new one, proceed as follows:

- 1 Press BAND until the band you want appears in the display.
- 2 Press TUNE + or - repeatedly until you tune in the station you want, and then, hold down ENTER•YES for 2 seconds.
- 3 Select the preset number you want to preset the new station on by turning the jog dial.
- 4 Press ENTER•YES.

The new station replaces the old one.

To label the station


- 1 According to the procedure on page 22, tune in the station you want to label.
- 2 Press EDIT for 2 seconds.
- 3 Input the name of the station (up to 12 characters).
For details , see steps 4 - 8 on pages 39 and 40.

To	Do this
move the cursor	Press \leftarrow or \rightarrow .
select the characters	Turn the jog dial.
erase the characters	Press DELETE.
insert the characters	Use INSERT.

- 4 Press ENTER • YES.

Playing preset radio stations

Once you've preset the stations, use the jog dial on the player or the number buttons on the remote to tune in your favorite stations.

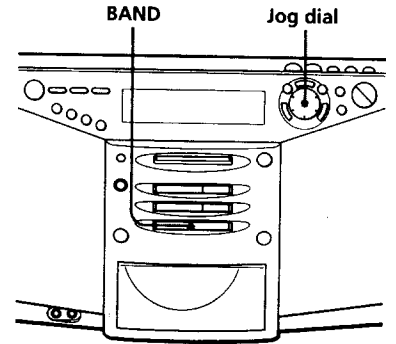

On the remote

To display the preset number you want in step 2, use the number buttons.

To select the preset number 10:

Press 0/10.

To select the preset number 11 or 12:


Press >10 first, then press 1 or 2.

- 1** Press BAND until the band you want appears in the display.
- 2** Turn the jog dial to display the preset number of the station you want.

Recording the track you are listening to

(Synchronized recording of a single track - REC IT Function)

You can record the track you are listening to from its beginning using the TO TOP or TO END button.

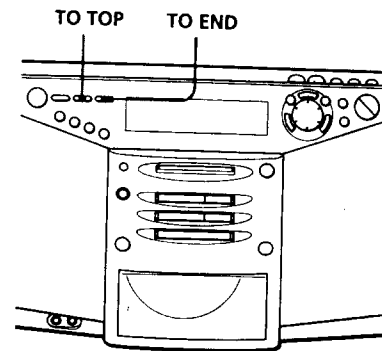

Notes

- **TOC EDIT** After you stop recording, do not disconnect the AC power cord or move the player while "TOC EDIT" is flashing in the display. If you do so, recording may not be done properly.
- If you turn up the volume too high, sound skipping may occur.

Tips

- To record over the previous recording, see page 28.
- Once the clock is set, the recording date and time are stamped automatically (page 42).

- 1 Insert a recordable MD.
- 2 Insert the CD and play the track you want to record.
- 3 Press TO TOP or TO END.

The player goes back to the beginning of the track you are listening to, and starts recording.

When you use a recorded MD:

To record before the previous recording, press TO TOP.

To record after the previous recording, press TO END.

When you use a new MD:

Press either TO TOP or TO END.

When recording is finished, MD player will stop operation automatically but CD player will continue play.

You can label the track during recording

- 1 Press EDIT.
- 2 Press DISPLAY repeatedly to select the type of characters.
- 3 Turn the jog dial to display the character you want and press ⇄.
- 4 Repeat steps 2 and 3 to complete the entire name.
- 5 Press ENTER•YES.

For details, see pages 39 - 41.


Recording the tracks you programmed

(Synchronized recording of the tracks you programmed)


You can record the tracks you programmed.

Tip

If you made a mistake, press CANCEL•NO and re-enter the track number using the jog dial and ENTER•YES.

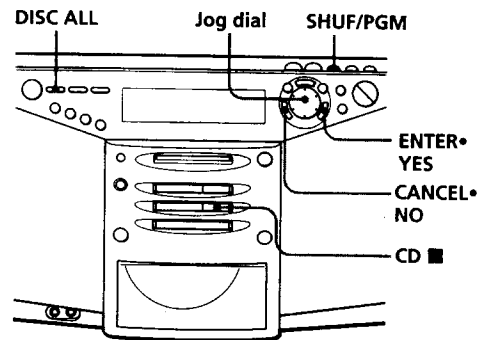


- 1 Insert a recordable MD.
- 2 Insert the CD you want to record and press CD ■.
- 3 Press SHUF/PGM until "PGM" appears in the display.
- 4 Turn the jog dial to select the track you want to program, and press ENTER•YES. Repeat this step. Programmed tracks appear in the music calendar.

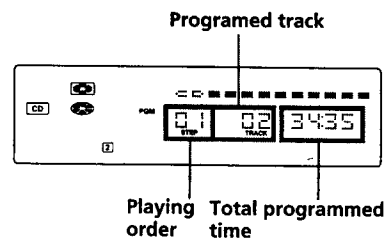

- 5 Press DISC ALL. The player starts recording automatically. If the MD has any previous recording, recording will be made from the last recorded position.

Notes

-  After you stop recording, do not disconnect the AC power cord or move the player while "TOC EDIT" is flashing in the display. If you do so, recording may not be done properly.
- If you turn up the volume too high, sound skipping may occur.

Tips

- To record over the previous recording, see page 28.
- Once the clock is set, the recording date and time are stamped automatically (page 42).

If "CD>MD OK?" alternates with time display


There is not enough space on the MD to record the whole program.

If it is all right to record as much as possible and cancel recording of some tracks, press ENTER•YES. To stop recording, press CANCEL•NO.

If any other messages are displayed, see page 64.

Recording from the radio or a CD

You can record from the radio or a CD to an MD using the REC button. You can start or stop recording at any point you want. You can also pause recording.

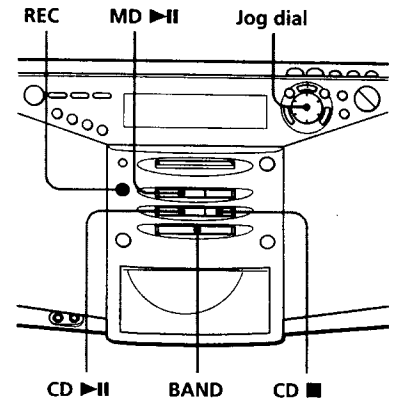

Notes

- **TOC EDIT** After you stop recording, do not disconnect the AC power cord or move the player while "TOC EDIT" is flashing in the display. If you do so, recording may not be done properly.
- While recording from radio, you cannot change the station.
- If you turn up the volume too high, sound skipping may occur.

Tips

- To add track marks during recording, press REC where you want to add track marks.
- To record over the previous recording, see page 28.
- To add track marks after recording, see "Dividing recorded tracks" on page 34.

Recording from the radio

When receiving conditions are good, track marks are added on the MD automatically:

- when there is no sound input during recording for more than 2 seconds.
- when a soft sound like pianissimo continues during recording.
- when you pause recording.

If unnecessary track marks are added, erase them after recording (see "Combining recorded tracks" on page 36).

- 1 Tune in the station you want to record from.
- 2 Insert a recordable MD.
- 3 Press REC (● on the remote).
Recording does not start (recording standby mode).
- 4 Press MD ►|| (MD ► or MD || on the remote).
Recording will be made from the last recorded position.


To stop recording

Press MD ■.

Tip

When you record a program of a station whose name is labeled on this player, the station name is recorded automatically as the track name (page 21).

Notes

-  After you stop recording, do not disconnect the AC power cord or move the player while "TOC EDIT" is flashing in the display. If you do so, recording may not be done properly.
- If you turn up the volume too high, sound skipping may occur.

Tips

- To add track marks during recording, press REC where you want to add track marks.
- To record over the previous recording, see page 28.
- To add track marks after recording, see "Dividing recorded tracks" on page 34.

To pause recording

Press MD ►||. Press the button again to resume recording. (On the remote, use MD || instead of MD ►||.)

Recording from a CD

Track marks on the source CD are recorded on the same positions on the MD. Track marks are also added automatically on the MD when you pause recording.

If unnecessary track marks are added, erase them after recording (see "Combining recorded tracks" on page 36).

- 1 Insert a CD.
- 2 Press CD ■ to activate the CD player.
- 3 Insert a recordable MD.
- 4 Press REC (● on the remote).
Recording does not start (recording standby mode).
- 5 Press MD ►|| (MD ► or MD || on the remote).
Recording will be made from the last recorded position.
- 6 Press CD ►||.

To stop recording

Press MD ■.

To pause recording

Press MD ►||. Press the button again to resume recording. (On the remote, use MD || instead of MD ►||.)

Recording on a recorded MD

There are two ways of recording on a recorded MD.

- To add to the previous recording. The previous recording will remain.
- To record over the previous recording. The previous recording will be erased.

Adding recording (the previous recording will remain)

Insert a recorded MD, and start recording (pages 6, 26 and 27). Recording will be made from the last recorded position.

If there is not enough space on the MD to record

When recording a whole CD, "CD>MD OK?" appears in the display (page 7). When recording from the radio or a CD, press DISPLAY to check the recording remaining time on the MD.

Recording over the previous recording (the previous recording will be erased)

To record over from the beginning of the MD after erasing all tracks on the MD

First, erase all tracks on an MD (page 32). You can use the MD the same as a new one. Then, record on the MD as usual.

To record over from a specific point on the MD

- 1 Play the MD and press MD ►II to pause play at the point you want to start recording.
- 2 Press REC to make the player in standby mode.
- 3 Play the sound source.
- 4 Press MD ►II to start recording.

Note

When recording over from a specific point on the MD:

If the new recording is shorter than the previous recording, a part of the previous recording will remain after the recording. As you repeat this type of recording, many fragments of recording will remain on the MD. We recommend that you erase all tracks on the MD (page 32) if you no longer need to keep the recording. Then, start recording on the blank MD.

Before editing

On the MD, track marks are inserted between the tracks. You can find the beginning of the tracks quickly using the track marks. You can change the positions of the track marks. For instance, you can divide a certain track into several tracks by adding track marks. You can also combine some tracks into a new longer track by erasing some track marks.

The position of the track marks to be added are different depending on the type of recording or recording conditions

The type of recording	The position of the track marks to be added
Recording a whole CD (page 6)	The same positions on the source CD
Recording from a CD using REC button (page 27)	<ul style="list-style-type: none">• The same positions on the source CD• The position where you pause recording• The position where you press REC
Recording from the radio or other equipment connected to the player (pages 26 and 52)	<ul style="list-style-type: none">• When there is no sound input or a soft sound continues during recording for more than two seconds• The positions where you pause recording• The positions where you press REC

You can add or erase track marks after recording. When you record, for instance, from a radio or other equipment connected to the player, track marks may be added to the positions you do not want. If that happens, change the positions of the track marks to those you want.

Change the track marks correctly

- To erase a track mark → “Combining recorded tracks (Combine Function)” (page 36): You can combine two tracks into a single one by erasing the track mark between the two tracks.
- To add a track mark → “Dividing recorded tracks (Divide Function)” (page 34): You can divide one track into two tracks by adding a track mark.

continued

Before editing (continued)

You can also use the following functions

- Erasing a single track → "Erasing recordings (Erase Function)" (page 31)
- Erasing all tracks on an MD → "Erasing recordings (Erase Function)" (page 32)
- Changing the order of the tracks → "Moving recorded tracks (Move Function)" (page 38)
- Locating any point in the track quickly → "Dividing recorded tracks (Divide Function)" (page 34)
- Combining several independently recorded portions into a single track → "Erasing recordings (Erase Function)" (page 31) and "Combining recorded tracks (Combine Function)" (page 36)

Note



After you stop recording, do not disconnect the AC power cord or move the player while "TOC EDIT" is flashing in the display. If you do so, recording may not be done properly.


Erasing recordings

(Erase Function)

You can quickly erase the recorded tracks or unnecessary portion in the track. Unlike a cassette-corder, blank portion will not remain after erasure.


Here are three options to erase recordings:

- Erasing a single track
- Erasing all tracks on an MD
- Erasing a portion of a track

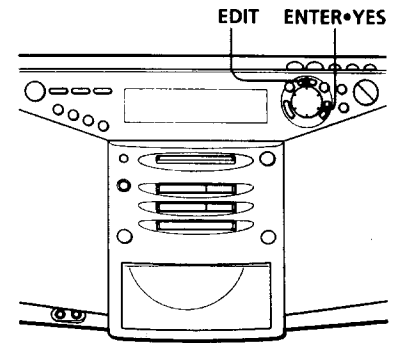

Notes

- If "Protected" appears in the display, the tab on the MD is in the record-protect position (page 56).

-  After you stop recording, do not disconnect the AC power cord or move the player while "TOC EDIT" is flashing in the display. If you do so, recording may not be done properly.

Erasing a single track

You can erase a whole track quickly. When you erase a track, the total number of tracks on the MD decreases by one and all tracks following the erased one are renumbered.

- 1 Play the track you want to erase.
- 2 Press EDIT repeatedly until "Track Erase" appears in the display.
- 3 Press ENTER•YES.

"Erase OK?" appears in the display, and one-track repeat play starts. Once you have erased a track, you cannot recover it. Be sure to check the contents of the track you are trying to erase.

If you want to cancel the erase function at this point:

Press CANCEL•NO or MD ■.

- 4 Press ENTER•YES.

"Complete" appears in the display for a few seconds, and the current track will be erased.

continued

Erasing recordings (Erase Function) (continued)

Note

**TOC
EDIT** After you stop recording, do not disconnect the AC power cord or move the player while "TOC EDIT" is flashing in the display. If you do so, recording may not be done properly.

Erasing all tracks on an MD

You can erase the disc name, all recorded tracks and their names at the same time. After you have erased all tracks on the MD, you can use it as a new MD.

1 While the player is stopped, press EDIT repeatedly until "All Erase" appears in the display.

2 Press ENTER • YES.

"Erase OK?" appears in the display. Once you have erased a track, you cannot recover it. Be sure to check the contents of the track you are trying to erase.

If you want to cancel the erase function at this point:

Press CANCEL • NO or MD ■.

3 Press ENTER • YES.

After "TOC EDIT" disappears from the display, "Blank Disc" appears in the display, and all contents on the MD are erased.


Note

TOC EDIT After you stop recording, do not disconnect the AC power cord or move the player while "TOC EDIT" is flashing in the display. If you do so, recording may not be done properly.


Erasing a portion of a track

By using the Divide (page 34), Erase (page 31) and Combine (page 36) functions, you can erase specific portions of a track.


Example: Erasing a portion of track A

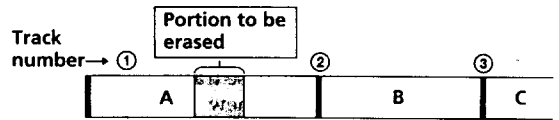


1 Divide A into three parts (page 34).

 

2 Erase A#2 (page 31).

 


3 Combine A#1 and A#3 (page 36).

 

Dividing recorded tracks

(Divide Function)

When recording from the radio, etc., track marks may not be added correctly. A number of tracks may be included in a single track. You can divide these tracks into separate tracks, and add a new track mark to each track. All tracks following the divided tracks are renumbered.

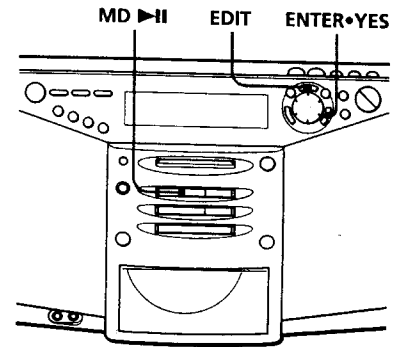

Tips


- To put the divided tracks together, see "Combining recorded tracks" on page 36.
- To divide a track during recording, press REC at the point where you want to add the track mark.

Note

If "Sorry" appears in the display, you cannot divide the track.

If you repeat editing on the MD, you may not be able to divide a track. This is due to the system limitations of the MD (page 57), but not caused by malfunction.

Example: Dividing track 1 into three tracks

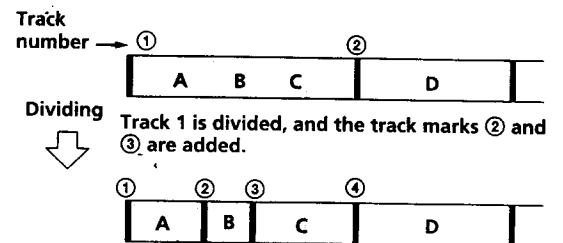

- 1 While playing the MD, press MD ►|| at the point where you want to create a new track.

The player pauses.

- 2 Press EDIT repeatedly until "Divide" appears in the display.

- 3 Press ENTER+YES.

"Divide OK?" appears in the display.

If you want to cancel the divide function at this point:

Press CANCEL•NO or MD ■.

Note



After you stop recording, do not disconnect the AC power cord or move the player while "TOC EDIT" is flashing in the display. If you do so, recording may not be done properly.


4 Press ENTER•YES.

"Complete" appears in the display for a few seconds after the track is divided. The original track only has the track name, while the new track has no name (this happens only when the track you divided had its track name). One track is added to the music calendar.

Combining recorded tracks

(Combine Function)


You can combine two adjacent tracks into a single one. Using the combine function, you can combine a number of fragmented recordings or delete the unnecessary track marks. All tracks following the combined track are renumbered.

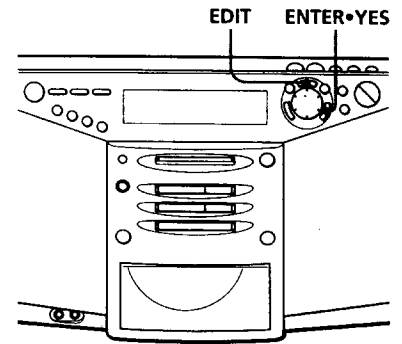

Notes

- If "Sorry" appears in the display, you cannot combine the tracks. If you repeat editing on the MD, you may not be able to combine the tracks. This is due to the system limitations of the MD (page 57), but not caused by malfunction.
- If "Cannot Edit" appears in the display, you may be trying to combine the tracks on the first track. You cannot use the combine function on the first track.

Example: Combine the tracks B and C

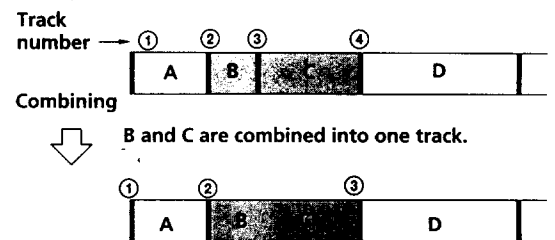

- 1** Play the track you want to combine.
Example: To combine tracks B and C, play the track C.
- 2** Press EDIT repeatedly until "Combine" appears in the display.
- 3** Press ENTER•YES.

"Combine OK?" appears in the display; the player enters the playback pause mode.

If you want to cancel the combine function at this point:

Press CANCEL•NO or MD ■.

Note

**TOC
EDIT**

After you stop recording, do not disconnect the AC power cord or move the player while "TOC EDIT" is flashing in the display. If you do so, recording may not be done properly.


4 Press ENTER•YES.

"Complete" appears in the display for a few seconds after the tracks are combined. If both of the combined tracks had track names, the name of the latter track is erased. The total number of tracks in the music calendar decreases by one.

Moving recorded tracks

(Move Function)


You can change the order of the tracks. After you move the track, the track numbers are renumbered automatically.

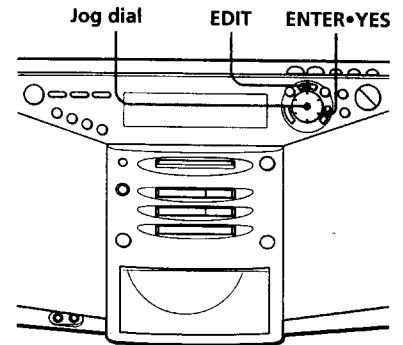

Note

TOC EDIT After you stop recording, do not disconnect the AC power cord or move the player while "TOC EDIT" is flashing in the display. If you do so, recording may not be done properly.


Example: Moving C to the position of track 1

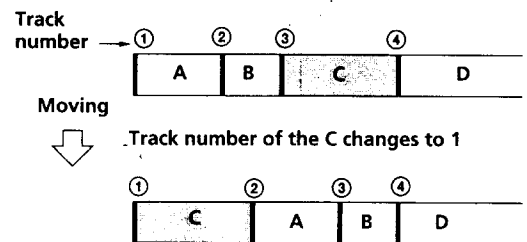

- 1 Play the track you want to move.
- 2 Press EDIT repeatedly until "Track Move" appears in the display.
- 3 Press ENTER•YES.
"→Track 003?" appears in the display, and one-track repeat play starts.
- 4 Turn the jog dial to select the new track position.
If you want to cancel the move function at this point:
Press CANCEL•NO or MD ■.
- 5 Press ENTER•YES.
"Complete" appears in the display for a few seconds after the track is moved.

Labeling recordings (Name Function)

You can label the MDs and the tracks you have recorded with letters, numbers and symbols. Each label can be made up of up to 100 characters. You can input up to about 1,700 characters into each MD.

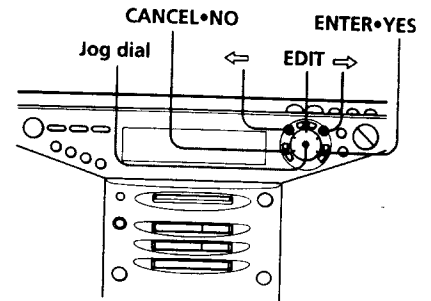

Labeling an MD


- 1 Insert the MD you want to label, and stop the MD play.
- 2 Press EDIT repeatedly until "Disc Name" appears in the display.
- 3 Press ENTER•YES.
If the disc name has been already labeled, the disc name appears in the display.
- 4 Press DISPLAY repeatedly to select the type of characters.

Each time you press DISPLAY, the character changes as follows: Uppercase letters → Lowercase letters → Numbers and symbols.

You can use the following characters:

The type of characters	Characters (symbols)
Uppercase letters	ABCD.....WXYZ',/: ␣ (space)
Lowercase letters	abcd.....wxyz',/: ␣ (space)
Numbers and symbols	0123456789!"#\$%&()*+,-<=>? @_`+`-`/:␣(space)

 continued



To change the characters

- **To add characters after the existing characters**

- ① Move the cursor to the right of the last character using ⇨.
- ② Turn the jog dial to select the character.
- ③ Press ENTER•YES.

- **To change the characters**

- ① Move the cursor to the character you want to change using ⇨.
- ② Turn the jog dial to select the character.
- ③ Press ENTER•YES.

- **To delete the character**

- ① Move the cursor to the character you want to delete using ⇨.
- ② Press DELETE. If you press DELETE repeatedly, the characters will be deleted one after another.
- ③ Press ENTER•YES.

- **To insert a character**


- ① Move the cursor to the place you want to add a character using ⇨.
- ② Press INSERT to make a space between the characters.
- ③ Turn the jog dial to select the character.
- ④ Press ENTER•YES.

The Timer

Setting the clock

"-y -m -d" and "--:--" indications appear in the display until you set the clock.


Once the clock is set, the recording date and time are stamped automatically (pages 7, 23 and 25).

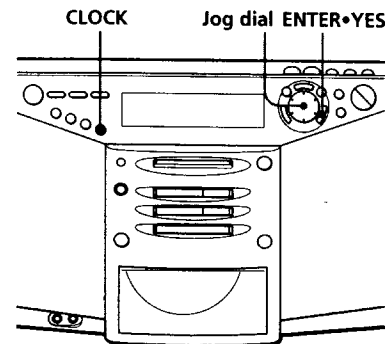

Tips


- The time display system of this player is the 12-hour system.
- You can set the clock of this player any time, no matter whether power is on or off.

 - 1** Press and hold **CLOCK** until the year digits flash.




- 2** Set the date.

 
- 1** Turn the jog dial to set the year and press **ENTER•YES**.



 - 2** Turn the jog dial to set the month and press **ENTER•YES**.



 - 3** Turn the jog dial to set the day and press **ENTER•YES**.




- 3** Set the time.

- 1** Turn the jog dial to set the hour and press **ENTER•YES**.
- 2** Turn the jog dial to set the minutes and press **ENTER•YES**.

4 Press ENTER•YES.

 The clock starts from 00
seconds.




To display the time

Press CLOCK. To go back to the previous display,
press CLOCK again. As long as the power is turned
off, the time indication is displayed.

Waking up to music

You can wake up to music or a radio program at a preset time.

Make sure you have set the clock (see "Setting the clock" on page 42).

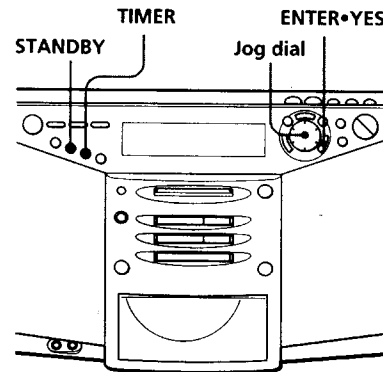

Note

You cannot preset waking up timer and recording timer (page 46) at the same time.


Before you begin, make sure "TIMER PLAY" or "TIMER REC" is not displayed. If either one is displayed, press STANDBY.

1 Prepare the music source you want to play.

Source	Do this
CD	Insert a CD.
MD	Insert an MD.
RADIO	Tune in the station.
LINE	Turn on the equipment connected to LINE IN.

2 Press TIMER.

 "TIMER PLAY" or "TIMER REC" flashes in the display.



Make the following settings by checking the indications in the display.

3 Turn the jog dial until "TIMER PLAY" flashes in the display, and press ENTER•YES.

"MD", "CD", "RADIO" or "LINE" flashes in the display.

4 Turn the jog dial until the music source you want to play ("MD", "CD", "RADIO" or "LINE") appears in the display, and press ENTER•YES.

Tip

 
If you made a mistake, press CANCEL•NO. The setting entered last will be cleared. Re-enter it.

Tips

- To exit the standby mode, press STANDBY to make either "TIMER PLAY" or "TIMER REC" disappear from the display.
- The preset settings remain until you reset them.
- As long as the ☉ indication appears in the display, the player is in timer mode.

5 Set the timer to the hour and the minutes you want the music to go on.


- ① Turn the jog dial to set the hour and press ENTER•YES.



- ② Turn the jog dial to set the minutes and press ENTER•YES.

6 Set the timer to the hour and the minutes you want the music to go off (Do as step 5.).

 - 7** Turn the jog dial to set the volume you want, and press ENTER•YES.



8 Press STANDBY.

"TIMER PLAY" lights up; the player enters the standby mode.

At the preset time, the power will go on and music will play. Then the power will go off at the preset time, and the player will enter the standby mode again.

To check/change the waking up timer settings

Press TIMER, then press ENTER•YES. Each time you press ENTER•YES, a stored setting is displayed in the set order. To change the setting, display the setting you want to change and re-enter it.

To use the player before a timer playback starts

If you turn on the player, you can use it as usual (in case of the radio, if you listen to the station which is different from the one you tuned in step 1 on page 44, you will hear that station at the preset time.) Turn off the player before the preset time.


To stop play

Turn off the power.

Timer-recording radio programs

You can set timer to record the radio at a certain time. You can also record from the component connected to the LINE IN jack of the player.

Make sure you have set the clock (see "Setting the clock" on page 42).

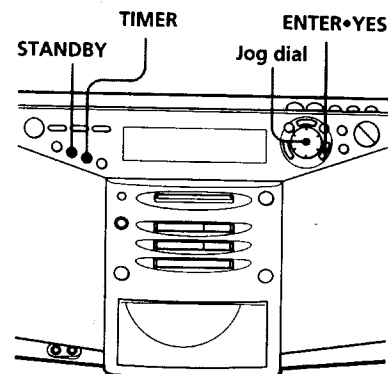

Notes

- You cannot preset recording timer and waking up timer (page 44) at the same time.
- When recording from the component connected to the LINE IN jack of the player, refer to the operating instructions of the component.

Tip

 
If you made a mistake, press CANCEL•NO. The setting entered last will be cleared. Re-enter it.

Before you begin, make sure "TIMER PLAY" or "TIMER REC" is not displayed. If either one is displayed, press STANDBY.

1 Tune in the radio station and insert an MD.

2 Press TIMER.

"TIMER PLAY" or "TIMER REC" flashes in the display.



Make the following settings by checking the indications in the display.

 
3 Turn the jog dial until "TIMER REC" flashes in the display, and press ENTER•YES.

4 Turn the jog dial until "RADIO" flashes in the display, and press ENTER•YES.

When recording from the component connected to the LINE IN jack of the player, turn the jog dial until "LINE" flashes in the display, and press ENTER•YES.


5 Set the timer to the hour and the minutes you want to start recording.

① Turn the jog dial to set the hour and press ENTER•YES.



② Turn the jog dial to set the minutes, and press ENTER•YES.

Tips

- To exit the standby mode, press **STANDBY** to make either "TIMER REC" or "TIMER PLAY" disappear from the display.
- The preset settings remain until you reset them.
- As long as the  indication appears in the display, the player is in timer mode.

6 Set the timer to the hour and the minutes you want to stop recording. (Do as step 5.)

7 Turn the jog dial to set the volume you want, and press **ENTER•YES**.



8 Press **STANDBY**.

"TIMER REC" is displayed, and the player enters the standby mode.

At the preset time, the power will go on and the recording will start. Then the power will go off at the preset time, and the player will enter the standby mode again.

To check/change the recording timer settings

Press **TIMER**, then press **ENTER•YES**. Each time you press **ENTER•YES**, a stored setting is displayed in the set order. To change the setting, display the setting you want to change and re-enter it.

To use the player before a timer-recording starts

If you turn on the player, you can use it as usual (in case of the radio, if you listen to the station which is different from the one you tuned in step 1 on page 46, you will hear that station at the preset time.) Turn off the player before the preset time.

To stop timer-recording

Turn off the power.