

 
JVC

PORTABLE MINIDISC PLAYER

ENGLISH



MDLP

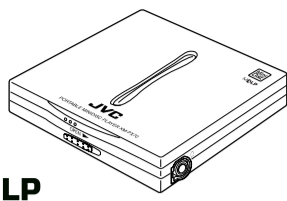

XM-PX70WT
XM-PX70BU
XM-PX70PN

* This unit has been manufactured with great precision. Applying a strong shock to the unit or dropping it may cause a failure: For example, if you sit down with the unit into a back pocket of your trousers, it may exert the pressure upon the unit and may cause a failure.

LVT0592-001B [UB]


INSTRUCTIONS

Supplied Accessories

Check the packing carton for these accessories.

- | | |
|---------------------------------------|--|
| AC adaptor (AA-R9025) 1 pc. | Rechargeable nickel metal hydride battery (BN-R1210) 1 pc. |
| Headphones 1 pc. | Carrying pouch 1 pc. |
| Wired remote control 1 pc. | |
| Charger/adaptor (AC-R124) 1 pc. | |
| Dry-cell battery case 1 pc. | |

 *Use numbers indicated in parentheses when asking for replacement parts.

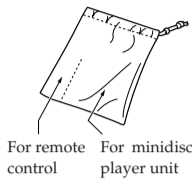

For remote control For minidisc player unit

Thank you for purchasing this JVC product. Please read these instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from your minidisc player.

CAUTION!
THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION:
AC adaptor (AA-R9025), Charger/Adaptor (AC-R124) and rechargeable Ni-MH battery (BN-R1210 and BN-R127) are audio equipments for XM-PX70 only.

* MDLP features a new sound compression method (ATRAC3) and a 2 times (or 4 times) long-hour stereo recording and playing function. The MDLP logo is marked on the MD recorders and players compatible with MDLP. It is also marked on MDs prerecorded in ATRAC3 (excluding recordable MDs).

* Do not block the ventilation opening or holes. (If the ventilation openings of holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.) Do not place any naked flame sources, such as lighted candles, on the apparatus. When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly. Do not use this apparatus in a bathroom or places with water. Also do not place any containers filled with water or liquids (such as cosmetics or medicines, flower vases, potted plants, cups, etc.) on top of this apparatus.

CLASS 1
LASER PRODUCT

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

CAUTION: Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)

 
VARO: Avattaessa ja suo-jalukitus ohitettaessa olet alttina näkyttömälle lasersäteilylle. Älä katso säteeseen. (f)

WARNING LABEL, PLACED INSIDE THE UNIT


Power Supply Preparations

Using the rechargeable Ni-MH battery (included)


- 1 Remove the rechargeable battery from its case.
- 2 Insert the rechargeable battery into the charger/adaptor.

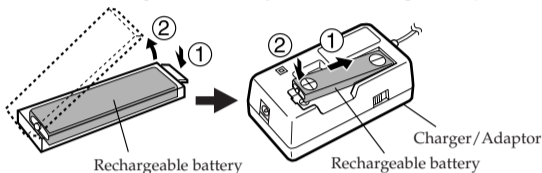

 - 3 Set the switch on the charger/adaptor to "CHARGER".
- 4 Connect the AC adaptor to the charger/adaptor.

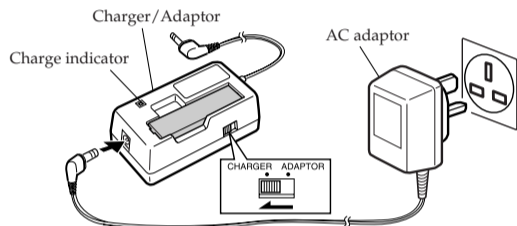

 - 5 The charge indicator will initially light in red. It will go out when recharging is completed. When recharging is complete, unplug the AC adaptor from the AC outlet and the charger/adaptor.
- 6 Remove the recharged battery from the charger/adaptor and insert it into the minidisc player.

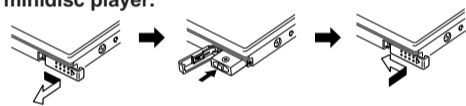

Slide the cover and open it. Insert the battery with its positive terminal facing out. Firmly close the cover.

Notes:

 
- You cannot use the minidisc player while charging the rechargeable battery.
 - It takes approximately 2 hours to recharge the rechargeable battery.
 - The rechargeable battery has a service life of approximately 300 charge-discharge cycles. If the operating time on one full charge becomes noticeably shorter than it used to be, the battery has reached the end of its service life and should be replaced.
 - The AC adaptor and rechargeable battery may become warm while recharging. This is not a malfunction.
 - When recharging the rechargeable battery which was left unused for a long time, the charge indicator may not light immediately. It will light in a few minutes.
- Refer to the specifications for information on operating time durations when using a rechargeable battery, dry-cell battery, a or both together.

Using the AC adaptor


CAUTION: Be sure there is no rechargeable battery in the minidisc player.

- 1 Attach the battery case to the minidisc player.

Turn the knob on the battery case toward "LOCK" until it stops. (To detach the battery case, turn the knob toward "RELEASE" until the battery case comes loose.)

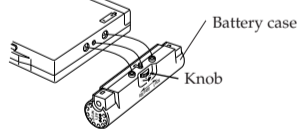

 - 2 Set the switch on the charger/adaptor to "ADAPTOR".
- 3 Connect the AC adaptor to the charger/adaptor, and the charger/adaptor to the battery case.

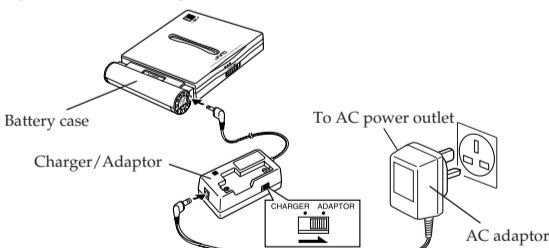

Notes:

- The minidisc player is in standby mode when the AC adaptor and charger/adaptor are connected.
- The primary circuit is "live" as long as the AC adaptor is connected to an electrical outlet.

Maintenance

Unit:

Wipe the unit and remote control with a soft cloth. Remove stubborn dirt using a cloth which has been dipped in water (or soapy water) and wrung out. Then wipe them dry.

- If you intend to use a chemically treated cleaning cloth, read its directions first.
- Do not use alcohol or paint thinners.

MDs:

If the MD cartridge is dirty wipe it with a damp cloth and then wipe dry.



 
- When storing MDs, avoid locations which are
- Exposed to direct sunlight.
 - Susceptible to high levels of humidity or dust.
 - Directly exposed to heat from a heating appliance.
 - On top of a car dashboard or near the rear window.

Handling the MDs

- Do not open the shutter. The shutter is usually locked to prevent opening. Do not force it to open, or the disc may be destroyed.

Using a dry-cell battery (not included)

- 1 Open the lid of the battery case and insert a LR6 (UM-3) alkaline battery into the battery compartment.
- 2 Attach the battery case to the minidisc player. (See "Using the AC adaptor".)

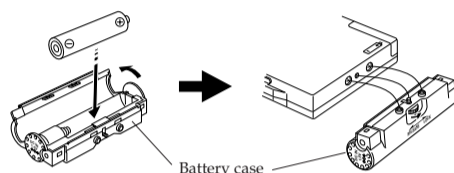


Note:

- To lengthen battery life, you can use both the rechargeable battery and a dry-cell battery at the same time.

Accidental Operation Prevention Function (Hold Mode)


This function prevents the minidisc player from operating accidentally. Both minidisc player and remote control have HOLD switches to set in HOLD mode, each of which works independently.

 [Unit (Bottom view)]

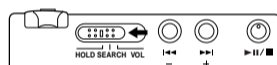

- Slide the HOLD switch in the direction shown by the arrow to activate it.

 [Remote control]

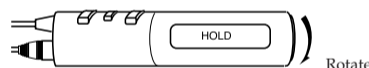

- Rotate the remote control switch in the direction shown by the arrow to set the remote control in HOLD mode.

In HOLD mode, no button operation is possible.

To operate the minidisc player or remote control normally, switch off the HOLD mode.

Cautions

Batteries

- Before replacing batteries, always turn the minidisc player off. Otherwise, the settings you have made will be changed.

Rechargeable Ni - MH battery :

- Use only the rechargeable battery BN-R1210 (supplied) or BN-R127 (not supplied) with this minidisc player.
- If the power delivered by the battery lasts for a very short time after recharging, it means that the battery's service life is over. Do not use it any more.
- Recharging an already charged battery will shorten its service life.
- When recharging a battery for the first time, or when it has not been used for a long period of time, the play time may be shorter than usual. In a case like this, repeatedly recharge and discharge the battery. This will restore it to its regular state.
- Do not allow any metal objects to touch the terminals of the rechargeable battery because this may cause dangerous short-circuiting.
- Recharge the battery at a temperature of 10°C to 35°C.
- Do not charge for more than 15 hours. Overcharging will shorten battery life.
- Charge at least once every 6 months when not using for long periods of time, to avoid a drop in battery recharging performance

Dry cell battery and rechargeable battery:

To prevent damage to the batteries, and to avoid electrolyte leakage, heed the following instructions.

- Align the ⊕ and ⊖ polarities properly when inserting the batteries.
- Remove the batteries if you do not plan to use the minidisc player for a long period of time.
- Do not expose the batteries to open flame, and do not short-circuit, disassemble, or subject them to excessive heat.
- Do not attempt to recharge dry cell batteries.

Carrying batteries:

- When putting dry cell or rechargeable batteries in a pocket or bag, ensure that no other metal objects, such as necklaces or coins, are placed together with them. Contact with metal may cause short-circuiting which, in turn, may cause a fire.
- Be absolutely sure to carry the rechargeable battery in the battery carrying case.

Recycling Notice

 
The rechargeable battery is designated recyclable.
Please follow your local recycling regulations.

AC adaptor and charger/adaptor


- Handle the AC adaptor and charger/adaptor carefully. Improper handling is dangerous.
 - Do not touch them with wet hands.
 - Do not place heavy objects on top of them.
 - Do not forcibly bend them.
- Be sure to use only the AC adaptor and charger/adaptor provided with this minidisc player.
- Disconnect the AC adaptor from the power outlet if the unit is not going to be used for a long time.

Location of Controls


[Minidisc Player Unit]

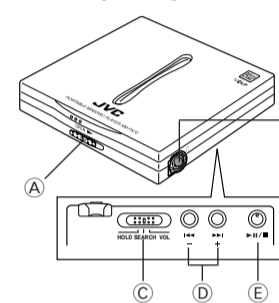

[Remote Control]

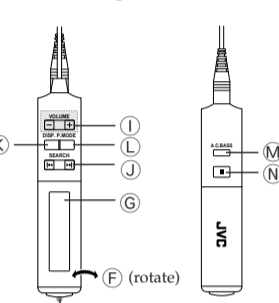 

 
[Indicators on the remote control display]

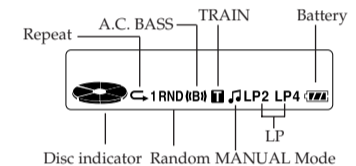

- | | |
|--|---|
| <ul style="list-style-type: none"> A OPEN knob B Headphones jack (⌚) C HOLD / SEARCH / VOL (Volume) Mode switch D Volume and Skip / SEARCH button (+, -, ⏪, ⏩) E Play / Pause / Stop button (▶ /■) F HOLD switch G Display | <ul style="list-style-type: none"> H Play / Pause button (▶) I VOLUME button (+, -) J Skip / SEARCH button (⏪ ⏩) K DISP. (Display) button L P.MODE (Play mode) button M A.C. BASS (Active Clear Bass) button N Stop button (■) |
|--|---|

If the rubber holder on the remote control clip comes off

 Insert the clip into the rubber holder, then rotate the clip.

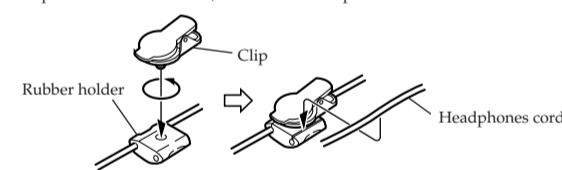

Minidisc Player Unit

- Do not alter or remodel the unit as this can cause malfunctioning.
- Do not alter or impact the unit as this may damage it.
- Avoid using the unit in the following locations since they can cause malfunctioning.
 1. Bathrooms and other moisture-prone places.
 2. Warehouses and other dusty places.
 3. Very hot places near heating appliances, etc.

- Do not leave the unit exposed to direct sunlight for long periods of time as this may deform or discolor the cabinet and may also cause malfunctioning.

Precautions for listening with the headphones

- Do not play your headset at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ears, reduce volume or discontinue use.
- Do not use while operating a motorized vehicle. It may create traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations.
- Even if your headphones are an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

 
When driving a car

- In the interest of traffic safety, do not use the minidisc player while driving a vehicle.

Battery Indicator

The battery indicator appears on the remote control display. When the indicator appears as below, power will be shut off a short while after.

Rechargeable battery: Recharge it.

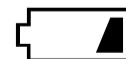

Dry-cell battery: Replace it with new one.

 
Note:

- While "No Disc" in displayed, the battery indicator does not changed. Actual indication will be mode when an MD is inserted.

Follow the numbers in the figure to the right.

- 1 Connect the headphones plug firmly.**
- 2 Connect the remote control plug firmly.**
The unit might turn on. However, when you leave the unit as it, it will automatically turn off.
- 3 Make sure the switches on the unit and remote control are not on HOLD setting.**
- 4 Load an MD.**
 - Slide the OPEN knob to open the lid.
 - Open the lid by hand.
 - Insert the MD into the MD slot beneath the lid, with its label side facing up. Insert the MD until it stops. Be sure the Δ or \Rightarrow mark on the MD aligns as shown in the figure.
 - Close the lid.

"HELLO" appears on the remote control display. Then the track number and playback time appear after "T. READ" has gone out.
- 5 Adjust the volume level between 0 and 25.**
Press the Volume (+, -) button on the unit or the remote control.
- 6 After "HELLO" disappears, press the $\blacktriangleright/\parallel$ button on the remote control or the $\blacktriangleright/\parallel$ button on the unit.**
Playback starts from the first track and ends after playing all the tracks on the MD.

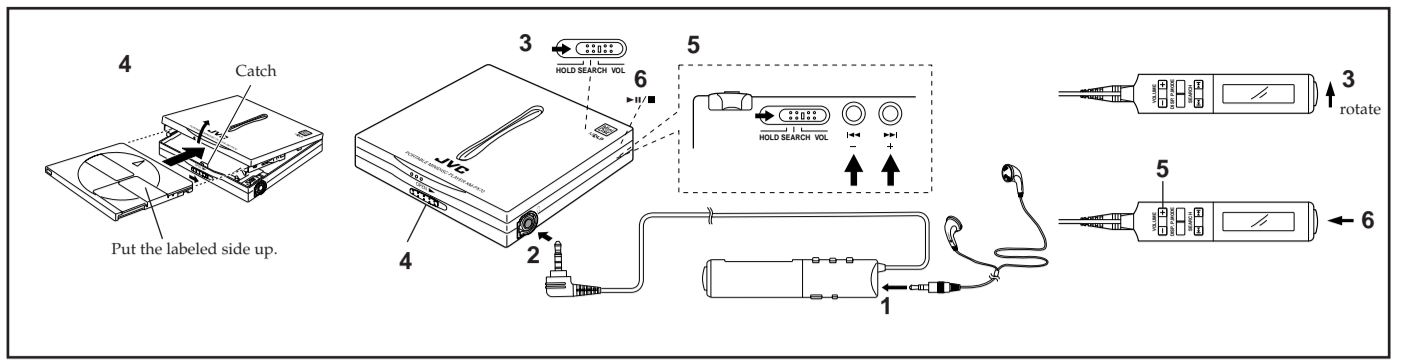


- To eject the MD, slide the OPEN knob and open the lid by hand. The MD will then come out.
- When the remote control is connected, the power may automatically turn on. However, if left as it is, it will eventually turn off automatically.
- This MD Player has a 40 second (SP mode) sound-skip-guard memory function to accommodate any shocks. Consequently, it can be used while walking.

Stereo long-hour playback

The unit supports MDLP. So the unit can play any MD recorded in SP, LP2 or LP4 mode. When a MD recorded in LP2 or LP4 mode is played, "LP2" or "LP4" indicator lights up on the display. ("SP" is not displayed.)

 - SP : Standard stereo playback (Max. 80 minutes in MD 80)
- LP2 : 2 times long-hour playback (Max. 160 minutes in MD 80)
- LP4 : 4 times long-hour playback (Max. 320 minutes in MD 80)
- MDs recorded by the MD recorder that do not support MDLP are played in standard (SP) mode.

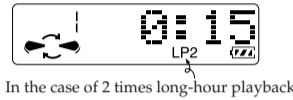

In the case of 2 times long-hour playback

 
Resume Play

This function allows you to listen from the beginning of the track on which play was stopped when the minidisc player was set to Stop mode.

Press the $\blacktriangleright/\parallel$ (or $\blacktriangleright/\parallel$) button.

Showing the Disc Information

Each time you press the DISP. button while in Stop mode or during playback, the MD's information is displayed as follows.

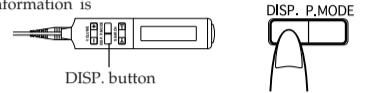


In Stop mode:

Disc title* \rightarrow Total number of tracks and total playback time of the MD \rightarrow Track title* \rightarrow Playback time \rightarrow (back to the beginning)

During Playback:

Playing time \rightarrow Track title* \rightarrow (back to the beginning)

 *The disc title or track title will scroll if it consists of 7 characters or more. If no title is given, "♪~" appears on the display. (Up to 80 characters can be displayed.)

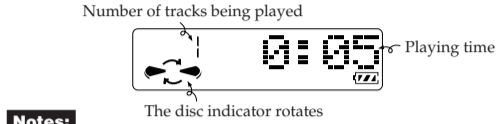

Notes:

- Insert the MD in the way that it will not touch the catch. If the catch is bent for some reason, the lid may not be closed properly.
- When opening the lid, please hold it by the edge when an MD is already loaded.
- If no MD is loaded, "No Disc" appears on the display, and the power will automatically shut off after approx. 10 seconds.
- If the track has a title, the title will appear first.

Operation	Button	Display/Reference
To pause play	[Unit] or [Remote control]	Blinks Press again to restart play. If paused for 2 minutes, the power will automatically shut off.
To stop play (Stop mode)	[Unit] or [Remote control]	Stops Press the $\blacktriangleright/\parallel$ (or $\blacktriangleright/\parallel$) button again to restart play (Resume Play). The current track will be played from the beginning (see "Resume Play"). If stopped for 45 seconds, the power will automatically shut off. When all the music is played, the MD player automatically stops.
To turn off the unit (Off mode)	[Unit] or [Remote control]	BYE The power is shut off after "BYE" appears on the display. To turn on the unit, press the $\blacktriangleright/\parallel$ (or $\blacktriangleright/\parallel$) button. (Blank)

Operation	Button	Display/Reference
Fast forward/Reverse	[Unit] [Remote control]	Skip function Press during play back or while in Stop mode. Search function Keep depressed during play.
	[Unit] [Remote control]	

Repeat Play and Random Play

You can select either Repeat Play or Random Play. In Repeat Play, you can repeat all the tracks, or an individual track, as many times as you like. In Random Play, you can play all the tracks in random order.

Selecting Repeat Play and Random Play in Stop mode

In Stop mode, press the P.MODE button. Each time you press the button, the play mode changes as follows:

- \square 1 \rightarrow \square 1 \rightarrow RND \rightarrow \square 1 RND \rightarrow \square RND \rightarrow Original display \rightarrow (back to the beginning)
- \square 1 : Repeats 1 track.
- \square : Repeats all the tracks.
- RND : Random play
- \square 1 RND : Repeats one track randomly selected.
- \square RND : Repeats all the tracks in random order.

After selecting one of the above modes, press the $\blacktriangleright/\parallel$ (or $\blacktriangleright/\parallel$) button.

To exit Repeat Play or Random Play, stop the MD and then press the P.MODE button until the display returns to its original setting.

Repeat Play during Playback

During Normal Play:

Each time you press the P.MODE button, the play mode changes as follows:

- \square 1 \rightarrow \square \rightarrow Original display \rightarrow (back to the beginning)

Select " \square 1" to repeatedly play the current track. Select " \square " to repeat all the tracks.

During Random Play:

Each time you press the P.MODE button, the play mode changes as follows:

- \square 1 RND \rightarrow \square RND \rightarrow Original display \rightarrow (back to the beginning)

Select " \square 1 RND" to repeatedly play a randomly selected track. Select " \square RND" to repeat all the tracks in random order.

To exit Repeat Play or Random Play, stop the MD and then press the P.MODE button until the display returns to its original setting.

Troubleshooting Guide

Before requesting service for this minidisc player, check the chart below for a possible cause of the problem you are experiencing. Some simple checks, or a minor adjustment on your part, may eliminate the problem and restore proper operation.

If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this minidisc player), or consult your dealer for instructions.

Problem	Check this
Does not operate.	Is the MD loaded? If unloaded, "No Disc" will appear on the display.
Cannot play the MD.	<ul style="list-style-type: none"> Is the HOLD switch released? Is the battery low? Is there moisture condensation on the lens? (Wait for about an hour and then try again.)
Tracks on MD do not play in order, starting with the first track.	<ul style="list-style-type: none"> Is the Repeat Play or Random Play selected? You stopped or turned off the power while playing. It changed to Resume Play.
Cannot hear music—too noisy.	<ul style="list-style-type: none"> Is the headphone plug inserted all the way? Is the plug dirty? (Wipe away dirt on the plug.) Is music recorded on the MD? If not, "BLANK" will appear on the display.
TV picture is distorted. Radio reception is noisy.	<ul style="list-style-type: none"> Is the unit too near a TV or tuner? (If the TV or tuner is connected to a simple indoor antenna, connect it to an outdoor antenna.)
Power is not turned on.	<ul style="list-style-type: none"> With both HOLD switches activated, the battery was changed during playback. (Release both HOLD switches and try to operate again.)
Charging indicator does not light during charging.	<ul style="list-style-type: none"> Is the charger too hot? (If so, disconnect the AC adaptor and leave the charger for a while.)

MD Messages:

Messages	Meaning	Action
DISC ERROR	There is a problem (damage) with the disc.	Replace the disc.
READ ERROR	Cannot read data.	Remove the MD and reinsert it.

 
Selecting the Operational Options of Remote Control

Muting the pip tone

When you press a button on the remote control except for the A.C.BASS and VOLUME (+, -) buttons, a pip tone is emitted.

To mute the pip tone, while pressing the A.C.BASS button in Stop mode or during playback, press the P.MODE button. "BEEP OFF" appears on the remote control display.


To resume the pip tone, do the same operation again. "BEEP ON" will appear on the display.

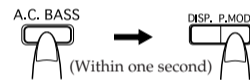

Changing the display character contrast

The character display contrast can be adjusted when the characters become less clear due to ambient temperature or during scrolling.

 While pressing the A.C.BASS button in Stop mode or during playback, press the SEARCH button. Adjustment can be made between LCD00 and LCD15. While the SEARCH button is pressed, the contrast will be changed continuously. The initial setting is "LCD07."

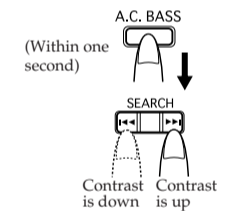


Using the Minidisc Player with Optional Accessories

Using the minidisc player with an audio system

You can listen to MDs through your audio system.

 - After turning off the amplifier, plug a stereo connection cable (not supplied) into the headphones jack as shown below.
- Adjust the volume of the minidisc player to an appropriate level.
- Adjust the volume level on the amplifier.
- Use the unit's buttons for operation. (The remote control will issue a Pip tone.)

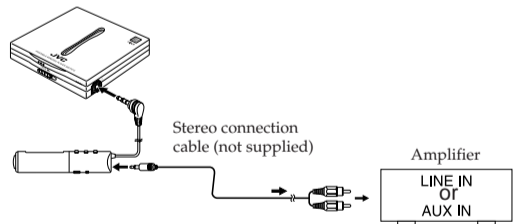


Using the minidisc player with a car audio system

- Direct connection without passing through the remote control may generate noise.
- Connect the car adaptor to the battery case as shown below.
- Connect the car audio cassette adaptor to the remote control headphone jack. The other end connects to the cassette slot of your car.
- Adjust the volume level of the unit to an appropriate level.

CAUTION: Before connecting the car adaptor, remove the rechargeable battery from the unit and the alkaline battery from the battery case.

 - Connect the car adaptor to the battery case as shown below.
- Connect the car audio cassette adaptor to the remote control headphone jack. The other end connects to the cassette slot of your car.
- Adjust the volume level of the unit to an appropriate level.

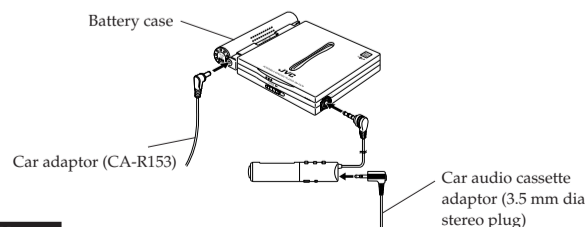


Notes:

- Since the insertion direction of the car audio cassette adaptor is limited, be sure that it can be inserted into the cassette slot of your car audio system.
- Depending on the vehicle used, noise may occur. In this case, it is recommended to connect a noise filter (available on the market) between the remote control and the car audio cassette adaptor.
- If your car audio system is equipped with a LINE IN or AUX IN jack, you can connect the output of the remote control to the jack using a stereo mini plug signal cord (not supplied). In this case, you do not need the optional car audio cassette adaptor.

Changing the Sound (A.C.BASS)

 Each time you press the A.C.BASS button, the sound mode name and the indicator shown on the display change as follows:

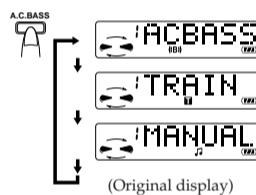


- (B) ON: The A.C.BASS (Active Clear Bass) function is enabled and the bass level is automatically controlled in conjunction with the sound volume.
- T ON: The amount of sound leaking from the headphones will be reduced.
- M ON: You can use the adjusted tone. To adjust the tone, see "Adjusting Tone in MANUAL Sound Mode".

To cancel every function, press the A.C.BASS button until the display returns to the original one.

Adjusting Tone in MANUAL Sound Mode

You can adjust the tone by changing the bass and treble.

 - Press the A.C.BASS button until "MANUAL" (M) appears on the display. (If the indicator is already lit, you can skip this step.)
- Press the A.C.BASS button for 2 seconds or more within 8 seconds. The following tone level meter appears.

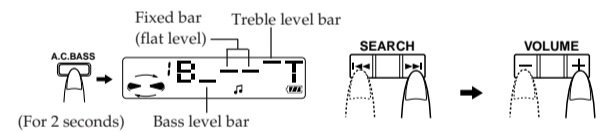

- To change the bass level, press the button. The bass level bar blinks. Then, press the VOLUME + or - button within 16 seconds to move the bass level bar up or down (in 3 steps each).

To change the treble level, do the same except for pressing the button. The tone level set here is stored in memory.

To exit tone adjusting mode, wait until the display automatically returns to the original one, or press the A.C.BASS button until the display returns to the original one.

Specifications

Portable MINIDISC player

- Type : Minidisc digital audio system
- Sampling frequency : 44.1 kHz
- Audio compression system : ATRAC/ATRAC 3 (MDLP)
- Number of channels : 2 channels (stereo)
- Frequency response : 20 Hz to 20 000 Hz
- Wow & flutter : Unmeasurable
- Output : Headphone (3.5 mm dia. stereo \times 1) 5 mW/ch at 10% THD/16 ohms to 47 kohms

Duration of battery:

Volume level: VOL 12	Continuous playback time*		
	SP mode	LP2 mode	LP4 mode
Rechargeable battery (BN-R1210)	25 hours	31 hours	36 hours
Rechargeable battery (BN-R127)	22 hours	28 hours	32 hours
Alkaline battery (LR6)	42 hours	52 hours	60 hours
BN-R1210 + LR6	70 hours	86 hours	100 hours

* Approx. playback time is listed. The time may differ depending on the ambient temperature, usage condition, battery manufacture, kind of battery, etc.

Power requirements : DC 1.2 V (rechargeable battery), DC 1.5 V (R6 size battery) DC IN 1.5 V

Dimensions (L \times W \times H) : 78 mm \times 14.6 mm \times 71 mm (Excluding buttons and controls)

Mass : Approx. 57 g (without battery)

AC adaptor (AA-R9025)

- Input power source : AC 230 V, 50 Hz
- Output voltage : DC 9 V, 0.5 A

Charger/adaptor (AC-R124)

- Input power source : DC 9 V, 0.5 A
- Output voltage : DC 1.5 V, 0.7 A

Design and specifications are subject to change without notice. US and foreign patents licensed from Dolby Laboratories Licensing Corporation.