



Repair Tips

SUBJECT: dead unit

DATE: SEPT/2002

MODEL (S): MZ-N505

Symptom: Unit stuck partway into record mode, preventing the door latch from clearing the record half-lock switch S805.

Solution: Fault was caused by an intermittent LCD Module that randomly turned off the power to the unit (e.g. in record mode)

LCD MODULE - 1-804-545-11

Submitted By : Brian Street, PHD Electronics, BC /wd

Sony of Canada Ltd.

115 Gordon Baker Road, Toronto, Ontario M2H-3R6
NATIONAL LAB – AVIT