

MDS-S707

SERVICE MANUAL

*US Model
Canadian Model
AEP Model
UK Model*

Model MDS-S707 is almost same as MDS-S38.
As only the difference from MDS-S38 is described in this manual,
please refer to MDS-S38 service manual (9-960-934-□□) for the
information not contained in this manual.

NOTE:

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Abbreviation
CND: Canadian
G : German

REPAIR PARTS LIST for EXPLODED VIEWS

Page	MDS-S38			MDS-S707		
	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
74	* 1	4-990-703-21	CASE	* 1	4-900-196-31	CASE (AEP,UK,G)
	2	3-363-099-01	SCREW (CASE 3 TP2)	* 1	4-990-703-51	CASE (US,CND)
	* 3	A-4699-714-A	MAIN BOARD COMPLETE (AEP,UK)	2	3-363-099-11	SCREW (CASE 3 TP2)
	* 3	A-4699-717-A	MAIN BOARD COMPLETE (US,CND)	* 3	A-4724-256-A	MAIN BOARD COMPLETE (AEP,UK,G)
	4	1-782-264-11	WIRE (FLAT TYPE)(19 CORE)	* 3	A-4724-243-A	MAIN BOARD COMPLETE (US,CND)
	* 8	4-989-525-11	PANEL, BACK (US)	4	1-782-264-11	WIRE (FLAT TYPE)(19 CORE)(US,CND)
	* 8	4-989-525-21	PANEL, BACK (CND)	1-782-966-11	WIRE (FLAT TYPE)(19 CORE)(AEP,UK,G)	
	* 8	4-989-525-31	PANEL, BACK (AEP)	* 8	4-210-612-01	PANEL, BACK (US)
	* 8	4-989-525-41	PANEL, BACK (UK)	* 8	4-210-612-11	PANEL, BACK (CND)
	△ 15	1-575-651-91	CORD, POWER (AEP)	* 8	4-210-612-21	PANEL, BACK (AEP,UK,G)
	△ TR001	1-431-253-11	TRANSFORMER, POWER (AEP,UK)	△ 15	1-751-275-11	CORD, POWER (AEP,G)
75	51	X-4948-320-2	PANEL ASSY, FRONT (US,CND)	△ TR001	1-431-253-21	TRANSFORMER, POWER (AEP,UK,G)
	54	4-989-520-01	KNOB (REC)	51	X-4950-150-1	PANEL ASSY, FRONT
	55	4-989-519-01	KNOB (AMS)	54	4-989-520-21	KNOB (REC)
	56	4-989-518-01	KNOB (HP)	55	4-989-519-21	KNOB (AMS)
	57	4-989-517-01	KNOB (INPUT)	56	4-989-518-21	KNOB (HP)
	58	4-989-516-01	KNOB (TIMER)	57	4-989-517-21	KNOB (INPUT)
	△ 62	A-4699-715-A	PANEL BOARD, COMPLETE (AEP,UK)	58	4-996-664-01	KNOB (TIMER)
	△ 62	A-4699-718-A	PANEL BOARD, COMPLETE (US,CND)	△ 62	A-4724-257-A	PANEL BOARD, COMPLETE (AEP,UK,G)
	64	4-989-515-21	BUTTON (EJECT)	△ 62	A-4724-244-A	PANEL BOARD, COMPLETE (US,CND)
FL701	1-517-575-11	INDICATOR TUBE, FLUORESCENT	64	Not supplied		
76	△ 204	4-987-736-01	SHAFT (SHUTTER)	FL701	1-517-768-11	INDICATOR TUBE, FLUORESCENT
	205	X-4947-825-1	SHUTTER ASSY	204	4-997-456-01	SHAFT (SHUTTER)(A)
				205	X-4949-900-1	SHUTTER ASSY

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

MINIDISC DECK



SONY®

NOTE:

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Abbreviation
 CND: Canadian
 G : German

ELECTRICAL PARTS LIST

		MDS-S38		MDS-S707		
Page	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
80	*	A-4699-714-A	MAIN BOARD COMPLETE (AEP,UK)	*	A-4724-256-A	MAIN BOARD COMPLETE (AEP,UK,G)
	*	A-4699-717-A	MAIN BOARD COMPLETE (US,CND)	*	A-4724-243-A	MAIN BOARD COMPLETE (US,CND)
83	*	A-4699-715-A	PANEL BOARD, COMPLETE (AEP,UK)	*	A-4724-257-A	PANEL BOARD, COMPLETE (AEP,UK,G)
	*	A-4699-718-A	PANEL BOARD, COMPLETE (US,CND)	*	A-4724-244-A	PANEL BOARD, COMPLETE (US,CND)
	FL701	1-517-575-11	INDICATOR TUBE, FLUORESCENT	FL701	1-517-768-11	INDICATOR TUBE, FLUORESCENT
84		ACCESSORIES & PACKING MATERIALS *****			ACCESSORIES & PACKING MATERIALS *****	
		1-473-785-11	REMOTE COMMANDER (RM-D8M)		Not use	
		1-776-263-11	CORD CONNECTION		1-558-271-11	CORD CONNECTION (AEP,UK,G)
		3-859-426-11	MANUAL, INSTRUCTION (ENGLISH,FRENCH,SPANISH)		3-862-832-21	MANUAL, INSTRUCTION (ENGLISH,FRENCH)(AEP,UK,G)
		3-859-426-21	MANUAL, INSTRUCTION (CHINESE,PORTUGUESE)(AEP)		3-862-832-31	MANUAL, INSTRUCTION (SPANISH,ITALIAN,PORTUGUESE)(AEP)
		3-859-426-31	MANUAL, INSTRUCTION (DUTCH,ITALIAN,GERMAN)(AEP)		3-862-832-41	MANUAL, INSTRUCTION (DUTCH,GERMAN)(AEP,G)
		3-859-426-41	MANUAL, INSTRUCTION (DANISH,FINNISH,SWEDISH)(AEP)			
		4-983-537-01	COVER, BATTERY (For RM-D8M)		Not use	