 


This section is extracted from instruction manual.

Location and Function of Controls


For details, refer to the pages indicated in ().

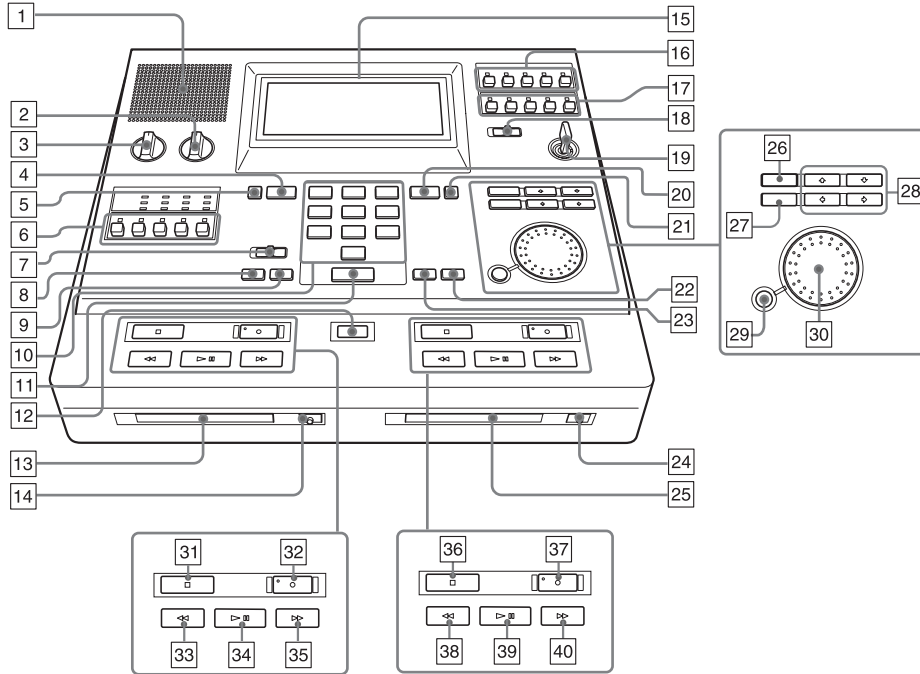

- | | |
|---|---|
| <p>1 Built-in speaker</p> <p>2 LCD CONTRAST control
Adjusts the contrast of the display.</p> <p>3 MONITOR VOL control</p> <p>4 DECK A button (17, 18)</p> <p>5 DISPLAY MODE A button (21)</p> <p>6 MONITOR select buttons (ALL/1/2/3/4)</p> <p>7 SEARCH selector (17, 18)
(INDEX SEARCH/TIME SEARCH)</p> <p>8 POINT SEARCH-POINT button (deck A) (20)</p> <p>9 POINT SEARCH-RESET button (deck A) (20)</p> <p>10 Number buttons</p> <p>11 SEARCH button (17, 18)</p> <p>12 INDEX button (14)</p> <p>13 MD insertion slot (deck A)</p> <p>14 ▲ EJECT button (deck A)</p> <p>15 LCD display</p> <p>16 LINE OUT 1 select buttons (ALL/1/2/3/4) (31)</p> <p>17 LINE OUT 2 select buttons (ALL/1/2/3/4) (31)</p> <p>18 PA/ADA selector (OFF/ON [ADA/PA]) (30)
Switches the output to the PA/ADA jacks on or off.</p> <p>19 STANDBY switch</p> | <p>20 DECK B button (17, 18)</p> <p>21 DISPLAY MODE B button (21)</p> <p>22 POINT SEARCH-RESET button (deck B) (20)</p> <p>23 POINT SEARCH-POINT button (deck B) (20)</p> <p>24 ▲ EJECT button (deck B)</p> <p>25 MD insertion slot (deck B)</p> <p>26 FUNCTION button</p> <p>27 DELETE button</p> <p>28 Arrow buttons</p> <p>29 ENTER button</p> <p>30 Jog dial</p> <p>31 ■ STOP button (deck A)</p> <p>32 ● REC button (deck A)</p> <p>33 ◀◀ REW/BS button (deck A)</p> <p>34 ▶▶ PLAY/PAUSE button (deck A)</p> <p>35 ▶▶▶ FF/FS button (deck A)</p> <p>36 ■ STOP button (deck B)</p> <p>37 ● REC button (deck B)</p> <p>38 ◀◀ REW/BS button (deck B)</p> <p>39 ▶▶ PLAY/PAUSE button (deck B)</p> <p>40 ▶▶▶ FF/FS button (deck B)</p> |
|---|---|


4 Introduction

 Left side

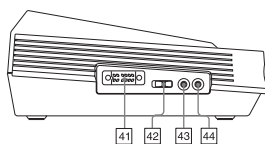


- 41 CONTROL UNIT connector (32)
- 42 TRANSCRIBE selector (33)
- 43 REMOTE jack (15)
- 44 EAR jack (16)

 Rear

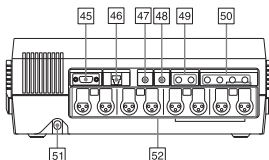

- 45 PC connector (RS-232C type)
- 46 DISPLAY connector
Used for connection of an external counter unit.
- 47 ADA jack
Allows the unit to be connected to a separately purchased amplifier system.
- 48 PA (public address) jack (30)
- 49 LINE OUT jacks
- 50 LINE IN jacks
- 51 DC IN 12V
- 52 Microphone connectors (Canon XLR-3-31 type)

 Display Window (Information screen)

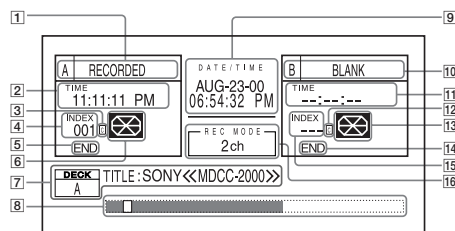


- 1 A: display (deck A)
Indicates the disc inserted in deck A or the status of deck A as follows:
BLANK: a blank disc
NO DISC: no disc
PB ONLY: a commercially available recorded disc (for playback only)
PROTECTED: a protected disc (3)
RECORDED: a recorded disc
- 2 TIME display (deck A)
Indicates the recorded time at the current location for each index item. It blinks during time search. (18)
- 3 (copied) display (deck A)
Indicates that a disc digitally copied with the Copy function is inserted. (26)
- 4 INDEX counter (deck A)
Lights up when a disc is inserted.
Blinks during an index search. (17)
- 5 END display (deck A)
This shows the end of the disc.
- 6 Disc status display (deck A)
Indicates the status of the disc with pictures.
- 7 DECK A/DECK B display
Indicates various data by characters and various error messages. (38)
- 8 Disc position display
Indicates the current playback/recording location on the disc by a white box. Already recorded parts are indicated in black. The further it is to the right, the closer the disc is to the end. Depending on the condition of the disc, the black part might not reach the far right even if the disc is full.
- 9 DATE/TIME display
Indicates the current date and time.
- 10 B: display (deck B)
Indicates the same contents as deck A.
- 11 TIME display (deck B)
- 12 (copied) display (deck B)
- 13 Disc status display (deck B)
- 14 END display (deck B)
- 15 INDEX counter (deck B)
- 16 REC MODE display
Indicates the recording mode (2ch/4ch) currently selected.

Setting the Date and Time

To record the date and time etc. on MiniDiscs when you record, be sure to set the Date and Time.

 
Setting the Date

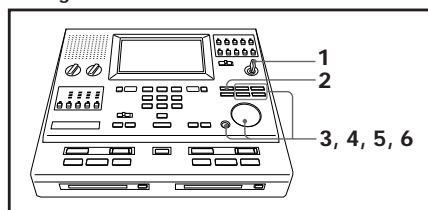

- 1 Insert the key and set it to ON.
You will see the initial screen in a few seconds.
- 2 Press FUNCTION.
- 3 Select CALENDAR,CLK using the jog dial or the arrow buttons, and press ENTER.
You will see the CALENDAR or CLOCK INPUT screen.
- 4 Select CALENDAR using the jog dial or the arrow buttons, and press ENTER.
You will see the SET MONTH (mmm) and DAY (dd) and YEAR (yy) screen with the name of a month blinking.
- 5 Set the month using the jog dial or \uparrow/\downarrow buttons, and press ENTER.
You will see "01" of the day blinking.
- 6 Set the day and the year in the same way as step 5.
When the year is set, the display will return to the information screen.

Note
You cannot use the \leftarrow/\rightarrow buttons when setting the month, day and year.

 Setting the Time

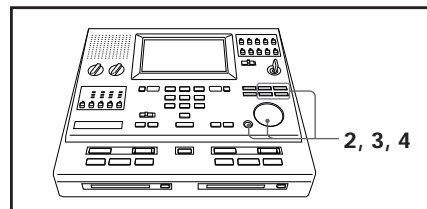

- 1 Carry out steps 2 and 3 of "Setting the Date".
You will see the CALENDAR or CLOCK INPUT screen.
- 2 Select CLOCK using the jog dial or the arrow buttons, and press ENTER.
You will see the SET HOUR (hh) and MINUTE (mm) screen with the hours and AM/PM blinking.
- 3 Set the hour using the jog dial or \uparrow/\downarrow buttons, and press ENTER.
You will see the minutes blinking.
- 4 Set the minutes in the same way as step 3.
The display will return to the information screen and the clock will start.

Note
You cannot use the \leftarrow/\rightarrow buttons when setting the hour and minute.