Portable MiniDisc Player

Operating Instructions





"WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products. Weyschman is

product in the USA

Owner's Record

For customers who purchased this

The model number is located at the top and the serial

lid. Record the serial number in the space provided

below. Refer to them whenever you call upon your

umber is located at the rear of the disc co

.... whenever you sony dealer regarding this product. Model No. MZ-E10 erial No.

Please register this product on line at www.sony.com/productregistration

http://www.sony.com/productregistration

Proper registration will enable us to send you periodic mailings about new products, services and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or

This equipment has been tested and found to

These limits are designed to provide reasonable

protection against harmful interference in a

generates, uses, and can radiate radio frequency

accordance with the instructions, may cause

harmful interference to radio communications

However, there is no guarantee that interference

will not occur in a particular installation. If this

radio or television reception, which can be

the user is encouraged to try to correct the

- Increase the separation between the

You are cautioned that any changes or

Lithium-ion batteries are

You can help preserve ou

vour used rechargeable

On this manual

are identical.

recycling location nearest you.

rechargeable batteries, call toll free

equipment and receiver.

nterference by one or more of the following

Reorient or relocate the receiving antenna

Connect the equipment into an outlet on a

- Consult the dealer or an experienced radio/

modifications not expressly approved in this manual could void your authority to operate this

RECYCLING LITHIUM-ION BATTERIES

For more information regarding recycling of

1-800-822-8837, or visit <u>http://www.rbrc.org/</u>

Caution: Do not handle damaged or leaking the

built-in lithium ion batteries

These operating instructions are written nainly for models outside of Japan. In the case of the model for use in Japan, the display

indications may differ slightly, but operations

circuit different from that to which the

nent does cause harmful interference to

ermined by turning the equipment off and on,

residential installation. This equipment

energy and, if not installed and used in

comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

Product registration

Information

MZ-E10



WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in

To prevent fire, do not cover the ventilation of the apparatus with newspapers, table- cloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

The use of optical instruments with this

product will increase eye hazard CAUTION — INVISIBLE LASER RADIATION WHEN OPEN


DO NOT STARE INTO BEAM OR VIEW

DIRECTLY WITH OPTICAL INSTRUMENTS


IN NO EVENT SHALL SELLER BE LIABLE FOR ANY DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM ANY DEFECTIVE PRODUCT OR THE USE OF ANY

Getting started

Before using the player for the first time, slide the BUILT-IN BATTERY switch on the side of the player to ON as shown below. Leave the switch in the ON position thereafter.

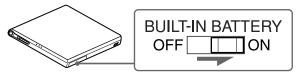

Charge the rechargeable battery.

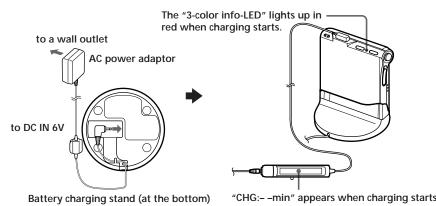

When the player is placed on the battery-charging stand, the "3-color info-LED" lights up in red and charging starts. The remaining charging time appears in the display on

 "3-color info-LED" color transitions: Red → Orange → Green → LED off
 Display on the remote control: "CHG:- - min" → "CHG:65min" (65 minutes to end of charging) → "CHG:64min" → → No display


The "3-color info-LED" and display on the remote control turn off after about one hour. At this point, the battery is about 80% charged. After two and half more hours, the battery will be fully charged.


For models supplied with the AC plug adaptor If the AC power adaptor does not fit the wall outlet, use the AC plug adaptor.

• It may take up to one minute for the LED or display indication to go on, depending on the battery condition (i.e., whether the built-in rechargeable battery is drained or not, etc.). • Charge the battery at a temperature of 0°C (+32°F) to +40°C (+104°F). The charging time may vary, depending on the surrounding temperature

Playback and other operations can be done on the player and the remote control while the


Make connections and unlock the controls.

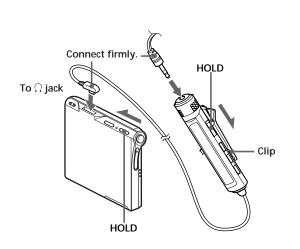


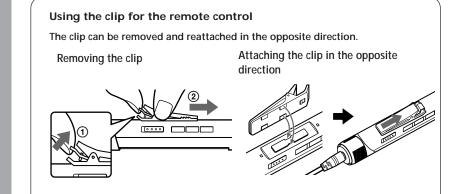

Playing an MD


1 Insert an MD.

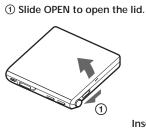

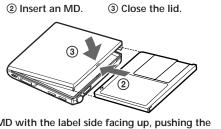

Insert an MD with the label side facing up, pushing the MD to the direction of the arrow in the illustration.

2 Play an MD.

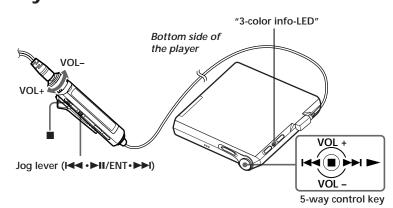

- ① Press the jog lever (►II) on the remote control. (Press towards ►►I ► on the player.)
- A short beep sounds in the headphones/earphones. The LED lights up. ② Turn the volume control towards VOL + or – on the remote control to adjust the volume. (Press towards VOL + or – on the player.) The volume indicator appears in the display, allowing you to check the

To stop play, press ■

volume level.

Playback starts from the point you last stopped playing. To start playback from the beginning of the disc, press and hold the jog lever () for 2 seconds or more on the

То	Do this (Beeps in the headphones/earphones)	
Pause	Press the jog lever (►II) on the remote control (continuous short beeps). Press the jog lever (►II) again to resume play.	
Cue to the current track or the previous track	Slide the jog lever towards ◄ on the remote control (three short beeps). (Press towards ◄ on the player.)	
Cue to the next track	Slide the jog lever towards ▶► on the remote control (two slibeeps). (Press towards ▶► on the player.)	
Go backwards or forward while playing	Slide and hold the jog lever towards ◄ or ► on the remote control. (Press and hold towards ◄ or ► on the player.)	
Searching for a specific position while viewing a elapsed time (Time search)	While the player is paused, slide and hold the jog lever towards I◀◀ or ▶▶I on the remote control.	
Searching for a specific track while viewing track numbers	While the player is stopped, slide and hold the jog lever towards or ▶▶ on the remote control.	

Cue to the beginning of Press \Box + or – button.

every 10th track (only during playback of the disc with no group

settings¹⁾) Press ■, and then slide OPEN²⁾. Remove the MD


 $^{1)}$ For more details, see "Using the group function." $^{2)}$ Once you open the lid, the point to start play will change to the beginning of the first track (except when the disc information has been stored in the personal disc me

About the "3-color info-LED"


The LED indicates the current operating mode, charging status, and battery condition. For details about the charging status, see "Getting started." For details about the battery condition,

see "When to recharge the built-in battery" on the back page.		
LED color	Operating status	
Red	Playing a disc with no group settings	
Green	Playing a disc with group settings	
Orange	Cueing to another group (Group Skip)	

► Various ways of playback

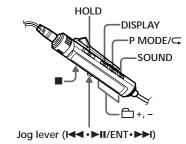

Bottom side of the player

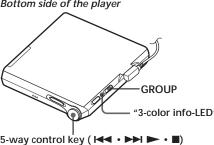

Selecting the play mode

You can select from the various play modes using the P MODE/ \subseteq button on the remote

Press P MODE/

□ repeatedly. Each time you press the button, the play mode changes as follows:

(Bookmark play) back in order of their

(program play) the order that you

letails, see "Using the group function."

Playing a track repeatedly

You can use the repeat function for normal

1 During playback in the selected play

Press and hold P MODE/\(\sigma\) for 2 seconds or

By pressing the P MODE/← button during

repeat play, you can change the play mode to be

"⊂" appears in the display

≌003 13:52

used with repeat play

mode, press and hold P MODE/⊊ for

Repeat play indication

play, single-track play, shuffle play, and

track number

specified.

* Group play mode () appears whenever you

(normal play)

(shuffle play)

(Repeat Play)

program play mode

(single-track play) once.

Listening to tracks in a desired Play mode indication sequence (Program Play)

2003	13:52	SHUF	1
`			
splay*	Play mode		_
one)	All the tracks a	are played	2

A single track is played

Bookmarked tracks play

All the tracks are played

The tracks are played in

Slide the jog lever repeatedly to sele track, and then press the jog lever to enter that track.		
	€ DDE KPGMO1	₹ÀGN(=

repeatedly until "PGM" appears in the

track number programmed sequence 3 Repeat step 2 to program more tracks.

You can program up to 20 tracks. After programming the tracks, press

The program is stored and playback starts from the first track.

The program play settings will remain in ven after playback finishes or is

All program settings are lost when the lid is

Listening to selected tracks Using the group function

You can bookmark tracks on a disc and play playback of discs with group settings. The them only. The sequence of bookmarked MDs on which several albums or CD singles have been recorded in MDLP (LP2/LP4)

The group function is provided to allow

The first track for bookmark play is set.

You can bookmark with up to 20 tracks

repeatedly until " TrPLAY?" appears

The bookmarked tracks start playing, starting with the smallest track number

While playing the track for which you want to

erase the bookmark, press and hold the jog

If you open the lid, all bookmarks are

2 Repeat step 1 to bookmark other tracks

To play the bookmarked tracks

2 Press the jog lever.

To erase a bookmark

lever for 2 seconds or more

tracks cannot be changed.


only (Bookmark play)

To bookmark the tracks **1** While playing the track you want to bookmark, press and hold the jog lever for 2 seconds or more. What is a disc with group settings? The player can play back tracks in units of

groups; that is tracks that have been recorded **₩**01/20 on a disc as part of separate groups, as shown The "3-color info-LED" lights up in green Flashing slowly when a disc with group settings is being

Before group settings are made

(normal play) Disc

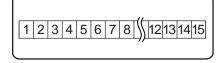

Track 1 to 5 are assigned to group 1. Track 8 to 12 are assigned to group 2. Track 13 to 15 are assigned to group 3 Track 6 and 7 are not assigned to a

After setting the group (group play)

	DISC	$\overline{}$
Group 1	Group 2	Group 3
12345 6	7 12345	123

Tracks that were not assigned to a group are treated as being part of "Group -

The player does not support the recording of group settings. Use an MD recorder to assign tracks to groups. For details, see "Registering

Playing a track in group play In group play, all groups are played in order

starting with group 1, followed by the

unassigned tracks ("Group - -"). Playback stops after all the tracks have been played

> display. Cueing to the start of a group

repeatedly until "appears in the

On the remote control

1 During playback, press ☐ + or -. Pressing the ☐ - button cues to the first track in the current group. Pressing the button again cues to the first track of the previous group. During group skip, the "3-color info-LED" on the player flashes

On the player

(Group Skip)

1 During playback, press GROUP. The "3-color info-LED" lights up in

2 Press **I** or **▶▶**I.

Selecting the play mode for group play (Group Play Mode)

The shuffle play and program play function can be used during group play mode.

After normal playback, the following play modes are displayed:

Display	Play mode
(Normal Group Play)	All tracks in the groups play back once (starting with the first track in group 1).
SHUF (In-Group Shuffle)	Shuffle play starts with the group that is currently playing, and continues with the succeeding groups.
PGM (Group Program)	The groups are played the order that you specified.

Repeat play for the selected Adjusting the sound group play mode (Group (Virtual-Surround • 6-Band Equalizer)

1 During playback in the selected group

P MODE/\$\infty\$ for 2 seconds or more

Playback repeats in the respective

Play mode

program

sequence (Group Program Play)

Playing groups in a desired

Do the procedure explained in "Listening to

tracks in a desired sequence (Program Play)'

sequence of tracks within the groups cannot

Registering groups using an

An MD recorder with the group function

An MD recorder that does not support the

The procedure below allows you to assign

tracks to a group using the disc name-editing

1 Change the disc name to the following

0;[Disc name] // [First track of group 1]-

[Last track of group 1]; [Name of group 1] //

by using the MD recorder:

[Name of group 2] //

A Disc name

Track number

named "Collections

Group name for tracks 1-7:

Group name for tracks 8-17:

Group name for tracks 18-24:

Group name for tracks 25-32:

1-7:My Favorites "2002winter" //

8–17:Jun&Tac"sunshine head"//

25-32;Dream World/Kiss Me!//

18–24;THE NIGHT BUTTERFLYS/

• The characters ";", "/", and "-" can be used in

You can register the same group name more

• You can specify a group without entering a group name (©) for it.

Up to 99 groups can be registered on a single MD. The actual number, however, will be less

than 99 if you have entered more characters

• Depending on the specifications of your MD

recorder, the group function may not work

than twice on the same MD.

han are allowed per disc.

Text string entered

a group name.

properly.

Separator between groups

track and the last track

Hyphen placed between the first

(Ex.) Set the following groups for the disc

My Favorites "2002 winter

Jun&Tac"sunshine head

THE NIGHT BUTTERFLYS

Separator between track number and

© Group name

Refer to the operating instructions of the MD

to play back groups in a desired sequence

You can program up to 10 groups. The

Repeat play of tracks

Repeat shuffle play of

tracks within a group

Repeat play for group

within a group

play mode, press and hold

group play mode.

□ SHUF ⊊

□ PGM ⊂

be changed.

MD recorder

group function

Specifying groups

You can vary the virtual sound to create different acoustics, or modify the sound to suit your taste and store it for later use. The following two effects can be selected V-SUR (Virtual-Surround VPT Acoustic Engine)


Provides 4 kinds of virtual-surround

6-BAND EQUALIZER Provides 6 different sound qualities

Varying the virtual sound to create different acoustics (Virtual-Surround)

- 1 During playback, press SOUND repeatedly to select "V-SUR." **2** Press and hold SOUND for 2 seconds
- **3** Slide the jog lever repeatedly to select



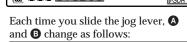

STUDIO V-SUR S LIVE v-sur L CLUB ARENA V-SUR A

4 Press the jog lever to enter the selected

Selecting the sound quality (6-Band Equalizer)

- **1** During playback, press SOUND repeatedly to select "SOUND."
- **2** Press and hold SOUND for 2 seconds

3 Slide the jog lever repeatedly to select [First track of group 2] - [Last track of group 2 the SOUND mode

₩ BB2 HEAVY Each time you slide the jog lever, A and **3** change as follows

HEAVY SOUND H POPS SOUND P JAZZ SOUND J UNIQUE SOUND U CUSTOM1 SOUND 1

SOUND 2

4 Press the jog lever to enter the selected SOUND mode

CUSTOM2

To cancel the procedure Press and hold the DISPLAY button or the button for 2 seconds or more


To cancel the setting Slide the jog lever repeatedly in step 1 above until the indication at **B** disappears

To modify and storing the sound You can customize the sound settings ir "CUSTOM1" and "CUSTOM2."

1 Do steps 1 to 3 above, and then slide the jog lever until "CUSTOM1" or "CUSTOM2" appears.

2 Press the jog lever.

3 Slide the jog lever repeatedly to select the

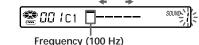

From the left, you can select 100 Hz, 250 Hz. 630 Hz. 1.6 kHz. 4 kHz. or 10 kHz Turn the volume control repeatedly to adjust the level

Level (+10 dB)

You can select from among seven

-10 dB, -6 dB, -3 dB, 0 dB, +3 dB,


5 Repeat steps 3 and 4 to adjust the level for

6 Press the jog lever to enter the selection.

► Other operations

Viewing the track name and playing time in the display on the remote control You can check the track or disc name, track

number, the elapsed playing time of the current track, the number of the tracks recorded on the MD, the group name, and the total number of tracks in a group. **(4)** ₿

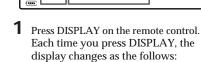

Track number The elapsed time Track number Track name The number of total Group name tracks in the group The number of Disc name total tracks Track number Sound mode

SP/LP mode

Track number

· Depending on whether group play or normal play is selected, the operating of the disc settings, you may not be able to selec certain indications or the indications ma appear different • During playback, the SP/LP mode appears

momentarily, and is then replaced by the elapsed time of the current track.

Suppressing the skips of the sound (G-PROTECTION) The G-PROTECTION function was developed

to provide a higher level of shock resistance than that of existing players in order to allow the player to be used while jogging.

The playback sound may skip if: the player receives stronger continuous
a dirty or scratched MiniDisc is played. —DISPLA



Starting playback quickly (Quick Mode)

- **1** Press and hold DISPLAY for 2 seconds
- **2** Slide the jog lever repeatedly until "OPTION" appears in the display, and
- **3** Slide the jog lever repeatedly until PowerMode" appears in the display, and then press the jog lever.
- 4 Slide the jog lever repeatedly until "QUICK" appears in the display, and then press the jog lever to enter the "QUICK" appears in the display

To cancel the procedure Press and hold the DISPLAY button or the

• When the power mode is set to "QUICK," the mains on within the player even whe nothing appears in the display. This leads to a shorter battery life. For this reason, it is ecommended that you charge the battery daily • If no player operation (including opening or closing of the lid) occurs for 17 hours, the power in the player automatically turns off. or this reason, the next time you start playback or do another operation, the player will not respond quickly. The unit, however will return to quick mode afterwards.

speed (Digital Pitch Control)

The speed control function is useful for language study and other purpose. Thi function changes the playback speed withou changing the playback pitch. The playback speed can be varied from +100% to -50% the normal speed, in 13 steps This procedure can be done by the remote

- DISPLAY for 2 seconds or more.
- USEFUL" appears in the display, and then press the jog lever. **2** Slide the jog lever repeatedly until "USEFUL" appears in the display, and Slide the jog lever repeatedly until
 - M-TIMER" appears in the display, and then press the jog lever
- **4** Slide the jog lever repeatedly until ON" appears in the display, and then press the jog lever. mode. Select the speed while listening (•) appears. the sound. |*₩00*}TIMER 15

€002DPC(+ 50%)

4 Slide the jog lever repeatedly to select the speed, and then press the jog lever

5 Slide the jog lever repeatedly to select Press and hold the DISPLAY button or the the melody, and then press the jog

You can select three kinds of sounds and set three different alarm settings. Alarm sound Classical music 1 "TIMER 2" Classical music 2

When using digital pitch control, you may hear

6 Slide the jog lever repeatedly to specify the desired time. Storing the settings for *警员:*TIME:01 individual discs

indication moves from "TIME:01" to "TIME:99" (1 minute to 99 minutes) in Settings can be memorized for a disc. Once one- minute intervals. memorized, "PERSONAL" appears in the display, the settings are recalled, and applied **7** Press the jog lever to enter the setting. whenever the disc is inserted.

To cancel the procedure Press and hold the DISPLAY button or the button for 2 seconds or more

"TIMER 3" Classical music 3

Each time you slide the jog lever, the

To check the remaining time until the alarm Stop playback. The remaining time will appear in the display after a short while steps 1 to 6 again to display the remaining time during play or play-pause

To cancel the alarm settings Select "OFF" in step 4 above.

To stop the alarm Press any button to stop the alarm

• If you end the procedure with step 4, the previous setting is automatically used. After sounding for 1 minute, the alarm will automatically stop and the alarm setting will be

canceled. If the alarm stops during stop mode, then the power will automatically turn off 10 seconds after the alarm stops. If the alarm stops while an MD is playing, the playback will

The timer will begin counting from the moment

(AVLS)

you select "ON" in step 4. When you change the alarm setting in step 6, timer will begin counting again with the new alarm setting Protecting your hearing

1 During playback, press and hold

appears in the display and the disc information is erased. If you try to erase the disc information of a AVLS (Automatic Volume Limiter System) function keeps down the maximum volume to disc that has never been stored, "No Entry!" appears in the display.

DISPLAY for 2 seconds or more. • Settings can be stored for up to 20 discs. Any settings stored thereafter will replace the **2** Slide the jog lever repeatedly until settings for the MD with the oldest playback "OPTION" appears in the display, and then press the jog lever. If you use another MD recorder to edit or add

tracks to a disc whose settings have been stored

on the player, the disc will no longer be

information will become useless.

Setting the alarm

The alarm is convenient way to remind

yourself of important times, such as when to

get off the train. The alarm can be set to go

1 Press and hold DISPLAY for 2 seconds

This procedure can be done by the remote

2 Slide the jog lever repeatedly until

(Melody Timer)

off in 1 to 99 minutes.

recognizable by the player and the stored

3 Slide the jog lever repeatedly until "AVLS" appears in the display, and then press the jog lever.

4 Slide the jog lever repeatedly until "AVLS ON" appears in the display and then press the jog lever to enter the

"AVLS ON" appears in the display

To set the AVLS function on the

During playback, slide HOLD in the direction of \triangleright , and then while pressing towards VOL -. slide HOLD in the opposite direction.

To cancel the AVLS function

On the remote control, select "AVLS OFF" in step 4 above and press the jog lever On the player, during playback, slide HOLD in the direction of ▶, and then while pressing towards VOL +, slide HOLD in the opposite

Turning off the beep sound

when the player and remote control are This procedure can be done by the remote

1 Press and hold DISPLAY for 2 seconds

2 Slide the jog lever repeatedly until "OPTION" appears in the display, and

then press the jog lever. **3** Slide the jog lever repeatedly until "BEEP" appears in the display, and then press the jog lever.

Slide the jog lever repeatedly until "BEEP OFF" appears in the display, and then press the jog lever to enter the selection. To cancel the procedure

Press and hold the DISPLAY button or the

button for 2 seconds or more To cancel the setting

Select "BEEP ON" in step 4 above

Turnina on/off the backlight in the display of the remote control

You can set the backlight in the display on the This procedure can be done by the remote

1 Press and hold DISPLAY for 2 seconds 2 Slide the jog lever repeatedly until "OPTION" appears in the display, and

then press the jog lever. **3** Slide the iog lever repeatedly until "Backlight" appears in the display, and then press the jog lever.

4 Slide the jog lever repeatedly to select one of the following settings:

Display	Setting
AUTO	The backlight lights when yoperate the player or the remote control, and automatically turns off who operation is made for a while (factory setting).
ON	The backlight lights while t player is operating.
OFF	The backlight stays off.

5 Press the jog lever to enter the setting.

Locking the controls (HOLD)

1 Slide HOLD on the remote control in the direction, and slide HOLD on the player in the ▶ direction. Sliding HOLD on the remote control disables the controls on the remote control. Sliding HOLD on the player disables the controls on the player.

To unlock the controls Slide HOLD to the opposite directions of the

Preserving battery power (Power Save Mode)

This function allows you to maximize the operating life of the battery. Power consumption is reduced by turning off the "3-color info-LED" at all times, or by turning off the display when no operation has been This procedure can be done by the remote

1 Press and hold DISPLAY for 2 seconds

2 Slide the jog lever repeatedly until "OPTION" appears in the display, and then press the jog lever.

3 Slide the jog lever repeatedly until "PowerMode" appears in the display,

You can set the beep so that it is not emitted

and then press the jog lever to enter the The "3-color info-LED" turns off.

To cancel the procedure Press and hold the DISPLAY button or the button for 2 seconds or more.

'PowerSave" appears in the display,

To turn on the "3-color info-LED" Select "NORMAL" in step 4 above

and then press the jog lever.

4 Slide the jog lever repeatedly until

▶Power sources

When to recharge the built-in battery

You can check the battery condition through the battery indicator on the remote control and the "3-color info-LED" on the player while using the player

Battery power decreasing Weak battery The battery has gone out

Indicator on the remote control

display, and the power goes of Indicator of the "3-color info-LED" on the The LED lights up. There is sufficient

"LOW BATT" flashes in the

battery power. The LED flashes slowly. Battery power

The LED flashes quickly. The battery is low The LED will soon supply of power will

• The battery indicator may show the battery to be fully charged even when it is not. Charging the battery shorter than the prescribed time wi result in a shorter operating time on the playe A stronger or weaker battery charge may be indicated when you fast forward or fast revers an MD, or when you use the player at a very

battery me	(Unit: Approx. hours) (JEITA ²		
Batteries	SP Stereo (normal)	LP2	LP4
Lithium-ion built-in rechargeable	23	33	40

Measured with the power save function on (see "Preserving battery power").

Measured in accordance with the JEITA (Japan

Electronics and Information Technology dustries Association) standard (using a Sony MDW-series Mini-disc) With a fully charged battery

The battery life may be shorter than that

Do the following procedure to remove the specified, depending on the operating conditions the temperature of the location

Using house current

You can operate the player even if the built-in battery is exhausted. To do this, connect the battery charging stand to an AC outlet through the AC power adaptor, and then place the player on the stand

▶ Additional information 3 Open the lid

Precautions

· Make sure to keep the player in the supplied

or battery charging stand are accidentally

brought into contact with a metallic object

Keep the terminals on the player away fron

If you will not use the player for a long time

power adaptor or battery charging stand).

When disconnecting the AC power adapto

from the electrical outlet, grasp the adaptor

On the AC power adaptor (for the

supplied battery charging stand)

For use in your house: Use the supplied A

power adaptor. Do not use any other AC

power adaptor since it may cause the player to

 \diamond \bigcirc \diamond

Polarity of the plug

The supplied battery charging stand can be

to charge any other models.

lithium-ion battery.)

used only with the MZ-E10. It cannot be used

Charge the built-in battery at a temperature of

time will vary according to the surrounding

is low, the required charging time will be

The battery charging stand and the player

Because of the battery's characteristics, the

capacity of the built-in rechargeable battery

may be smaller than normal when it is used

disuse. In this case, charge and discharge the

battery several times. The normal battery life

for the first time or after a long period of

· If the life of the built-in rechargeable battery

drops to half the normal length, the battery

should be replaced. Consult your nearest

If the player will be unused for a long time

Before you dispose of the unit, remove the

Do not remove the screw except when

· Before removing the built-in rechargeabl

the battery, use sharp-tipped tweezers.

built-in rechargeable battery. When removing

BUILT-IN BATTER

OFFO

1 Slide the BUILT-IN BATTERY switch on the

2 Remove the screw to the right of the BUILT-IN

On disposing of the unit

environmental protection.

disposing of the unit.

built-in rechargeable battery for

stand and remove the AC power adaptor from

for 3 months or more, we also recommend that

you turn the BUILT-IN BATTERY switch (for

built-in rechargeable battery) on the side of the

the wall outlet. If the player will be unused

may become hot during the charging

0°C (+32°F) to +40°C (+104°F). The charging

temperature. (If the surrounding temperature

longer. This is a characteristic of the built-in

ocedure; this, however poses no danger

be sure to disconnect the power supply (AC

short-circuit the terminals and cause

dangerous heat generation.

plug itself: never pull the cord.

malfunction.

On charging

they may short-circuit and begin to heat up.

metallic objects or surfaces. Such contact may

Do not put any foreign objects in the DC IN 6V jack.

carrying pouch. If the terminals on the player


On safety




4 Pull up on the battery holder to remove:




5 Pull the battery lid downward and remove the lid and the switch piec

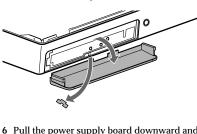


 Connect the AC power adaptor to an easily detach it from the built-in rechargeable battery accessible AC outlet. Should you notice an and the player. mality in the AC power adaptor, disconnect it from the AC outlet immediately

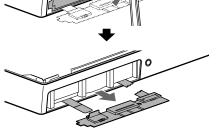

7 Remove the board holder

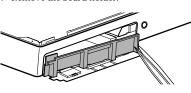

8 While pulling out the power supply board

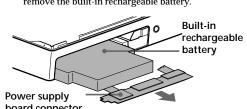

9 Attach a piece of insulating tape over the power supply board connector

On handling

- Do not drop or bump the player. This may cause the player to malfunction. • Do not pull on the remote control or stand are dirty.
- Do not place the player in the following
- An extremely hot place (over 60°C (140°F)) A place exposed to direct sunlight or near a
- In a car with the windows rolled up (especially in the summer – În a damp place such as a bathroor
- Near a source of electromagnetic fields such as a magnet, speaker, or TV

On heat build-up Heat may build up in the player when it is charging or operated for a long time. This

On mechanical noise The player emits mechanical noise while operating, which is caused by the powersaving system of the player. This is not a

On installation

 Never use the player where it will be subjected to extremes of light, temperature, moisture or

· Never wrap the player in anything when it is being used with the AC power adaptor. Hea build-up in the player may cause malfunction

controls for other models. On the MiniDisc cartridge Do not touch the internal disc directly

On the remote control

Forcing the shutter open may damage the

The supplied remote control is designed for use with the MZ-E10 only. Note also that the

- When transporting a minidisc, keep it in its · Do not place the cartridge where it will be
- subjected to light, temperature, moisture o
- Do not affix the label outside of the specified area on the MD. Make sure the label is placed within the recessed space on the disc

On the headphones/earphones Road safety Do not use headphones/earphones while

driving, cycling, or operating any motorized vehicle. This may lead to a traffic accident and is illegal in many areas. It can also be high volumes while walking, especially at pedestrian crossings. You should exc extreme caution or discontinue using the player in potentially hazardous situa

supplied headphones/earphones, stop using them at once and consult a doctor or a Sony Preventing hearing damage
Avoid using headphones/earphones at high

If you experience an allergic reaction to the

volumes. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce the volume or discontinue use Caring for others

Keen the volume at a moderate level. This will allow you to hear outside sounds and to be considerate of the people around you.

On cleaning After wiping the player casing with a soft

- cloth slightly moistened with water, wipe it again with a dry cloth. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene as this may mar the finish on the casing. Wipe the disc cartridge with a dry cloth to
- Dust on the lens may prevent the unit from operating properly. Be sure to close the disc
- compartment lid after inserting or ejecting an To maintain good sound quality, use a sol cloth to clean the plugs of the headphones may cause noise or intermittent breaks in the

sound during playback If you have any questions or problems concerning your player, please consult you nearest Sony dealer. (If a trouble occurred when the disc was in the player, we mmend that the disc be left in the playe

when you consult your Sony dealer so that

the cause of trouble may be better **Troubleshooting**

in the display)

The built-in rechargeable battery does not charge. • The terminals of the battery charging

- → Wipe the terminals with a dry cloth. • The surrounding temperature is too high or too low ("CannotCHG" appears
- → Charge the battery at a temperature of 0° C (+32°F) to +40°C (+104°F). • The built-in rechargeable battery is
- drained. (If the player is on the batter charging stand, the "3-color info-LED" does not light on or the "CHG:ndication does not appear in the display on the remote control.) → It takes about one minute after

placing the player on the battery stand for an indication to appear

- and charging to start The "3-color info-LED" does not light up even when the player is placed on the battery charging stand.
- The BUILT-IN BATTERY switch on the side of the player is turned off → Turn the BUILT-IN BATTERY

The player does not work or works • You tried to play with no disc in the

- player ("NO DISC" appears on the remote control).
- → Insert an MD.

control.)

switch to on.

player is pressed.)

evaporated.

- The hold function is activated and the controls are locked. (If you press any of the operation buttons on the player 'HOLD" appears on the remote
- → Slide HOLD in the opposite direction of the arrow to release the hold function.
- The BUILT-IN BATTERY switch on the side of the player is off → Turn the BÜILT-IN BATTERY
- You pressed a button on the player while making a setting on the remote control. ("MENU" appears on the remote control when a button on the
- → End the setting procedure using the · Moisture has condensed inside the
- Take the MD out and wait for several hours until the moisture has
- The built-in rechargeable battery is weak ("LOW BATT" appears on the remote control Recharge the built-in battery
- An MD with nothing recording on it is inserted ("BLANKDISC" appears on the remote contro
- Insert a recorded MD. The player cannot read the disc. (it's scratched or dirty) ("READ ERR" or "TOC ERR" appears on the remote control.)
- → Reinsert or replace the disc. • While operating, the player received a
- mechanical shock, too much static, abnormal power voltage caused by → Restart the player as follows: 1 Turn the BUILT-IN BATTERY
- switch on the side of the player 2 Let the player sit for about 30
- Supplied accessories 3 Turn the BUILT-IN BATTERY Headphones/earphones with a remote control (1) switch on and connect the player Battery charging stand (1) to a power source AC power adaptor (for the supplied battery charging stand) (1)

There is no sound output from the headphones/earphones. The headphones/earphones plug is not

firmly inserted. → Insert the headphones/earphones plug firmly to the remote control.

→ Cancel the AVLS function. For more

- → Insert the headphones/earphones plug firmly into the Ω jack. AVLS is on
- details, see "Protecting your The MD does not play normally.
- → Press and hold the P MODE/G button on the remote control unt "

 ¬" disappears, then start playing.

• The player is set to the repeat mode

The MD does not play from the first • The disc stopped playing before

reaching the last track

The playback sound skips.

- → Open the lid, or while the player is stopped, press and hold the jog lever for 2 seconds or more to star playing from the first track
- The player is placed where it receives uous vibration. → Place the player at a stable place.

· A very short track may cause sound to

The sound has a lot of static. · Strong magnetism from a television or other device causing interfere

Move the player away from the

- source of strong magnetism Noise is momentarily heard. • The sound was recorded in LP4 stereo
- → Because of the nature of the compression method used in LP4 mode, noise may be output on very rare occasions during playback of

sound recorded in this mode

or display on the remote control does not turn on.

- Power save mode is activated. → Cancel power save mode
- The group function does not function A disc that has no group settings is
- → Insert a disc with group settings

Audio playing system

Laser diode properties

Wavelength: $\lambda = 790 \text{ nm}$

Material: GaAlAs

Revolutions

Error correction

Solomon Code)

Sampling frequency

ATRAC3: LP2/LP4

2 stereo channels

Outputs

monaural channel

Frequency response

20 to 20,000 Hz ± 3 dB

load impedance 16 Ω

Power requirements

3WMB, 3.7 V, 340 mAh, Li-ion)

and): Power rating 6 V DC

Battery operation time

Headphone adaptor (1)

Optional accessories

SRS series Active Speakers

microplug cannot be used

directly to the player

Carrying pouch (1)

MiniDisc digital audio system

Laser output: less than 44.6 uW

Approx. 300 rpm to 2,700 rpm

ACIRC (Advanced Cross Interleave Reed

EFM (Eight to Fourteen Modulation

Headphones/earphones: dedicated headphone

Lithium-ion rechargeable battery (Built-in: LIP

External power jack (for the battery charging

see "When to recharge the built-in battery

 $(3^{1/}_{4} \times 2^{7/}_{8} \times {}^{13/}_{32}$ in.) (not including projecting parts and controls)

Approx. 55 g (1.6 oz) (including the built-in

US and foreign patents licensed from Dolby

Design and specifications are subject to change

AC-E60L (for use in Japan). AC-E60A (for World

model). AC-E60HG (for use outside Japa

MDR series stereo headphones/earphone

unit or to a remote control, use only

* Whether you should plug the headphones

headphones/earphones with stereo mini

Your dealer may not handle some of the above

Connecting a headphones/earphones

Headphone adaptor

listed accessories. Please ask the dealer for

detailed information about the accessories in

Connect the headphones/earphones and the

supplied headphone adaptor as follows

Stereo mini plug (supplied)

plugs. Headphones/earphones with a

earphones directly to the \bigcap jack on the main

Approx. $81.9 \times 72.2 \times 9.9 \text{ mm (w/h/d)}$

remote control jack, level 5 mW + 5 mW

During playback, the "3-color info-LED"

Specifications

1 (Headphones/earphones) jack **GROUP** button This output is the value measured at a distance "3-color info-LED" of 200 mm from the objective lens surface on HOLD (Locking the control) switch the optical pick-up block with 7 mm aperture 5 5-way control key (I◀◀・▶▶ I ▶

> 7 BUILT-IN BATTERY switch (at the 8 Terminals for charging stand (at the

9 Hand strap hole Use the hole to attach your strap

• **II** • VOL + -)

6 OPEN switch

has a tactile dot.

2 Track number display

Bookmark indication

9 Alarm indication

The display window of the remote




- Character information display Group play indication 5 Play mode indication
- 6 Virtual Surround/6-band equalizer indications 7 Battery level indication

Parts and controls The Player

The battery charging stand

DC IN (6V jack) (at the bottom) 2 Terminals for charging

The headphones/earphones with a

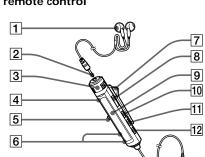

1 Headphones/earphone Stereo mini plug

3 Control VOL +. -Turn to adjust the volume 4 (stop) button Jog lever (I◀◀ • ▶II / ENT • ▶►I)

- (Group) +, buttor HOLD switch
- Display windov DISPLAY button P MODE / (play mode/repeat) button

SOUND button

This warranty is valid only in the United States.

SONY LIMITED WARRANTY Portable Audio ony will repair or replace the Product, at its option, at no charge, or pay the labor charges to any Sony autho zed service facility. After the Warranty Period, you must pay for all labor charges. 2. PARTS: In addition, Sony will supply, at no charge, new or rebuilt replacements in exchan To obtain warranty service, you must take the Product, or deliver the Product freight prepaid, in either its origina backaging or packaging affording an equal degree of protection, to any authorized Sony service facility. This warranty does not cover customer instruction, installation, set up adjustments or signal reception prob-Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE E ITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE E LAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS W.

1-(800)-488-SONY (7669)

ome states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitation

To locate the servicer or dealer nearest you, or for service assistance or resolution of a service problem, or for

http://www.sonv.net/

to enter the speed.

To cancel the procedure

Once you open the lid, the playback speed

(Personal Disc Memory)

The following settings can be stored

Virtual surround/6-band equaliz

Playback speed (Digital Pitch Control)

This procedure can be done by the remote

1 Press and hold DISPLAY for 2 seconds

'USEFUL" appears in the display, and

"PERSONAL" appears in the display,

"Entry OK" appears in the display and

2 Slide the jog lever repeatedly until

3 Slide the jog lever repeatedly until

"Entry?" flashes in the display

and then press the jog lever

4 Press the jog lever to enter the

the disc settings are stored in the

Insert the disc whose information is to be

erased and verify its contents. After step 3

above, slide the jog lever repeatedly to flas

"Erase?" in the display. And then press the

jog lever to enter the selection. "Erase OK

To erase the information recorded in

Entry?

personal disc memory

then press the jog lever.

Play mode

• Bookmark

Program setting

reverts back to the normal speed (0%)

noise or an echo in the playback.



5-way control Key (VOL +, -)

After pressing the playback button or cueing to a track, you can start playback quickly. This procedure can be done by the remote

then press the jog lever.

button for 2 seconds or more To cancel the setting Select "NORMAL" in step 4 above.

Changing the playback

1 During playback, press and hold

then press the jog lever. **3** Slide the jog lever repeatedly until "DPC" appears in the display, and then press the jog lever. The player changes to speed-setting

"DPC" appears in the display