



Sharp SD-FX1 1 bit Stereo System

- The corresponding page number from the Japanese manual is listed on the right side of the function description.

SHARP SD-FX1 Users Guide

Changing the display color

- 1-Press DISPLAY at least 2 seconds
 - 2-Press CURSOR BACK/FORWARD to choose "Color"
 - 3-Press ENTER then press CURSOR BACK/FORWARD to choose mode
 - Initial: Automatic color change according to unit operations
 - Fixed: Set to users' desired color
 - Weekly: Daily color changes
 - Random: Random color changes
 - 4-Press ENTER
 - 5-If "Fixed" or "Weekly" is chosen press CURSOR BACK/FORWARD to choose color then press ENTER
- pg19

Turning OFF display

- 1-Press DISPLAY at least 2 seconds
 - 2-Press CURSOR BACK/FORWARD to choose "Dimmer on" or "Dimmer off" then press ENTER
- pg19

Setting the clock

- 1-Press TIMER /DELETE
 - 2-Press CURSOR BACK/FORWARD to choose "Time adjust"
 - 3- Press ENTER
 - 4-Press BACK/FORWARD to set year, press ENTER
 - 5-Press BACK/FORWARD to set month, press ENTER
 - 6-Press BACK/FORWARD to set day, press ENTER
 - 7-Press BACK/FORWARD to set hour, press ENTER
 - 8-Press BACK/FORWARD to set minute, press ENTER
- To reconfirm time/date when power is off press DISPLAY, when power is on press TIMER/DELETE and then CURSOR BACK/FORWARD and time will display
- pg20

Checking display during playback

- 1-Press TIME on remote repeatedly to display: track time elapsed, time remaining, disc time remaining
 - 2-Press DISPLAY repeatedly for CD level meter, CD text info and for MD level meter, text info, remaining recordable time, recording date and time
- pg25/29

Listening to the radio

- 1-Press TUNE/BAND and choose FM or AM
 - 2-Press TUNING BACK/FORWARD to choose station
 - Auto:
 - Manual:
- pg30

Pre-setting radio stations

- 1-Tune in to desired station
 - 2-Press ENTER on remote
 - 3-Press TUN./PRESET within 5 seconds then CURSOR BACK/FORWARD to choose the pre-set number
 - 4-Press ENTER within 5 seconds
- pg32

Listening to pre-set stations

- 1-Press TUNER/BAND
 - 2-Press TUN./PRESET BACK FORWARD to choose pre-set number
 - To erase all pre-sets
 - 1-Press CLEAR on remote for at least three seconds, "Tuner clear" will display
 - 2-Press ENTER on remote
- pg32

Adjusting volume and tone

X-BASS (emphasises bass tone)

1-Press X-BASS, on/off displays

Adjusting tone (pre-set equalizer)

1-Press PRE-EQ to choose one of four pre-set tones:

Flat, Soft, Heavy, Vocal

pg33

Using Repeat and Random modes

1-After stopping playback press PLAY MODE to choose playback mode:

Normal, Repeat, Random

2-Begin playback

pg35

Using program mode

1-Stop playback

2-Press PROGRAM

3-Press numeral keys to choose track (pressing CLEAR during programming will erase last track)

4-After completion of programming press CD/MD STOP

5-To start playback press CD/MD PLAY

-To check programmed track order press BACK FORWARD keys while playback is stopped

-To add new tracks to program follow steps 1-4. The new tracks will follow behind the previously programmed tracks

-To erase all programmed tracks stop playback and press CLEAR

pg36

Recording from CD to MD

1-Insert CD and recordable MD

2-Stop CD playback and switch source to CD

3-Press REC MODE to choose recording mode: SP, LP2, LP4, MONO

4-To begin recording press either HIGH for high speed recording or NORMAL for normal speed.

-When there is not enough recordable space on an MD the following will display:

First, "TTL" followed by the number of tracks and time that will record. This will be followed by a different display, "OVR" followed by number of tracks and time that cannot be recorded.

-To continue recording anyway press HIGH or NORMAL

-To quit press MD STOP key

pg40/41

Manually adjusting recording level

1-Stop CD playback and switch source to CD

2-Press VOL BACK/FORWARD to choose track numbers to be recorded

3-Press REC MODE to choose recording mode

4-Press CD PLAY

5-Press REC, pause the recording

6-Press REC LEVEL/CURSOR to adjust the level

-Levels can be adjusted from -4db to 10db in 2db increments

7-Press CD STOP

8-Press BACK/FORWARD to choose track once more

9-Press CD PLAY to begin recording

pg42

Checking recording mode and remaining time available

1-When playback is stopped press REC MODE repeatedly to view different recording modes and and time remaining

pg43

Checking display when recording

1-Press DISPLAY repeatedly to show:

-Elapsed time

-MD/CD track titles

-Level meter

-Remaining recordable time

pg43

Recording radio broadcasts to MD

- 1-Set station to be recorded
 - 2-Insert a recordable MD
 - 3-Press REC MODE to choose recording mode
 - 4-Press REC
 - 5-Press PLAY on MD, recording will begin
- When recording from the radio the total time recorded will become one track on the MD.
 - Stopping or pausing during recording will create a new track

pg44

Creating a new track while recording

- 1-To create a new track during recording without interruption press REC during recording at point where new track is desired

pg45

Recording only programmed tracks from CD to MD

Hyper Track Edit

- 1-Switch source to CD
- 2-Insert CD and recordable MD
- 3-Press BACK/FORWARD keys to choose track number
- 4-Press TRACK key to set track number
- 5-Repeat steps 3-4 until all tracks to be recorded are set (up to 20 tracks can be programmed)
- 6-Choose HIGH or NORMAL to begin recording

pg47

Recording while listening to a CD

- 1-While listening to desired track press TRACK
- 2-After track is set press CD STOP
- 3-Press HIGH or NORMAL to begin recording

pg47

Recording from the beginning of a previously recorded MD

Top Position Edit

-With this function new tracks can be recorded on to the beginning of the MD, all previously recorded tracks will come after

- 1-Prepare for recording
- 2-Press TOP POSITION key, press once more to set
- 3-Begin recording, if CD press HIGH or NORMAL, if radio press REC then MD PLAY

pg48

Copying track titles from CD-TEXT CDs

- 1-Begin recording
- 2-Press NAME/TOC EDIT while track to be copied is playing
- 3-Press ENTER within 10 seconds, the current track title information will display
- 4-Press ENTER once again before the track recording finishes

pg49

About high speed recording

-With this unit CD to MD recording can be done in approx. half the normal time in High Speed Recording Mode, however some restrictions apply.

High speed copying limitations:

After the first copy of a CD is made there is an automatically imposed waiting period before another high speed copy of the same CD can be made. For example: If a CD to MD recording finishes in 40 minutes you will have to wait 34 minutes before another high speed copy of same CD is made. If the recording was 74 minutes, a 74 minute waiting period will apply.

-If another copy is needed immediately recording can be done in normal recording speed.
-If high speed recording is interrupted or if even only one song is recorded a waiting period will apply.

-If high speed recordings are made from 20 different CDs consecutively a waiting period will be imposed before the 21st CD can be recorded in high speed mode

pg50

Titiling a recorded MD

- 1-Stop MD playback
- 2-Press NAME/TOC EDIT
- 3-Press BACK/FORWARD to choose "Disc Name"
- 4-Press ENTER (to quit this function press NAME/TOC EDIT)
- 5-Using the following keys enter characters: 1, ^10, TIME, DISPLAY to switch between Japanese kana and Roman alphabet press DISPLAY to switch between capital and lower case letters press ^10
- 6-When titiling is complete press ENTER to save information

pg52

Titiling a track

- 1-While song to be titled is playing press NAME/TOC EDIT
 - 2-Press ENTER (while in this mode track will repeat)
- To quit this mode press NAME/TOC EDIT
- 3-Follow steps 5-6 of "Titiling a recorded MD"
- The chart on page 54 shows the characters possible with each key.
 - ^10 key-creates a space in Japanese Kana mode
 - 0/10 key-creates a space in Roman alphabet mode

pg53

Erasing a disc title

- 1-Stop MD palyback
- 2-Press NAME/TOC EDIT
- 3-Press BACK/FORWARD keys to choose "Disc name"
- 4-Press TIMER/DELETE at least 2 seconds to display "Name clear" (to quit this mode press NAME/TOC EDIT)
- 5-Press ENTER to erase disc title

pg55

Erasing a track title

- 1-While track is playing press NAME/TOC EDIT
- 2-Press TIMER/DELETE at least 2 seconds to display "Name clear" (to quit this function press NAME/TOC EDIT)
- 3-Press ENTER to erase track title

pg55

Erasing and correcting characters

- 1-Follow steps 1-4 of "Titiling a disc"
- 2-Press BACK/FORWARD keys to choose the character to be corrected or erased (To quit this function press NAME/TOC EDIT)
- 3-Press TIMER/DELETE and erase the highlighted character
- 4-Enter the correct character
- 5-After erasure/correction is complete press ENTER

pg56

Adding characters

- 1-Follow steps 1-4 of "Titiling a disc"
- 2-Press BACK/FORWARD to choose position where additional character will be entered. The new character will appear to the left of hte highlighted character. (To quit this function press NAME/TOC EDIT)
- 3-Enter the correct character
- 4-After entering character press ENTER

pg56

Dividing a track

- 1-During playback pause the track at the point to be divided
 - 2-Press NAME/TOC EDIT
 - 3-Press BACK/FORWARD to choose "Divide"
 - 4-Press ENTER, "Divide OK?" will display (To quit this function press NAME/TOC EDIT)
 - 5-Press ENTER once more
- One MD can have up to 255 tracks

pg57

Combining tracks

- A digitaly recorded track and analog track cannot be combined
- Tracks recorded in different modes (LP2,LP4 etc.) cannot be combined
- 1-When playback is stopped press VOL BACK/FORWARD to choose the track that after combining will be in the back postion
- 2-Press NAME/TOC EDIT
- 3-Press CURSOR BACK/FORWARD to choose "Combine"
- 4-Press ENTER
- (To quit this function press NAME/TOC EDIT)
- 5-Press ENTER once more

pg58

Moving tracks

- 1-While playback is stopped press BACK/FORWARD to choose track to be moved
- 2-Press NAME/TOC EDIT
- 3-Press CURSOR BACK/FORWARD to choose "Move"
- 4-Press ENTER
- 5-Press VOL BACK/FORWARD to choose for position for track to be moved to
- (To quit this function press NAME/TOC EDIT)
- 6-Press ENTER once more

pg59

Program move

- This function allows tracks to be moved together according to a programmed order
- 1-Follow steps 1-4 of "Using program mode"
- 2-Press NAME/TOC EDIT
- 3-Press BACK/FORWARD to choose "PRGM MOVE"
- 4-Press ENTER
- (To quit this function press NAME/TOC EDIT)
- 5-Press ENTER once more
- Any tracks not in the program will come after the programmed tracks

pg59

Erasing single tracks

- 1-While playback is stopped press BACK/FORWARD keys to choose track to be erased
- 2-Press ERASE
- (To quit this function press STOP)
- 2-Press ERASE once more for at least 2 seconds

pg60

Program erase

- Erasing a group of up to 20 tracks by using program function
- 1-Follow steps 1-5 of "Using program mode"
- 2-Press NAME/TOC EDIT
- 3-Press BACK/FORWARD to choose "Program mode"
- 4- Press ENTER
- (To quit this function press STOP)
- 5-Press ENTER once more

pg61

Erasing all tracks

- 1-Stop playback on MD
- 2-Press ERASE, "Erase OK?" will display
- (To quit this function press STOP)
- 3-Press ERASE for at least 3 seconds

pg61

Setting timer

- Timer can be used as an alarm or to record
- 1-Press TIMER/DELTE
- If "Standby" does not display clock needs to be set. Set clock then return to timer function
- 2-Press BACK/FORWARD to choose "Timer set"
- 3-Press ENTER, "Time play" will display

- 4-Press BACK/FORWARD to choose timer mode:
 - Timer Play: music alarm, pre-set time playback
 - Timer Rec: record by timer
- 5-Press ENTER
- 6-Press BACK/FORWARD to set hour unit will turn ON, press ENTER
- 7-Press BACK/FORWARD to set minute, press ENTER
- Holding down BACK/FORWARD keys moves time forward in 5 minute increments
- 8-Press BACK/FORWARD to set hour unit will turn OFF, after completion press ENTER
- 9-Press BACK/FORWARD to set minute, press ENTER
- 10-When using timer for alarm: press BACK/FORWARD keys to choose playback source MD-CD-TUNER-AUX, then press ENTER
- When using timer for recording press BACK/FORWARD keys to choose recording source: Tuner-Aux, then press ENTER
- When tuner is chosen press BACK/FORWARD to choose radio pre-set station number, press ENTER
- (You can only choose pre-set stations at this point, if the station to be recorded has not been pre-set follow the instructions to pre-set a station then redo the "Setting timer" set-up)
- 11-Press BACK/FORWARD keys to set volume level, press ENTER
- 12-After step 11 display will blink "Timer" or "Timer Rec" and settings will display then power will turn off automatically. "Timer" light will turn on on main unit.
- Unplugging power cord or a power outage will erase all time settings!

pg63/64

Using timer again with previous settings

- 1-Press TIMER/DELETE
- 2-Press CURSOR BACK/FORWARD to choose "standby"
- 3-Press ENTER, previously input settings will display and power will automatically turn off unit will be in stand-by mode

pg65

Reconfirming timer settings

- 1-When unit is in "timer" or "timer record" standby mode press TIMER/DELETE
- 2-Press BACK/FORWARD keys to choose "Timer call"
- 3-Press ENTER and timer settings will display then unit will return to stand-by mode
- To make changes to timer settings:
Start from step one of "Setting timer"

pg65

Cancelling timer

- When unit is in timer stand-by mode (power off) turning "On" the main unit power will cancel timer operations
- To cancel without turning on power:
 - 1-Press TIMER/DELETE
 - 2-Press BACK/FORWARD to choose "Cancel"
 - 3-Press ENTER
- The timer operation will cancel but the settings will not be erased

pg66

Using sleep timer

- 1-While music to be used for sleep timer is playing press TIMER/DELETE
- 2-Press BACK/FORWARD to choose "Sleep"
- 3-Press ENTER
- 4-Press BACK/FORWARD to set time until unit will turn off
(time can be set from 1 minute to 2 hours)
- 5-Press ENTER and "Sleep timer" function begins, after entered time elapses unit will turn off

pg66

Checking remaining time while in sleep timer mode

- 1-Press TIMER/DELETE
- 2-Press BACK/FORWARD to choose "Sleep" remaining time displays on right.
- While remaining time displays press ENTER to change time

Cancelling sleep timer

- Turning off power cancels sleep timer, to cancel without turning off power:

- 1-While in sleep timer mode press TIMER/DELETE
- 2-Press BACK/FORWARD to choose "Sleep off", press ENTER

pg66

Use sleep and timer function together

-You can, for example, listen to the radio in sleep mode then use the alarm timer later.

Simply follow these steps:

- 1-Set up "Sleep mode"
- 2-Set up "Timer play"

-You can also listen in sleep mode then record a radio broadcast later:

- 1-Set up "Sleep mode"
- 2-Set up "Timer record"

pg67

Playing external devices through the SD-FX1

-Before connecting turn off power to all units.

- 1-After connecting turn on external device first, then turn on main unit and press AUX
- 2-Begin playback on external device

pg68

Recording playback from external devices

- 1-Press AUX key
 - 2-Insert a recordable MD
 - 3-Press REC
 - 4-Begin playback on external device
 - 5-Press REC LEVEL/CURSOR keys to adjust recording levels
- Adjustments can be made from -4dB to 10dB in 2dB steps
- 6-Press MD PLAY key at the point where recording should begin