

## Service Technical Information

MODEL NO.
AM-C80 / F80 / C75 / F75 / F72

SUBJECT
No power

REF.No. :G - A0 - 084 - E0

DATE :01. NOV. 2000

## <CONTENTS>

Check for the symptoms on the models concerned, and take the following countermeasures.

## <SYMPTOM>

Power is not turned on even if a rechargeable battery or an AC adapter is connected. And "OPEN" indication appears only when the lid of unit is opened.

## <COUNTERMEASURE>

Step 1: Measure resistance of R348 on the rear–panel side of main C.B. (See Fig–1) and check that the value is  $2.2M\Omega$ .


If the value of R348 is  $100\Omega$ , change the value into  $2.2M\Omega$ .

\*Note that a  $100\Omega$  resistor is connected in parallel with a  $2.2M\Omega$  R348 resistor.


Step 2: Remove Q303 on Mechanism side of MAIN C.B. (See Fig-2), and re-mount Q303 in reversed direction (rotated in 180 degrees).


\*Check "VK" indication on Q303.

Step 3: Connect an AC adapter after taking the actions above, and leave the unit for more than 8 hours.

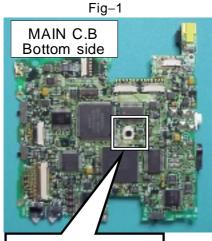



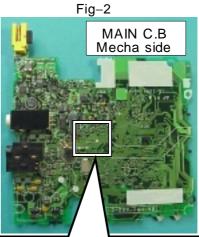

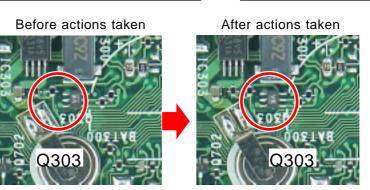

G	R	Code No.	Access Code	Modified Ser. No.	Parts Schedule
-	-	-	_	-	_