

# MDX-CA680/CA680X

## SERVICE MANUAL

Ver 1.1 2001.05

US Model  
MDX-CA680X

AEP Model  
UK Model  
MDX-CA680/CA680X



Photo: MDX-CA680X (US model)

U.S. and foreign patents licensed from Dolby laboratories Licensing Corporation.

Model Name Using Similar Mechanism	NEW
Base Mechanism Type	MG-164MA-138
Optical Pick-up Name	KMS-241C

### SPECIFICATIONS

#### AUDIO POWER SPECIFICATIONS (US model)

##### POWER OUTPUT AND TOTAL HARMONIC DISTORTION

23 watts per channel minimum continuous average power into 4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more than 5% total harmonic distortion.

#### MD Player section

Signal-to-noise ratio	90 dB
Frequency response	10 – 20,000 Hz
Wow and flutter	Below measurable limit
Laser Diode Properties (US model)	
Material	GaAlAs
Wavelength	780 nm
Emission Duration	Continuous
Laser output power	Less than 44.6 $\mu$ W*

\* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

#### Tuner section

##### FM

Tuning range	
US model:	87.5 – 107.9 MHz
AEP, UK models:	87.5 – 108.0 MHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz/450 kHz
Usable sensitivity	8 dBf
Selectivity	75 dB at 400 kHz
Signal-to-noise ratio	66 dB (stereo), 72 dB (mono)
Harmonic distortion at 1 kHz	0.6 % (stereo), 0.3 % (mono)
Separation	35 dB at 1 kHz
Frequency response	30 – 15,000 Hz

##### AM (US model)

Tuning range	530 – 1,710 kHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz/450 kHz
Sensitivity	30 $\mu$ V

#### MW/LW (AEP, UK models)

Tuning range	MW: 531 – 1,602 kHz LW: 153 – 279 kHz
Aerial terminal	External aerial connector
Intermediate frequency	10.7 MHz/450 kHz
Sensitivity	MW: 30 $\mu$ V LW: 40 $\mu$ V

#### Power amplifier section

Outputs	Speaker outputs (sure seal connectors) 4 – 8 ohms
Speaker impedance	4 – 8 ohms
Maximum power output	50 W $\times$ 4 (at 4 ohms)

#### General

Outputs	Audio outputs (front/rear) Power antenna relay control lead Power amplifier control lead Telephone ATT control lead BUS control input connector BUS audio input connector Remote controller input connector
Inputs	Antenna input connector
Tone controls	

US model:	Bass $\pm$ 10 dB at 100 Hz Treble $\pm$ 10 dB at 15 kHz
AEP, UK models:	Bass $\pm$ 9 dB at 100 Hz Treble $\pm$ 9 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 178 $\times$ 50 $\times$ 177 mm (7 $\frac{1}{8}$ $\times$ 2 $\times$ 7 in.) (w/h/d)
Mounting dimensions	Approx. 182 $\times$ 53 $\times$ 161 mm (7 $\frac{1}{4}$ $\times$ 2 $\frac{1}{8}$ $\times$ 6 $\frac{3}{8}$ in.) (w/h/d)
Mass	Approx. 1.2 kg (2 lb 10 oz)
Supplied accessories	Parts for installation and connections (1 set) Front panel case (1)

#### Note

This unit cannot be connected to a digital preamplifier or an equalizer.

Design and specifications are subject to change without notice.

## FM/AM (MW/LW) MINIDISC PLAYER

9-870-242-12  
2001E0500-1  
© 2001.5

Sony Corporation  
e Vehicle Company  
Shinagawa Tec Service Manual Production Group

# SONY®

## TABLE OF CONTENTS

<b>1. GENERAL</b>	
Location of Controls .....	3
Setting the Clock .....	4
<b>2. DISASSEMBLY</b>	
2-1. Disassembly Flow .....	10
2-2. Sub Panel Assy .....	10
2-3. Mechanism Deck (MG-164MA-138) .....	11
2-4. MAIN Board .....	11
2-5. Heat Sink .....	12
2-6. SERVO Board .....	12
2-7. MD Cover Assy .....	13
2-8. Float Block .....	13
2-9. Lo Motor Assy (Loading) (M903) .....	14
2-10. Lever (LE23) Assy .....	14
2-11. Holder Assy .....	15
2-12. Chucking Arm Assy .....	15
2-13. Optical Pick-up (KMS-241C) .....	16
2-14. SL Motor Assy (Sled) (M902), SP Motor Assy (Spindle) (M901) .....	16
<b>3. ELECTRICAL ADJUSTMENTS</b>	
Test Mode .....	17
MD Section .....	17
Tuner Section .....	17
<b>4. DIAGRAMS</b>	18
4-1. Block Diagram – SERVO Section – .....	23
4-2. Block Diagram – TUNER Section – .....	24
4-3. Block Diagram – MAIN Section – .....	25
4-4. Block Diagram – BUS CONTROL/ POWER SUPPLY Section – .....	26
4-5. Note for Printed Wiring Boards and Schematic Diagrams .....	27
4-6. Printed Wiring Boards – SERVO Section – .....	29
4-7. Schematic Diagram – SERVO Section (1/2) – .....	30
4-8. Schematic Diagram – SERVO Section (2/2) – .....	31
4-9. Printed Wiring Board – MAIN Board – .....	32
4-10. Schematic Diagram – MAIN Board (1/3) – .....	33
4-11. Schematic Diagram – MAIN Board (2/3) – .....	34
4-12. Schematic Diagram – MAIN Board (3/3) – .....	35
4-13. Printed Wiring Board – SUB Board – .....	36
4-14. Schematic Diagram – SUB Board – .....	37
4-15. Printed Wiring Board – KEY Board – .....	38
4-16. Schematic Diagram – KEY Board – .....	39
4-17. IC Pin Function Description .....	41
<b>5. EXPLODED VIEWS</b>	
5-1. General Section .....	49
5-2. Front Panel Section .....	50
5-3. Mechanism Deck Section-1 (MG-164MA-138) .....	51
5-4. Mechanism Deck Section-2 (MG-164MA-138) .....	52
<b>6. ELECTRICAL PARTS LIST</b>	53

### NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.


The flexible board is easily damaged and should be handled with care.

### NOTES ON LASER DIODE EMISSION CHECK

Never look into the laser diode emission from right above when checking it for adjustment. It is feared that you will lose your sight.

### NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK (KMS-241C).

The laser diode in the optical pick-up block may suffer electrostatic break-down easily. When handling it, perform soldering bridge to the laser-tap on the flexible board. Also perform measures against electrostatic break-down sufficiently before the operation. The flexible board is easily damaged and should be handled with care.

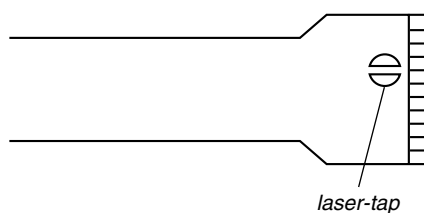

**OPTICAL PICK-UP FLEXIBLE BOARD**

### Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

### Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

### CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.


## SECTION 1 GENERAL

This section is extracted from instruction manual.


### Location of controls

Refer to the pages listed for details.

**CD/MD** : During Playback    **RADIO** : During radio reception    **MENU** : During menu mode

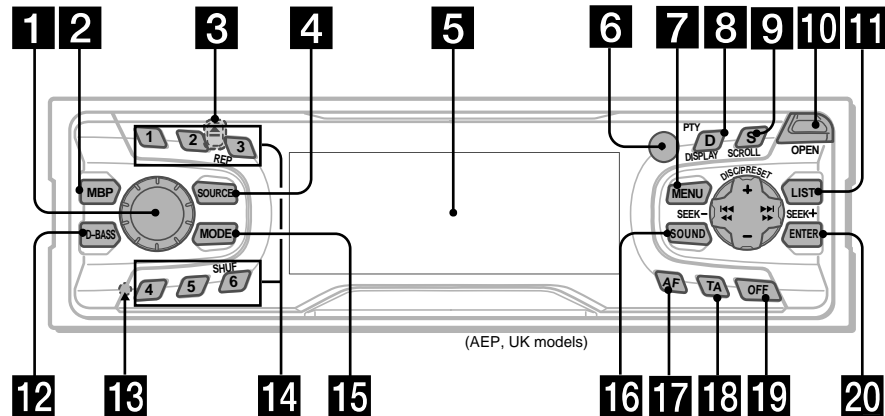

- 1** Volume control dial 16
  - 2** MBP button 22
  - 3** ▲ (eject) button (located on the front side of the unit, behind the front panel) 9
  - 4** SOURCE (Power on/Radio/CD/MD) button 8, 9, 11, 13, 14, 16
  - 5** Display window
  - 6** Receptor for the card remote commander
  - 7** MENU button 8, 10, 11, 12, 13, 17, 18, 21
  - 8** DISPLAY/PTY\*1 (display mode change/programme type) button 9, 11, 15, 18
  - 9** SCROLL button 9
  - 10** OPEN button 7, 9
  - 11** LIST button
    - CD/MD** 11
    - RADIO** 14
  - 12** D-BASS button 22
  - 13** RESET button (located on the front side of the unit, behind the front panel) 7
  - 14** Number buttons
    - CD/MD**
      - ③ REP 10
      - ⑥ SHUF 10
    - RADIO** 13, 14, 16, 17
  - 15** MODE button
    - CD/MD** 9, 11
    - RADIO** 13, 14, 16
  - 16** SOUND button 20, 22
  - 17** AF button\*1 15, 17
  - 18** TA button \*1 16, 17
  - 19** OFF (Stop/Power off) button\*2 7, 9
  - 20** ENTER button
    - CD/MD** 11
    - RADIO** 14, 18
    - MENU** 8, 10, 11, 12, 13, 17, 18, 21
- \*1 AEP, UK models only
- \*2 Warning when installing in a car without an ACC (accessory) position on the ignition switch  
After turning off the ignition, be sure to press **OFF** on the unit for 2 seconds to turn off the clock display.  
Otherwise, the clock display does not turn off and this causes battery drain.

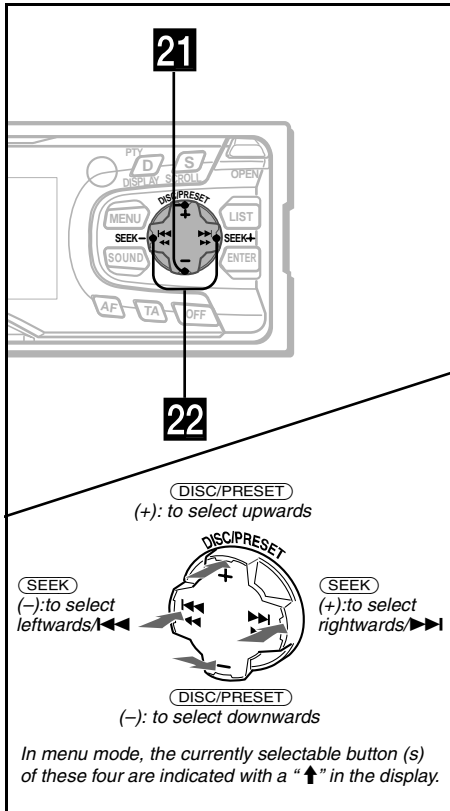

- 21 DISC/PRESET buttons (+/-)**
  - CD/MD 9, 11
  - RADIO 13, 14, 18
  - MENU 8, 10, 11, 12, 13, 17, 18, 21
- 22 SEEK buttons (-/+)**
  - CD/MD 9
  - RADIO 13, 14, 16
  - MENU 8, 10, 12, 18, 20, 21

## Setting the clock

The clock uses a 12-hour (US model) or 24-hour (AEP, UK models) digital indication.

Example: To set the clock to 10:08

- 1** Press **MENU**, then press either side of **DISC/PRESET** repeatedly until "CLOCK" appears.



- 1** Press **ENTER**.  
The hour indication flashes.
- 2** Press either side of **DISC/PRESET** to set the hour.
- 3** Press the **(+)** side of **SEEK**.  
The minute indication flashes.
- 4** Press either side of **DISC/PRESET** to set the minute.


- 2** Press **ENTER**.



The clock starts. After the clock setting is completed, the display returns to normal play mode.

**Tips**

- You can set the clock automatically with the RDS feature (page 18).
- When D.INFO mode is set to ON, the time is always displayed (page 21).

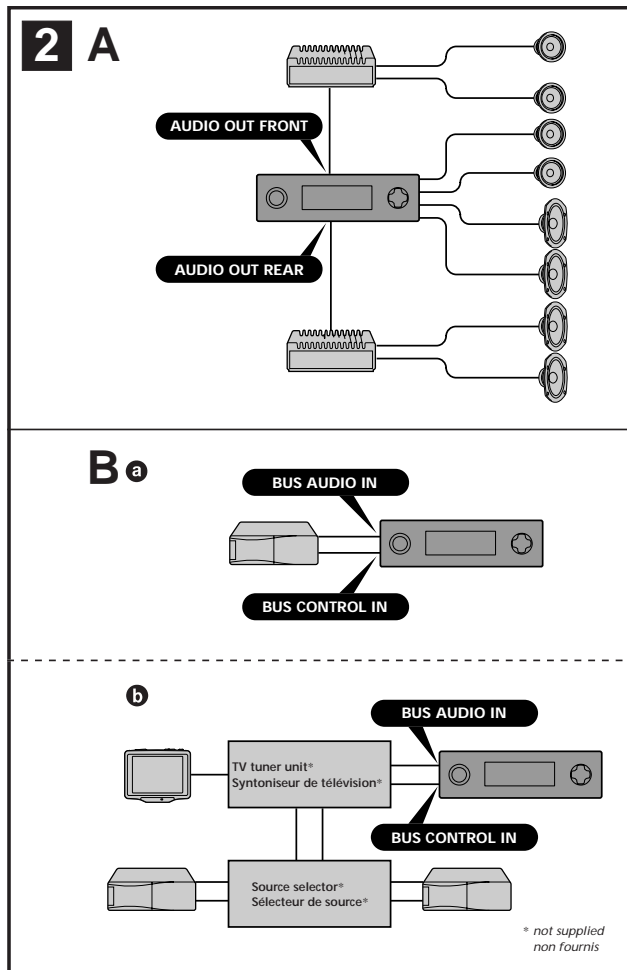

(US model)

**Cautions**

- This unit is designed for negative ground 12 V DC operation only.
- Do not get the wires under a screw, or caught in moving parts (e.g. seat railing).
- Before making connections, disconnect the ground terminal of the car battery to avoid short circuits.
- Connect the **yellow** and **red** power input leads only after all other leads have been connected.
- **Run all ground wires to a common ground point.**
- Be sure to insulate any loose unconnected wires with electrical tape for safety.
- The use of optical instruments with this product will increase eye hazard.

**Notes on the power supply cord (yellow)**


- When connecting this unit in combination with other stereo components, the connected car circuit's rating must be higher than the sum of each component's fuse.
- When no car circuits are rated high enough, connect the unit directly to the battery.

**Parts list (1)**

The numbers in the list are keyed to those in the instructions.

**Caution**

Handle the bracket ① carefully to avoid injuring your fingers.



**Connection example (2)**

**Notes (2-A)**

- Be sure to connect the ground cord before connecting the amplifier.
- If you connect an optional power amplifier and do not use the built-in amplifier, the beep sound will be deactivated.


**Tip (2-B-⑤)**

For connecting two or more changers, the source selector XA-C30 (optional) is necessary.

**Connection diagram (3)**

- 1 To a metal surface of the car**  
First connect the black ground lead, then connect the yellow and red power input leads.
- 2 To the power antenna control lead or power supply lead of antenna booster amplifier**  
**Notes**
  - It is not necessary to connect this lead if there is no power antenna or antenna booster, or with a manually-operated telescopic antenna.
  - When your car has a built-in FM/AM antenna in the rear/side glass, see "Notes on the control and power supply leads."
- 3 To AMP REMOTE IN of an optional power amplifier**  
This connection is only for amplifiers. Connecting any other system may damage the unit.
- 4 To the interface cable of a car telephone**
- 5 To the +12 V power terminal which is energized in the accessory position of the ignition key switch**  
**Notes**
  - If there is no accessory position, connect to the +12 V power (battery) terminal which is energized at all times.  
Be sure to connect the black ground lead to it first.
  - When your car has a built-in FM/AM antenna in the rear/side glass, see "Notes on the control and power supply leads."
- 6 To the +12 V power terminal which is energized at all times**  
Be sure to connect the black ground lead to it first.

(US model)

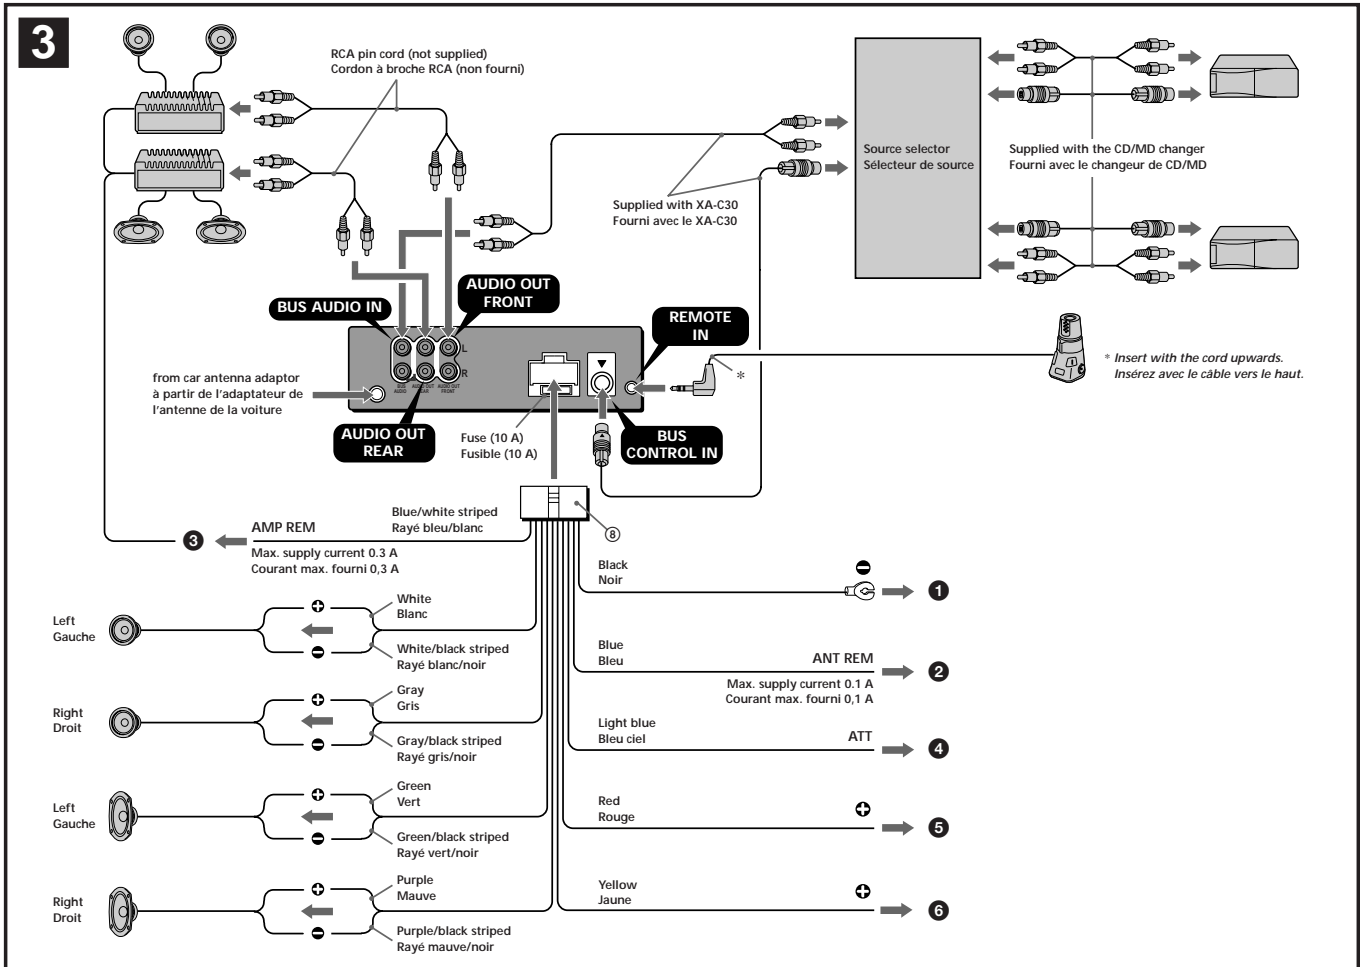

### Notes on the control and power supply leads

- The power antenna control lead (blue) supplies +12 V DC when you turn on the tuner.
- When your car has built-in FM/AM antenna in the rear/side glass, connect the power antenna control lead (blue) or the accessory power input lead (red) to the power terminal of the existing antenna booster. For details, consult your dealer.
- A power antenna without relay box cannot be used with this unit.

### Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition key is turned off.

### Notes on speaker connection

- Before connecting the speakers, turn the unit off.
- Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid its damage.
- Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
- Do not connect the ground lead of this unit to the negative (-) terminal of the car.
- Do not attempt to connect the speakers in parallel.
- Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
- To avoid malfunction, do not use the built-in speaker wires installed in your car if its unit end share a common negative (-) lead for the right and left speakers.
- Do not connect the unit's speaker cords to each other.

## Précautions

- Cet appareil est exclusivement conçu pour fonctionner sur une tension de 12 V CC avec masse négative.
- Evitez de fixer des vis sur les câbles ou de coincer ceux-ci dans des pièces mobiles (par exemple, armature de siège).
- Avant d'effectuer les raccordements, débranchez la borne de terre de la batterie du véhicule pour éviter tout court-circuit.
- Raccordez les fils d'alimentation **jaune** et **rouge** seulement après avoir terminé tous les autres raccordements.
- Rassemblez tous les fils de terre en un point de masse commun.
- Veillez à isoler avec du chatterton tout fil lâche non raccordé.

### Remarques sur le cordon d'alimentation (jaune)


- Lorsque cet appareil est raccordé à d'autres éléments stéréo, la valeur nominale des circuits de la voiture raccordée doit être supérieure à la somme des fusibles de chaque élément.
- Si aucun circuit de la voiture n'est assez puissant, raccordez directement l'appareil à la batterie.

## Liste des composants (1)

Les numéros de l'illustration correspondent à ceux des instructions.

### Attention

Manipulez précautionneusement le support ① pour éviter de vous blesser aux doigts.



## Exemple de raccordement (2)

### Remarques (2-A)

- Raccordez d'abord le fil de masse avant de raccorder l'amplificateur.
- Si vous raccordez un amplificateur de puissance indépendant et que vous n'utilisez pas l'amplificateur intégré, le bip sonore est désactivé.

### Conseil (2-B-⑥)

Dans le cas du raccordement de deux changeurs ou plus, le sélecteur de source XA-C30 (en option) est indispensable.

## Schéma de raccordement (3)

- à un point métallique de la voiture  
Branchez d'abord le fil de masse noir et, ensuite, les fils d'entrée d'alimentation jaune et rouge.
- vers le fil de commande de l'antenne électrique ou le fil d'alimentation de l'amplificateur d'antenne  
**Remarques**  
• Il n'est pas nécessaire de raccorder ce fil s'il n'y a pas d'antenne électrique ni d'amplificateur d'antenne, ou avec une antenne télescopique manuelle.  
• Si votre voiture est équipée d'une antenne FM/AM intégrée dans la vitre arrière/laterale, voir "Remarques sur les fils de commande et d'alimentation".
- au niveau du AMP REMOTE IN de l'amplificateur de puissance en option  
Ce raccordement s'applique uniquement aux amplificateurs. Le branchement de tout autre système risque d'endommager l'appareil.
- vers le cordon de liaison d'un téléphone de voiture
- à la borne +12 V qui est alimentée quand la clé de contact est sur la position accessoires  
**Remarques**  
• S'il n'y a pas de position accessoires, raccordez la borne d'alimentation (batterie) +12 V qui est alimentée en permanence.  
Raccordez d'abord le fil de masse noir.  
• Si votre voiture est équipée d'une antenne FM/AM intégrée dans la vitre arrière/laterale, voir "Remarques sur les fils de commande et d'alimentation".
- à la borne +12 V qui est alimentée en permanence  
Raccordez d'abord le fil de masse noir.

### Remarques sur les fils de commande et d'alimentation

- Le fil de commande de l'antenne électrique (bleu) fournit une alimentation de +12 V CC lorsque vous mettez l'appareil sous tension.
- Lorsque votre voiture est équipée d'une antenne FM/AM intégrée dans la vitre arrière/laterale, raccordez la sortie de commande de l'antenne (bleu) ou l'entrée d'alimentation des accessoires (rouge) au bornier de l'amplificateur d'antenne existant. Pour plus de détails, consultez votre revendeur.
- Une antenne électrique sans boîtier de relais ne peut pas être utilisée avec cet appareil.



### Raccordement pour la conservation de la mémoire

Lorsque le fil d'entrée d'alimentation jaune est raccordé, le circuit de la mémoire est alimenté en permanence même si la clé de contact est sur la position d'arrêt.

### Remarques sur le raccordement des haut-parleurs

- Avant de raccorder les haut-parleurs, mettez l'appareil hors tension.
- Utilisez des haut-parleurs ayant une impédance de 4 à 8 ohms avec une capacité de manipulation adéquate pour éviter de les endommager.
- Ne raccordez pas les bornes du système de haut-parleur au châssis de la voiture et ne raccordez pas les bornes du haut-parleur droit à celles du haut-parleur gauche.
- Ne raccordez pas le câble de masse de cet appareil à la borne négative (-) de l'enceinte.
- N'essayez pas de raccorder les haut-parleurs en parallèle.
- Raccordez uniquement des haut-parleurs passifs. Le raccordement de haut-parleurs actifs (avec amplificateurs intégrés) aux bornes des haut-parleurs peut endommager l'appareil.
- Pour éviter tout dysfonctionnement, n'utilisez pas les fils des haut-parleurs intégrés installés dans votre voiture si l'appareil partage un fil négatif commun (-) pour les haut-parleurs droit et gauche.
- Ne raccordez pas entre eux les cordons des haut-parleurs de l'appareil.



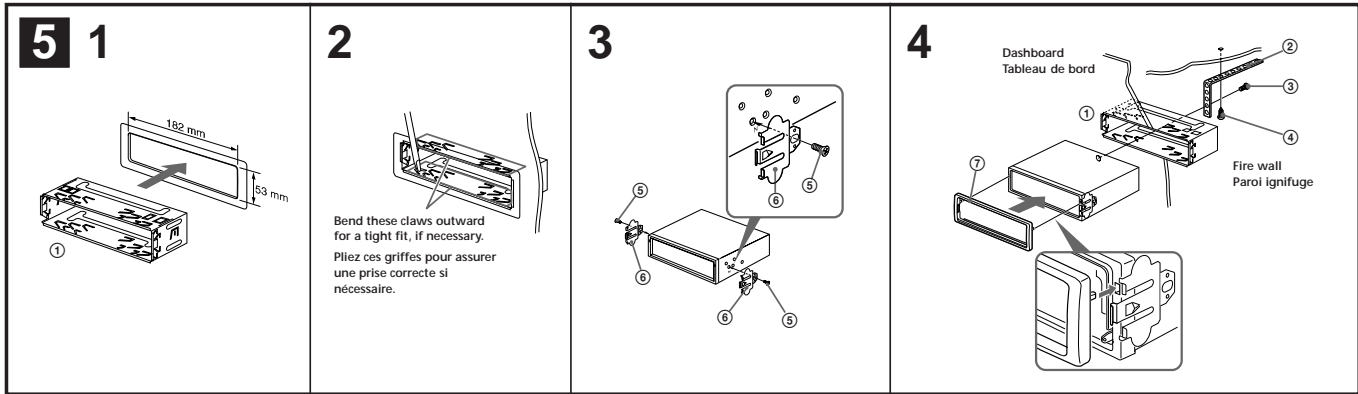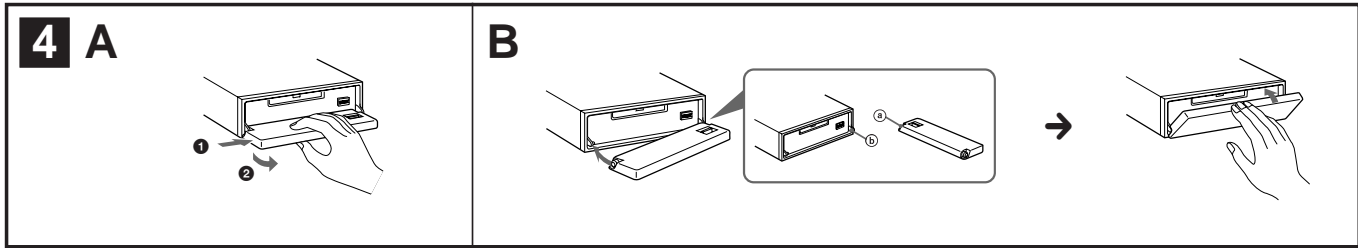

## Precautions

- Choose the installation location carefully so that the unit will not interfere with normal driving operations.
- Avoid installing the unit in areas subject to dust, dirt, excessive vibration, or high temperatures, such as in direct sunlight or near heater ducts.
- Use only the supplied mounting hardware for a safe and secure installation.

## Mounting angle adjustment

Adjust the mounting angle to less than 20°.

## How to detach and attach the front panel (4)

Before installing the unit, detach the front panel.

### 4-A To detach

Before detaching the front panel, be sure to press **(OFF)**. Press **(OPEN)**, then slide the front panel to the right side, and pull out the left side.

### 4-B To attach

Place the hole ④ in the front panel onto the spindle ⑤ on the unit as illustrated, then push the left side in.

## Mounting example (5)

Installation in the dashboard

## Mounting the unit in a Japanese car (6)

You may not be able to install this unit in some makes of Japanese cars. In such a case, consult your Sony dealer.

### Note

To prevent malfunction, install only with the supplied screws ⑥.


## Warning when installing in a car without ACC (accessory) position on the ignition key switch

Be sure to press **(OFF)** on the unit for two seconds to turn off the clock display after turning off the engine.

When you press **(OFF)** only momentarily, the clock display does not turn off and this causes battery wear.

## RESET button

When the installation and connections are completed, be sure to press the RESET button with a ball-point pen, etc.



## Précautions

- Choisissez soigneusement l'emplacement d'installation pour que l'appareil ne gêne pas le chauffeur pendant la conduite.
- Évitez d'installer l'appareil dans un endroit exposé à la poussière, à la saleté, à des vibrations excessives ou à des températures élevées comme en plein soleil ou à proximité de conduits de chauffage.
- Pour garantir un montage sûr, n'utilisez que le matériel fourni.

## Réglage de l'angle de montage

Ajustez l'inclinaison à un angle inférieur à 20°.

## Retrait et pose de la façade (4)

Avant d'installer l'appareil, retirez la façade.

### 4-A Pour retirer

Avant de retirer la façade, n'oubliez pas d'appuyer d'abord sur **(OFF)**. Appuyez sur **(OPEN)**, puis faites glisser la façade vers la droite et retirez-la par la gauche.

### 4-B Pour poser

Fixez la partie ④ de la façade sur la partie ⑤ de l'appareil, comme indiqué sur l'illustration, puis appuyez sur le côté gauche jusqu'au dé clic.

## Exemple de montage (5)

Installation dans le tableau de bord

## Installation de l'appareil dans une voiture japonaise (6)

Cet appareil ne peut pas être installé dans certaines voitures japonaises. Consultez, dans ce cas, votre revendeur Sony.

### Remarque

Pour éviter tout dysfonctionnement, utilisez uniquement les vis ⑥ pour le montage.


## Avertissement en cas d'installation dans une voiture dont le contact ne comporte pas de position ACC (accessoires)

N'oubliez pas d'appuyer sur le bouton **(OFF)** de l'appareil pendant deux secondes après avoir coupé le moteur de façon à désactiver l'affichage de l'horloge.

Si vous appuyez brièvement sur **(OFF)**, l'affichage de l'horloge n'est pas désactivé, ce qui provoque une usure de la batterie.

## Touche RESET

Quand l'installation et les raccordements sont terminés, appuyez sur la touche RESET avec un stylo à bille, etc.





(AEP, UK models)

**Power connection diagram**

Auxiliary power connector may vary depending on the car. Check your car's auxiliary power connector diagram to make sure the connections match correctly. There are three basic types (illustrated below). You may need to switch the positions of the red and yellow leads in the car stereo's power connecting cord.

After matching the connections and switched power supply leads correctly, connect the unit to the car's power supply. If you have any questions and problems connecting your unit that are not covered in this manual, please consult the car dealer.

**Diagramma dei collegamenti di alimentazione**

Il connettore di alimentazione ausiliaria può variare a seconda della macchina.

Controllare il diagramma del connettore di alimentazione ausiliaria della macchina per essere sicuri che le connessioni corrispondano correttamente. Vi sono tre tipi di base (illustrazione sotto). Potrà essere necessario cambiare le posizioni dei conduttori rosso e giallo nel cavo di alimentazione dello stereo della macchina. Dopo aver fatto corrispondere le connessioni e i cavi di alimentazione commutata, collegare l'apparecchio all'alimentazione della macchina. Se si hanno domande o se sorgono problemi che non sono stati trattati nel manuale nel collegare l'apparecchio, contattare l'autoconcessionario.

**Stromanschlußdiagramm**

Der Hilfsstromanschluß kann je nach Fahrzeugtyp unterschiedlich sein. Sehen Sie im Hilfsstromanschlußdiagramm für Ihr Fahrzeug nach, wie die Verbindung ordnungsgemäß vorgenommen werden muß. Es gibt, wie unten abgebildet, drei grundlegende Typen.

Sie müssen möglicherweise die rote und gelbe Leitung des Stromversorgungskabels der Autostereoanlage vertauschen. Stellen Sie die Anschlüsse her, schließen Sie die geschalteten Stromversorgungsleitungen richtig an, und verbinden Sie dann das Gerät mit der Stromversorgung Ihres Fahrzeugs. Wenn beim Anschließen des Geräts Fragen oder Probleme auftreten, die in dieser Bedienungsanleitung nicht erläutert werden, wenden Sie sich bitte an den Autohändler.

**Voedingsaansluitschema**

De hulpvoedingsaansluiting kan verschillen naargelang van de wagen. Controleer het voedingsaansluitschema dat bij dit toestel wordt geleverd om te zien of de aansluitingen kloppen. Er zijn drie basistypes (zie illustratie hieronder).

Als de aansluitingen en geschakelde voedingskabels kloppen, sluit u het toestel aan op de voeding van de wagen. Indien u nog vragen of problemen hebt in verband met het aansluiten van het toestel die niet in deze handleiding vermeld staan, raadpleeg dan de autodealer.

**Schéma de connexion d'alimentation**

Le connecteur d'alimentation auxiliaire peut varier suivant le type de voiture. Vérifiez le schéma du connecteur d'alimentation auxiliaire de votre voiture pour vous assurer que les connexions correspondent. Il en existe trois types de base (illustrés ci-dessous). Il se peut que vous deviez commuter la position du fil rouge et jaune du cordon d'alimentation de l'autoradio.

Après avoir établi les connexions et commuté correctement les fils d'alimentation, raccordez l'appareil à l'alimentation de la voiture. Si vous avez des questions ou des difficultés à propos de cet appareil qui ne sont pas abordées dans le présent mode d'emploi, consultez votre revendeur automobile.

Auxiliary power connector  
Hilfsstromanschluß  
Conneteur d'alimentation auxiliaire  
Connetore di alimentazione ausiliaria  
Hulpvoedingsaansluiting

**a**

4	Yellow Gelb Jaune Giallo Geel	continuous power supply permanente Stromversorgung alimentation continue alimentazione continua continuu voeding	7	Red Rot Rouge Rosso Rood	switched power supply geschaltete Stromversorgung alimentation commutée alimentazione commutata geschakelde voeding
---	---	--	---	--------------------------------------	---

**b**

4	Yellow Gelb Jaune Giallo Geel	switched power supply geschaltete Stromversorgung alimentation commutée alimentazione commutata geschakelde voeding	7	Red Rot Rouge Rosso Rood	continuous power supply permanente Stromversorgung alimentation continue alimentazione continua continuu voeding
---	---	---	---	--------------------------------------	--

**c**

the car without ACC position  
Fahrzeug ohne Zubehörposition (ACC)  
Voiture sans position ACC  
la macchina senza posizione ACC  
Wagen zonder ACC stand

**6 A TOYOTA**

max. size 5 x 8 mm (1/2 x 11/32 in.)  
Dimension max. 5 x 8 mm (1/2 x 11/32 po.)

to dashboard/center console  
au tableau de bord/console centrale

Bracket Support

max. size 5 x 8 mm (1/2 x 11/32 in.)  
Dimension max. 5 x 8 mm (1/2 x 11/32 po.)

Existing parts supplied with your car  
Pièces existantes fournies avec la voiture

**B NISSAN**

max. size 5 x 8 mm (1/2 x 11/32 in.)  
Dimension max. 5 x 8 mm (1/2 x 11/32 po.)

to dashboard/center console  
au tableau de bord/console centrale

Bracket Support

max. size 5 x 8 mm (1/2 x 11/32 in.)  
Dimension max. 5 x 8 mm (1/2 x 11/32 po.)

Existing parts supplied with your car  
Pièces existantes fournies avec la voiture

## SECTION 2 DISASSEMBLY


• This set can be disassembled in the order shown below.

### 2-1. DISASSEMBLY FLOW

**Note 1:** The process described in [ ] can be performed in any order.


**Note 2:** Without completing the process described in [ ], the next process can not be performed.

**Note 3:** Illustration of disassembly is omitted.

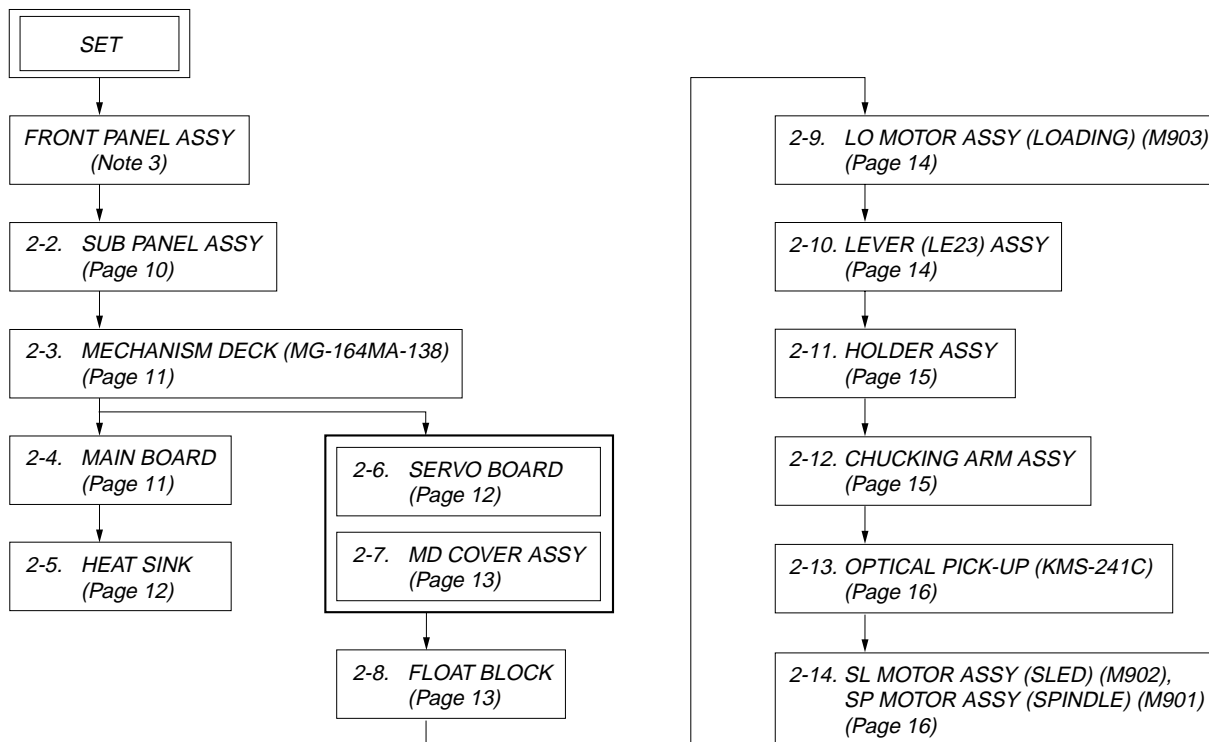


**Note:** Follow the disassembly procedure in the numerical order given.


### 2-2. SUB PANEL ASSY

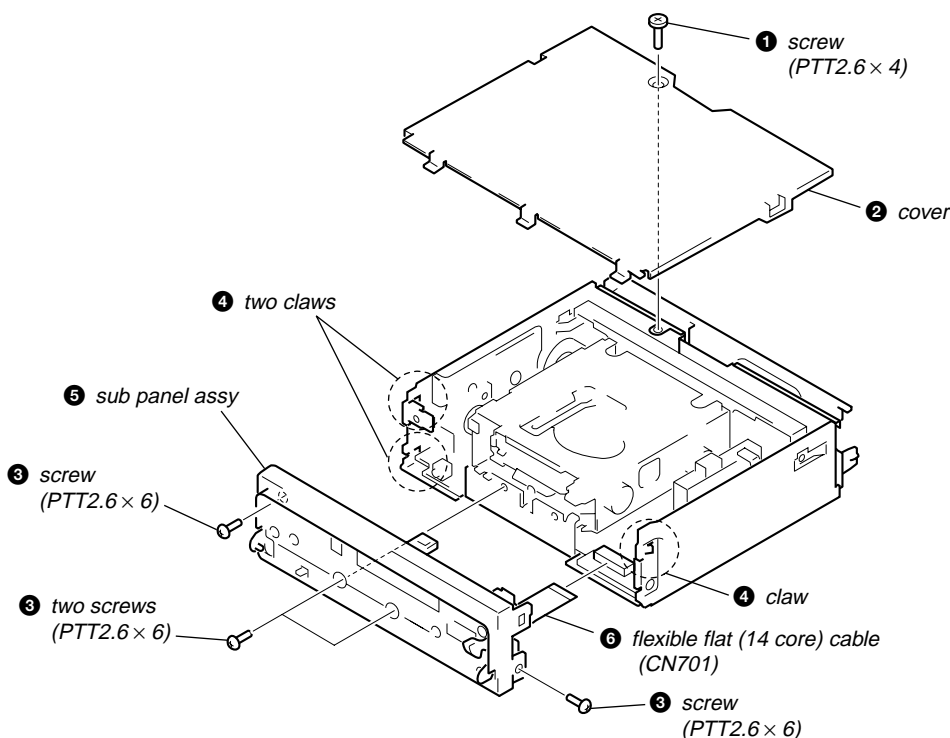


2-3. MECHANISM DECK (MG-164MA-138)

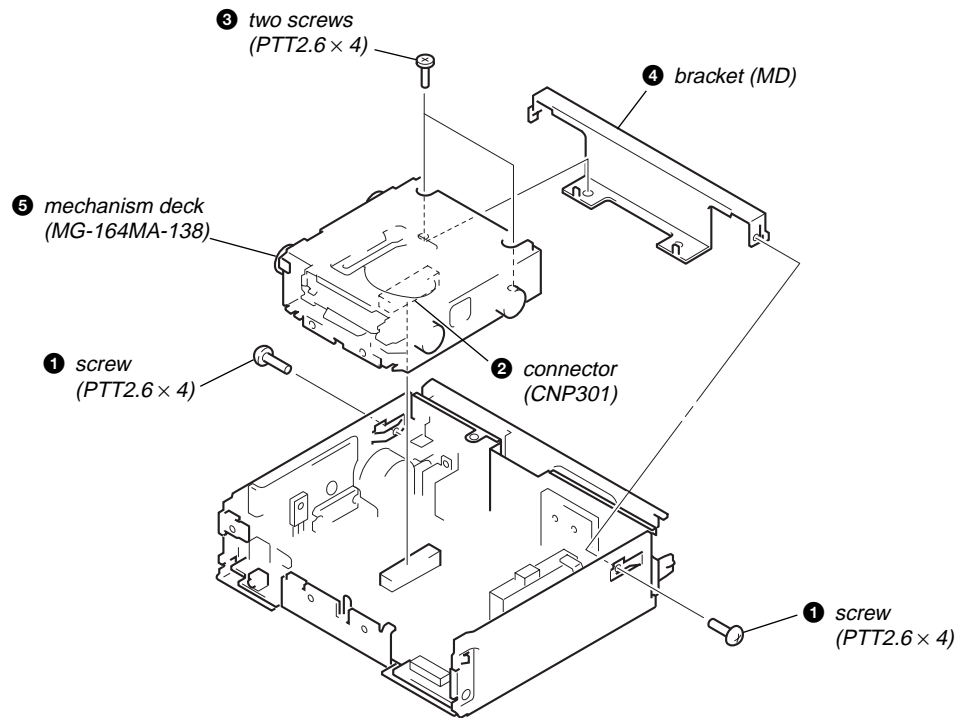


2-4. MAIN BOARD

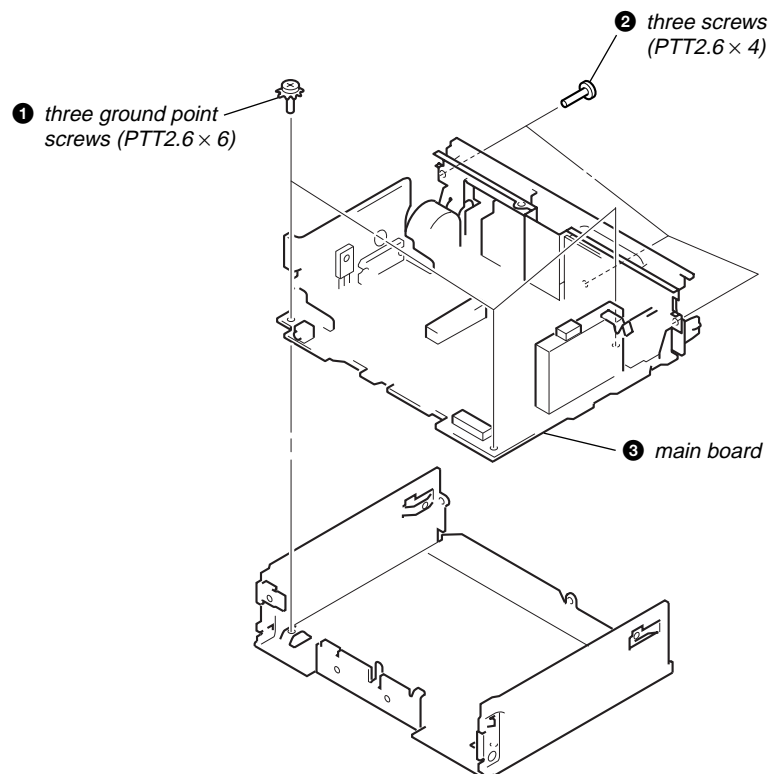


2-5. HEAT SINK

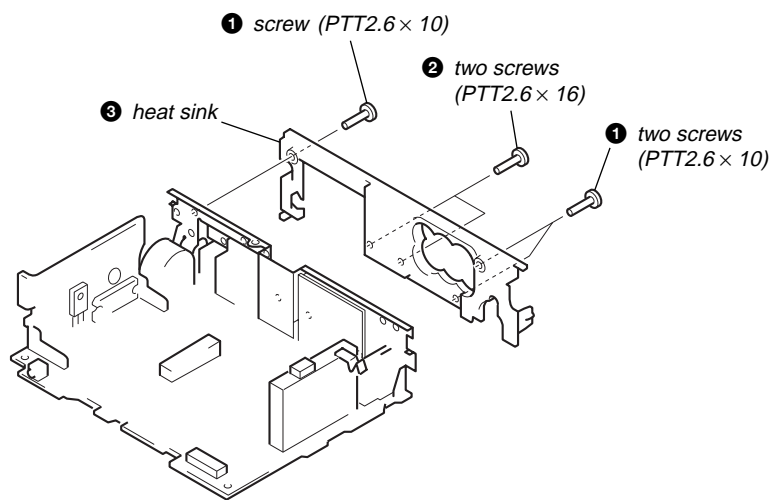


2-6. SERVO BOARD

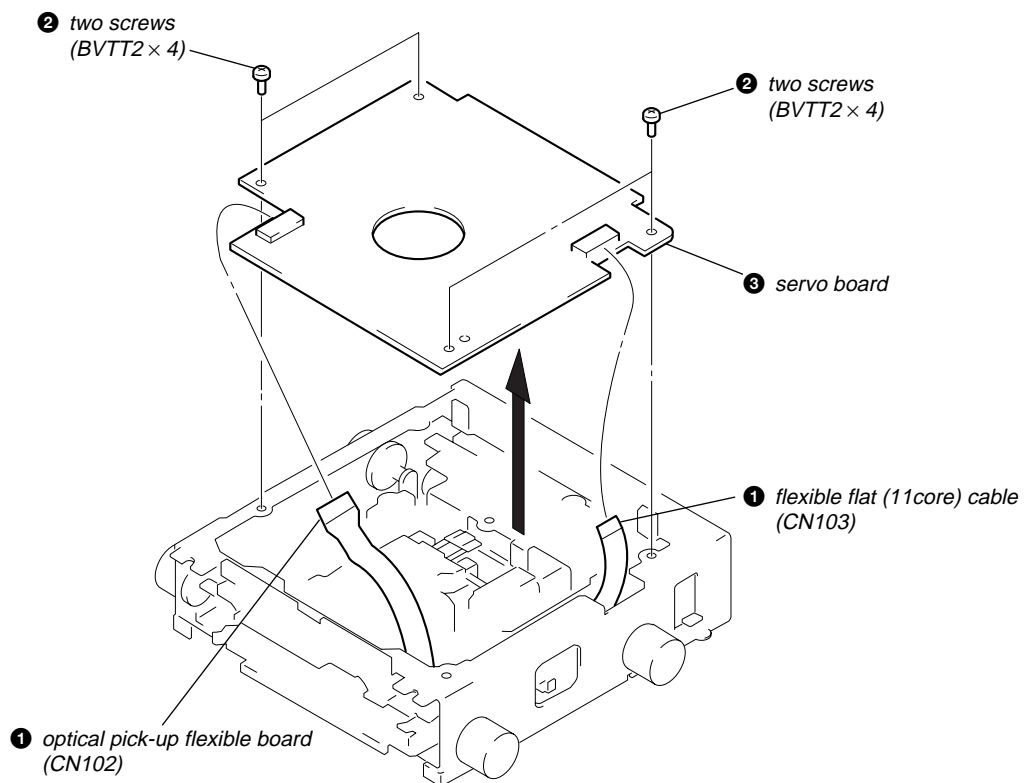


2-7. MD COVER ASSY

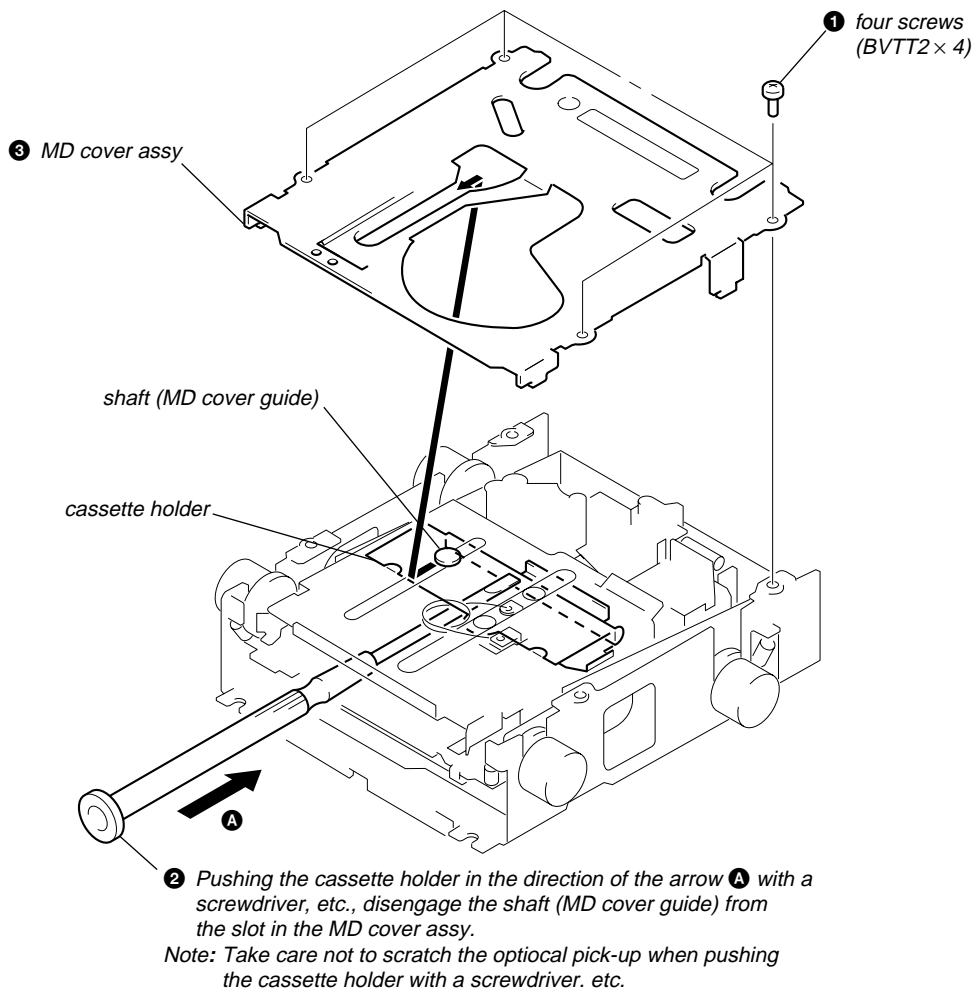


2-8. FLOAT BLOCK

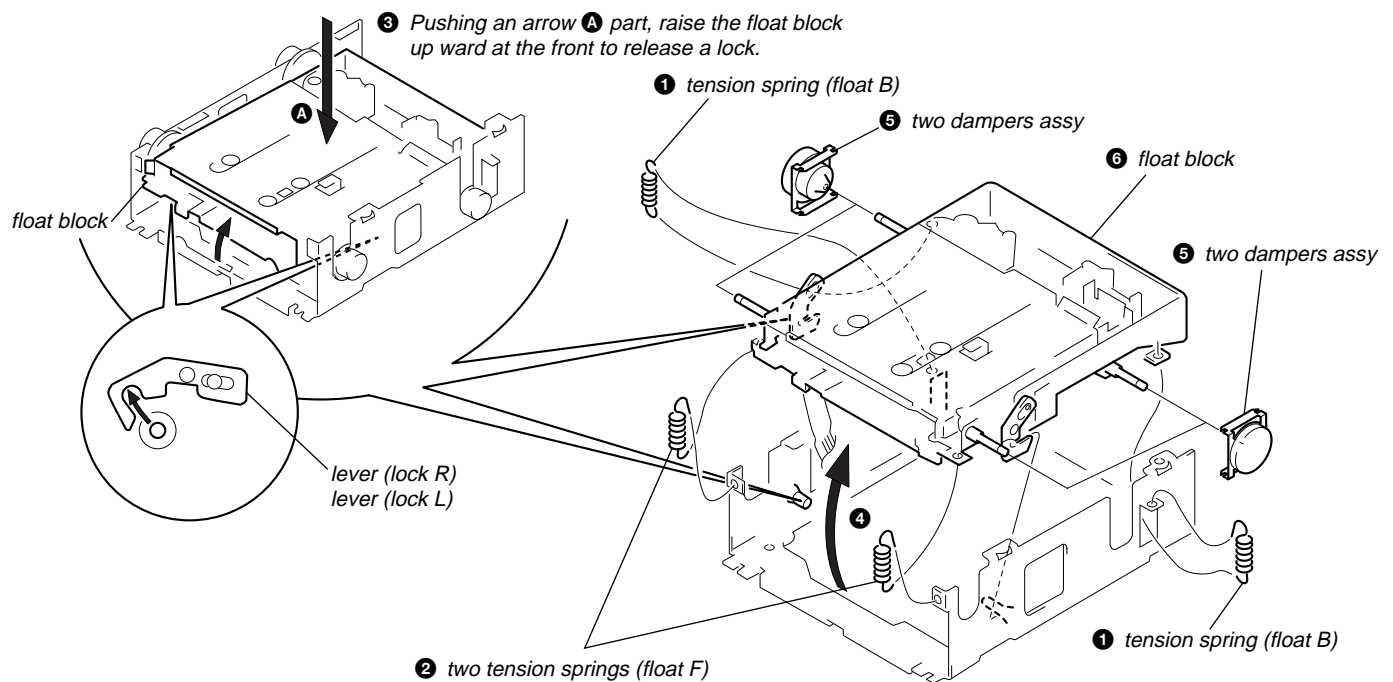


2-9. LO MOTOR ASSY (LOADING) (M903)

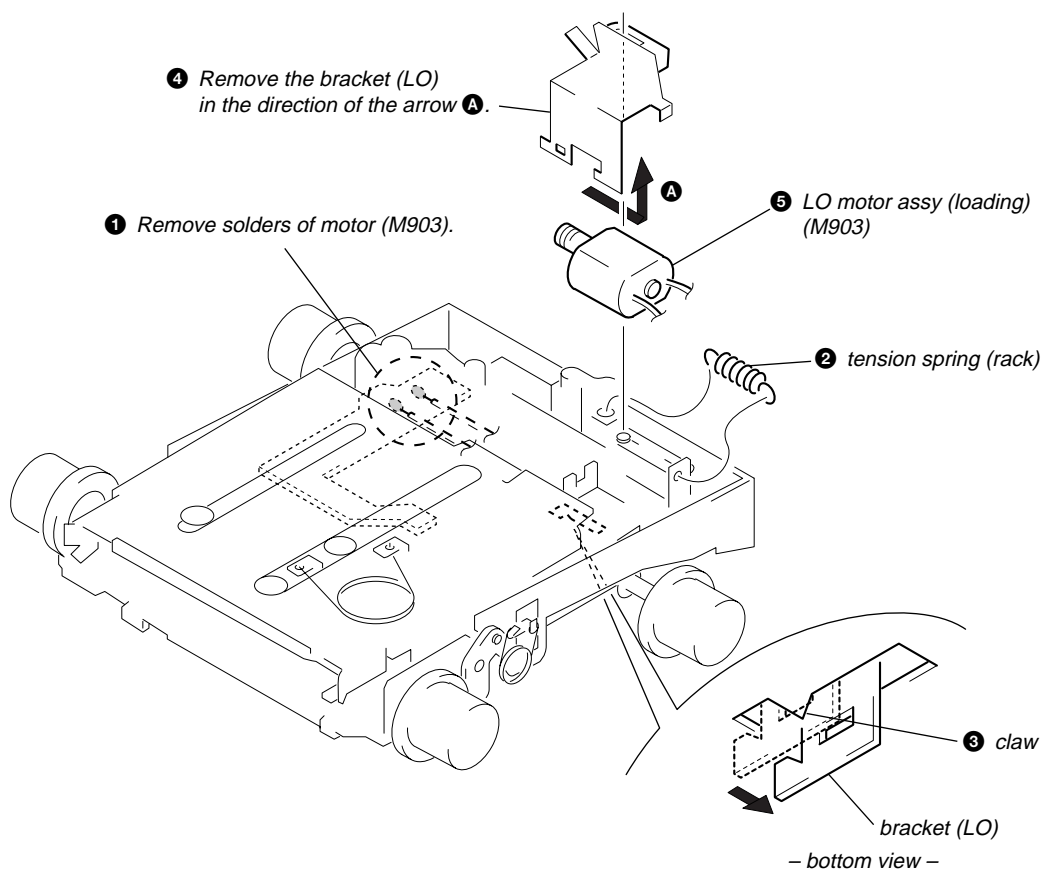


2-10. LEVER (LE23) ASSY

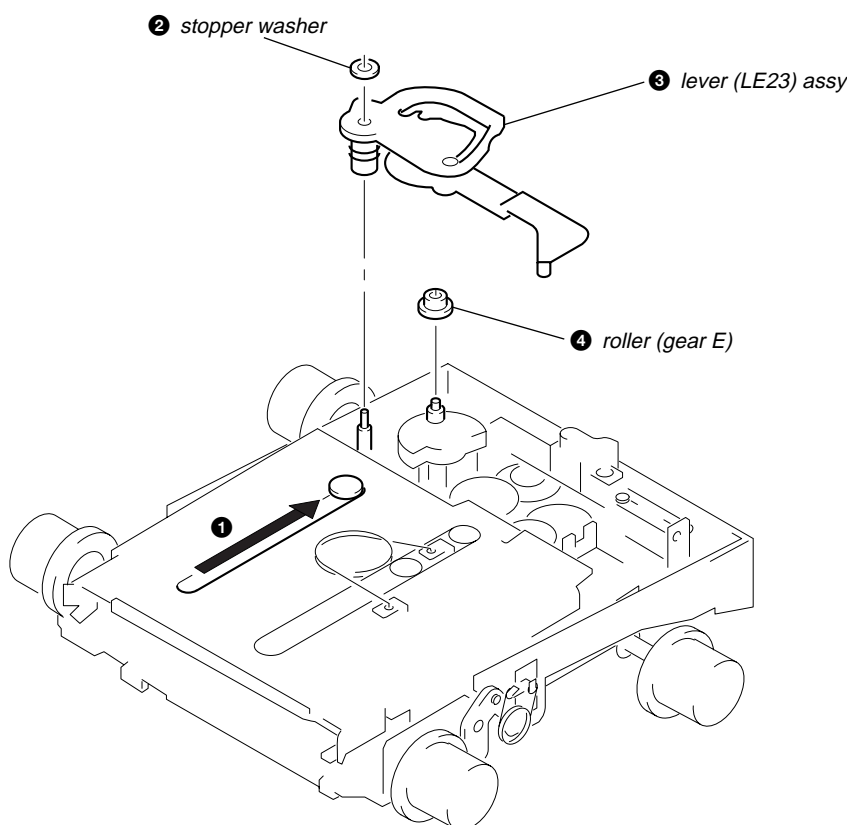


2-11. HOLDER ASSY

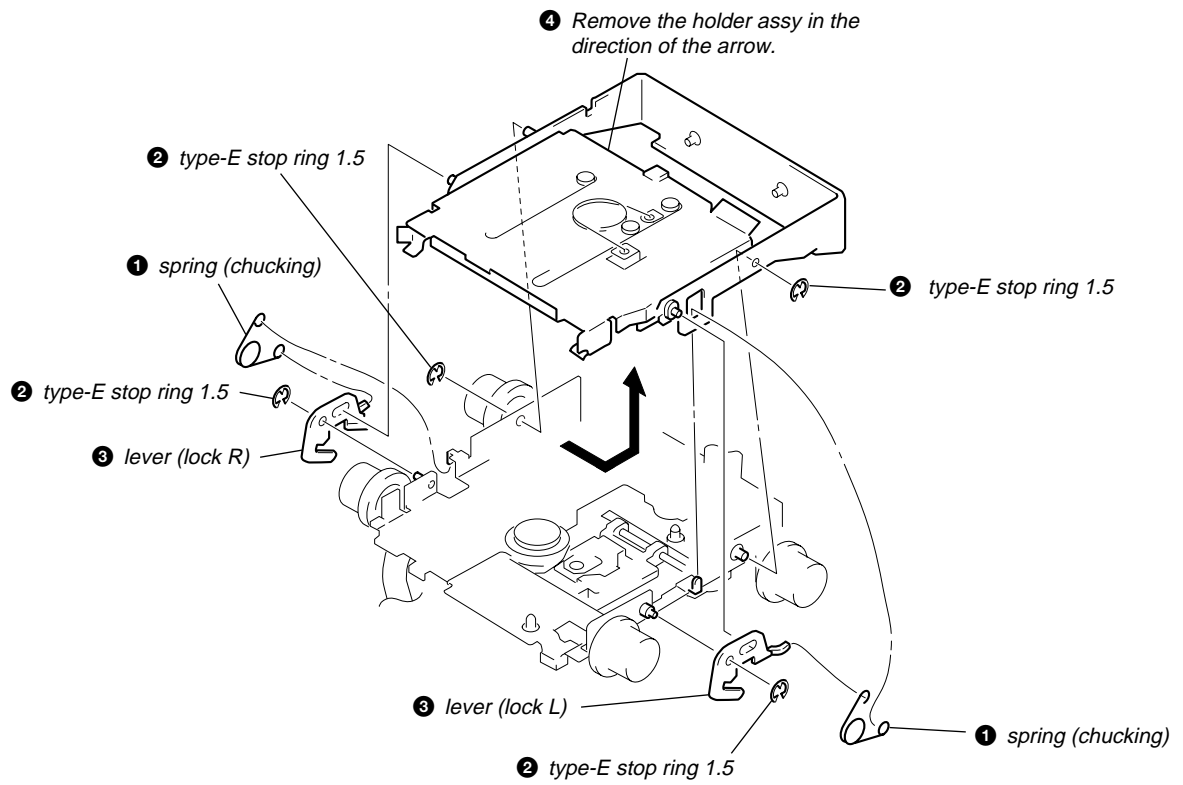


2-12. CHUCKING ARM ASSY

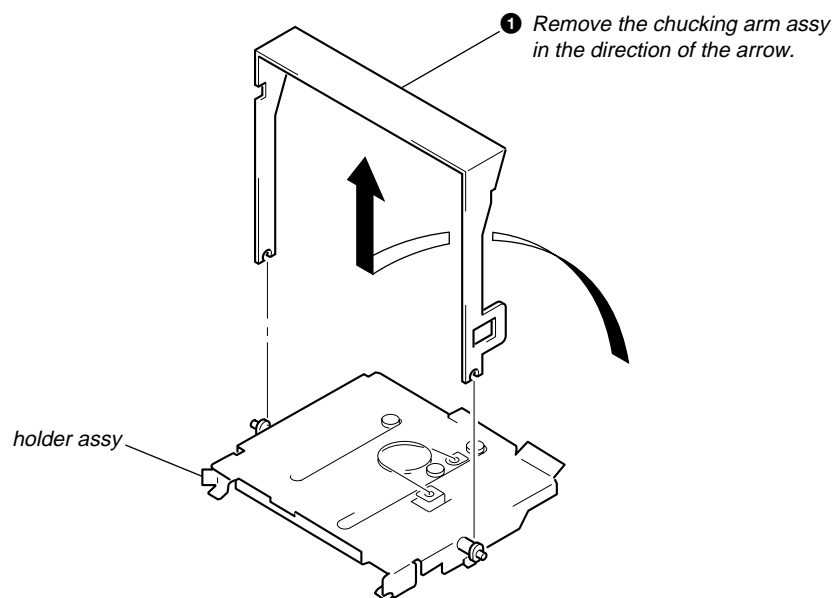

2-13. OPTICAL PICK-UP (KMS-241C)

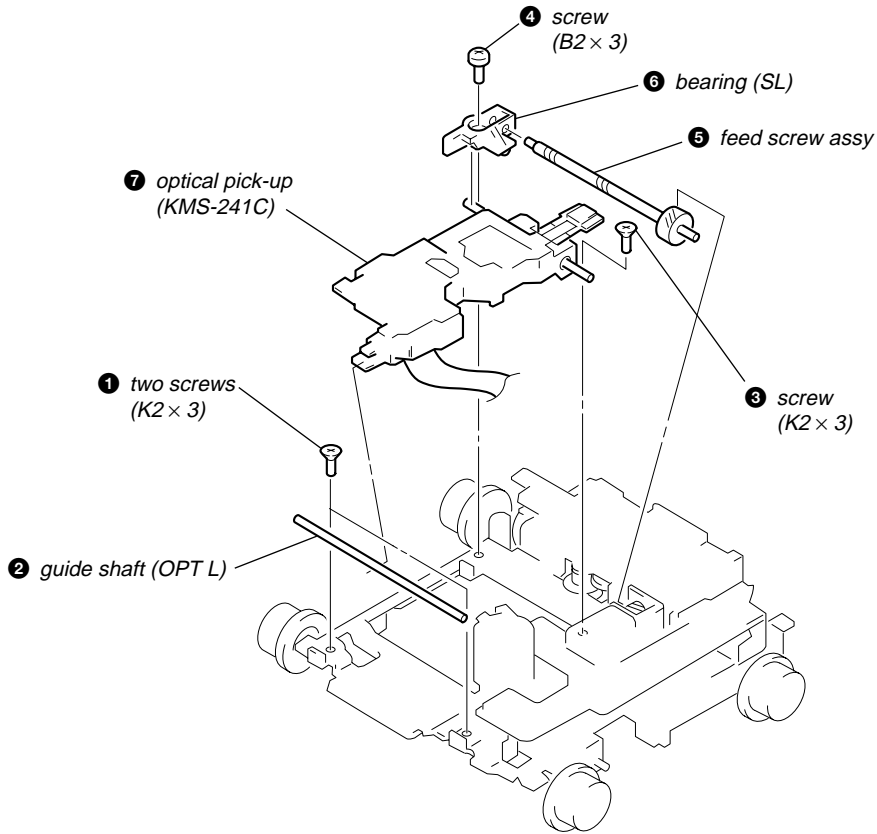

2-14. SL MOTOR ASSY (SLED) (M902), SP MOTOR ASSY (SPINDLE) (M901)

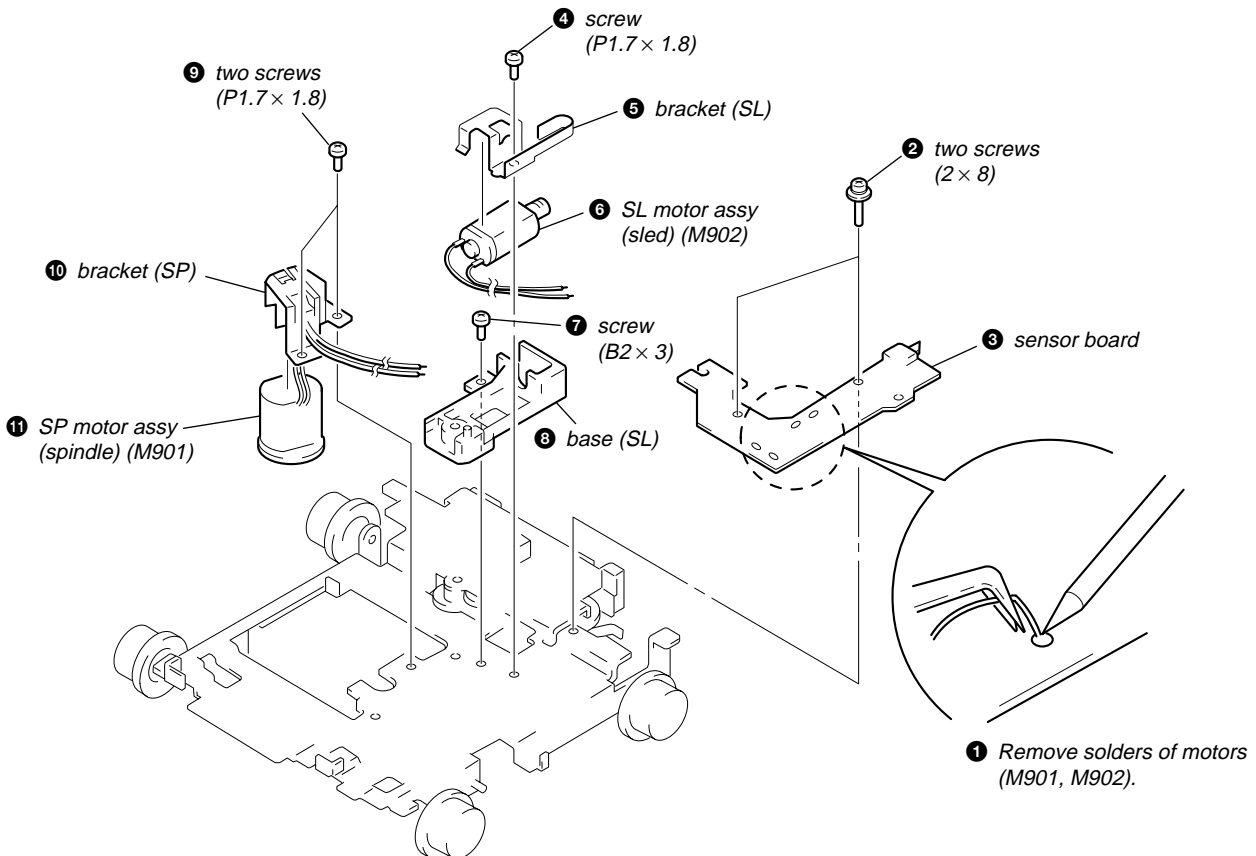



## SECTION 3 ELECTRICAL ADJUSTMENTS

### TEST MODE

This set have the test mode function.

<Set the Test Mode>

1. Turn ON the regulated power supply. (The clock is displayed)  
**Note:** Press the **OFF** button, if the clock is not displayed.
2. Push the preset **4** button.
3. Push the preset **5** button.
4. Press the preset **1** button for more than two seconds.
5. Then the display indicates all lights, the test mode is set.

<Release the Test mode>

1. Push the **OFF** button.

### MD SECTION

MD section adjustments are done automatically in this set.


### TUNER SECTION

Tuner section adjustments are done automatically in this set.


SECTION 4  
DIAGRAMS

• IC Block Diagrams  
– SERVO Board –


IC101 PCM1718E/2K

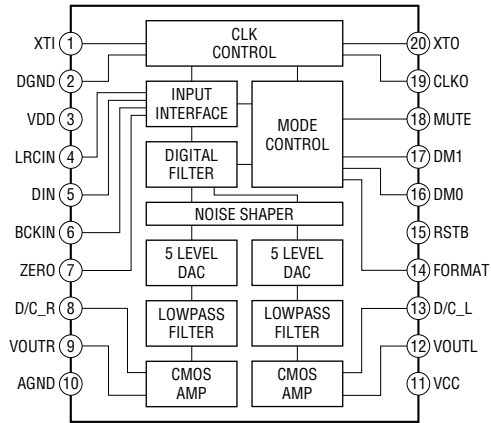

IC301 CXD2662R

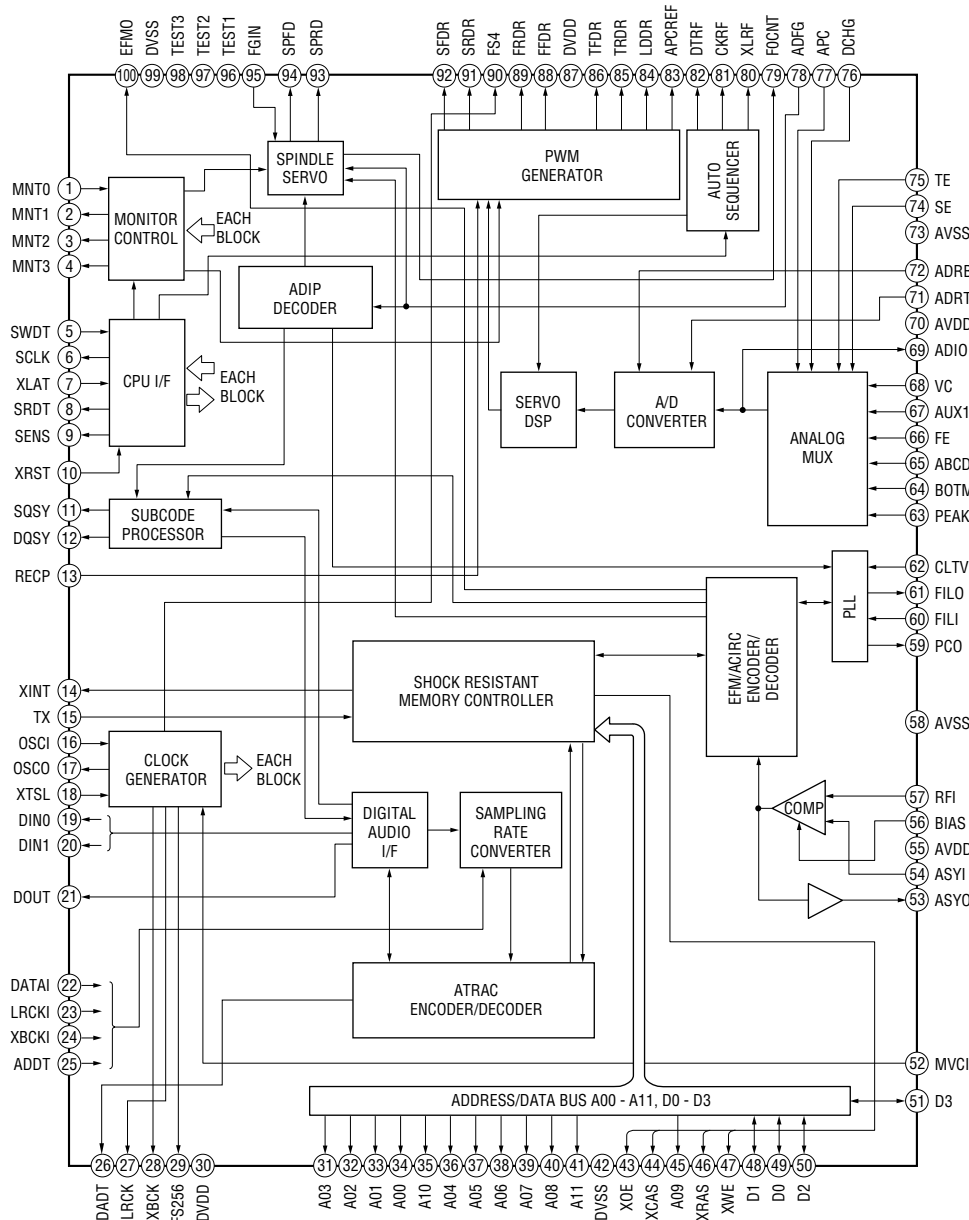


IC302 CXA2523AR

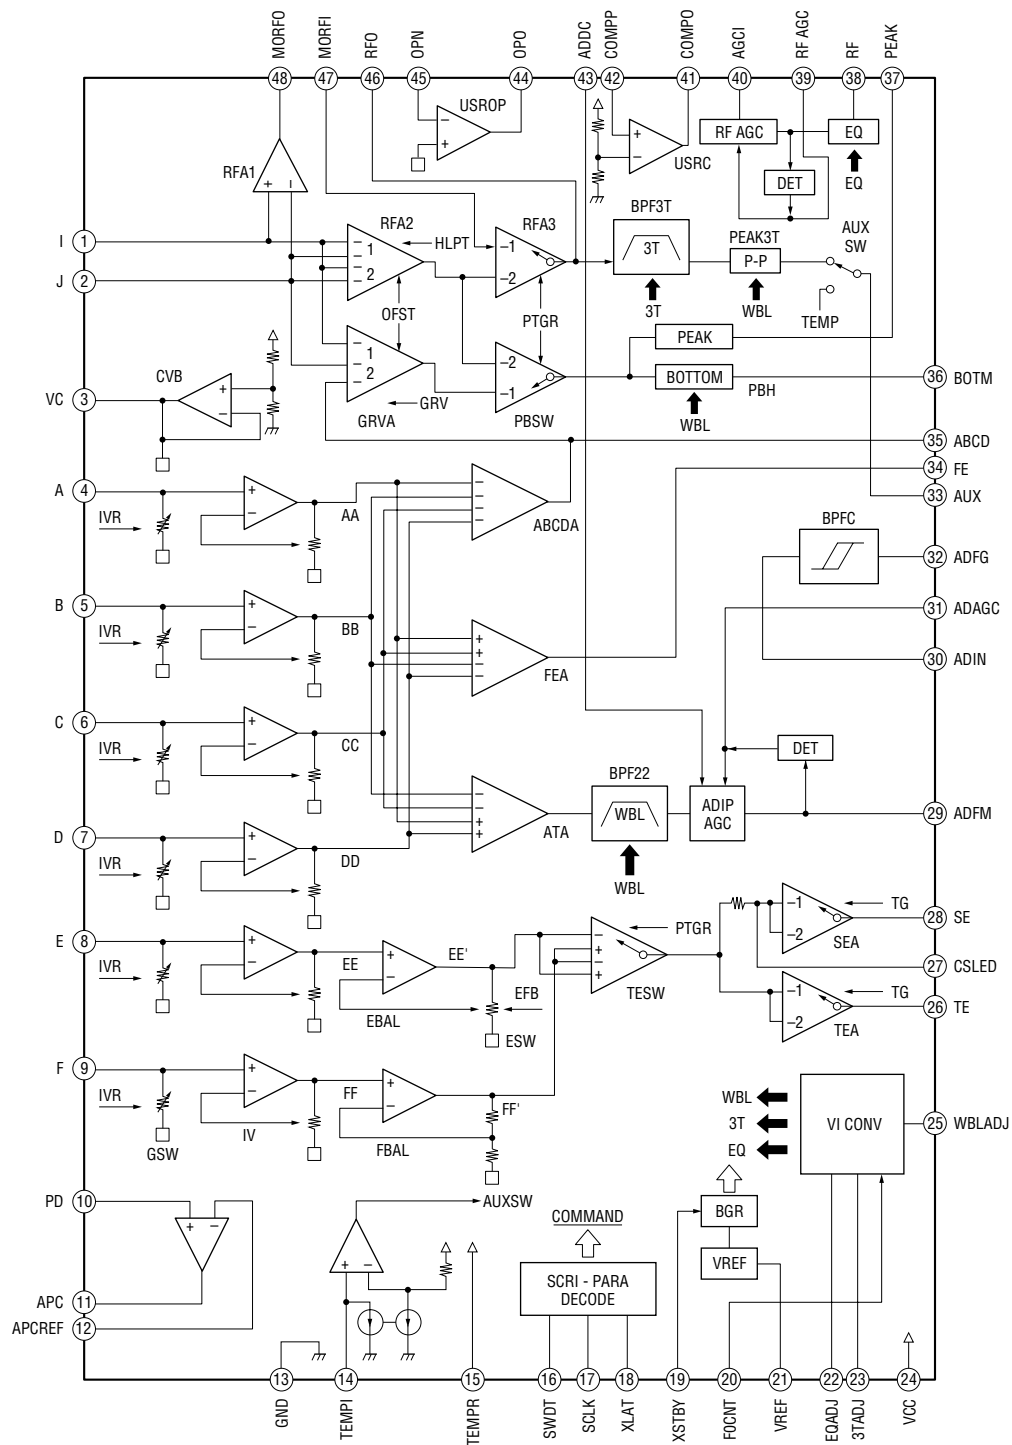


# MDX-CA680/CA680X


## IC303 BH6518FS-E2

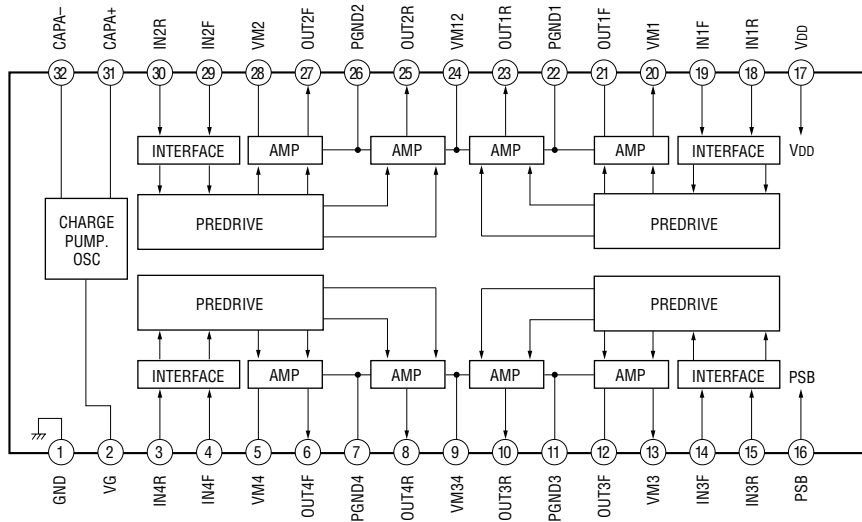

## IC305 BA6287F

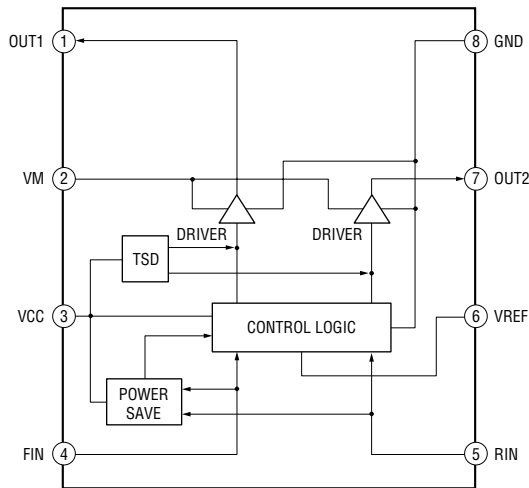


## IC307 MSM51V4400E-70TS-K

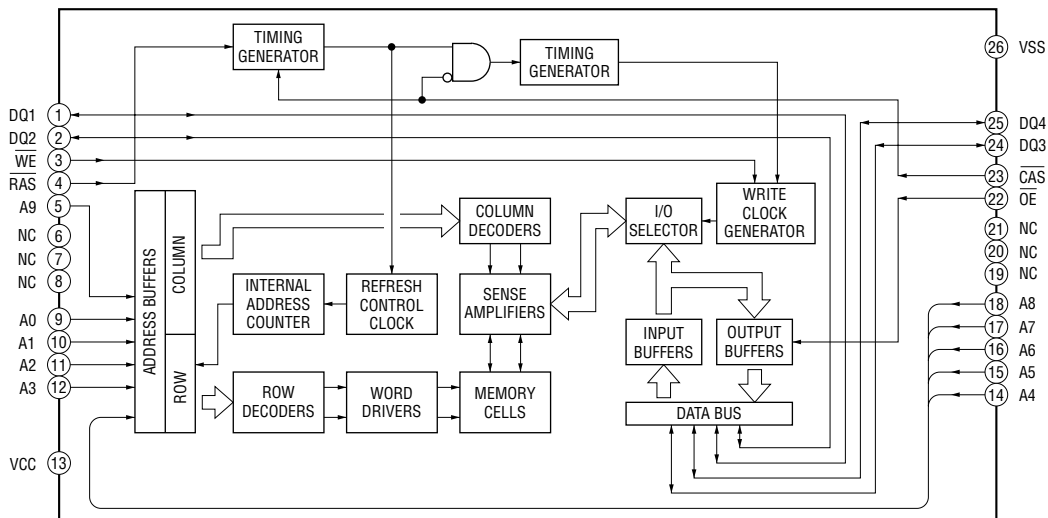


- MAIN Board -

IC401 TDA7402TR

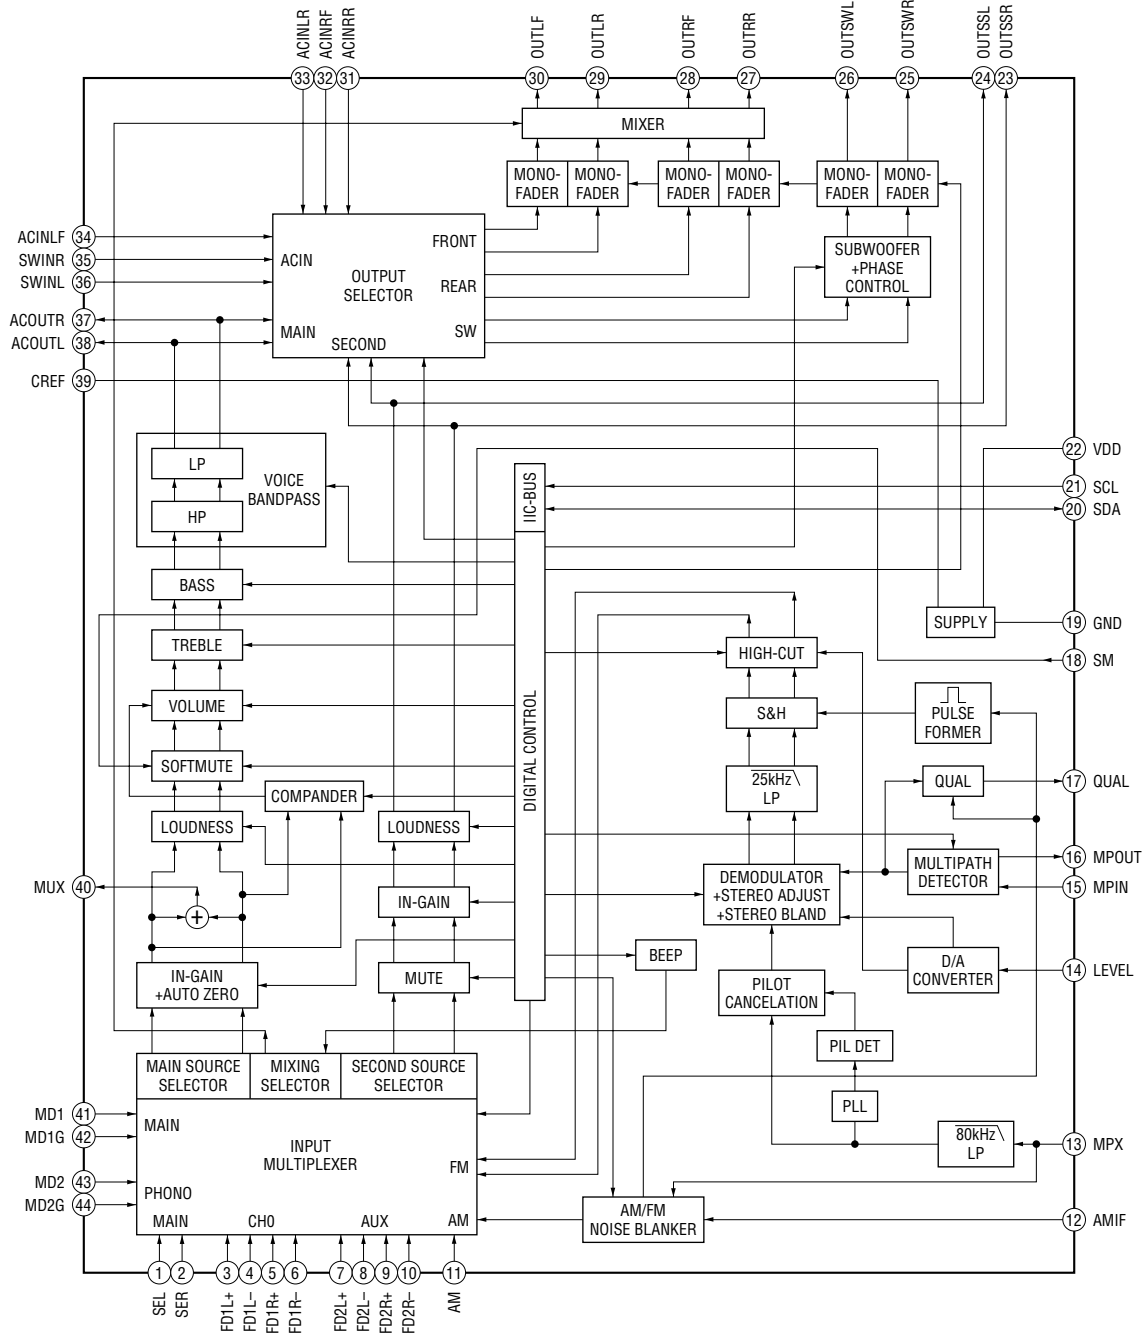


# MDX-CA680/CA680X


## IC51 SAA6588T-118

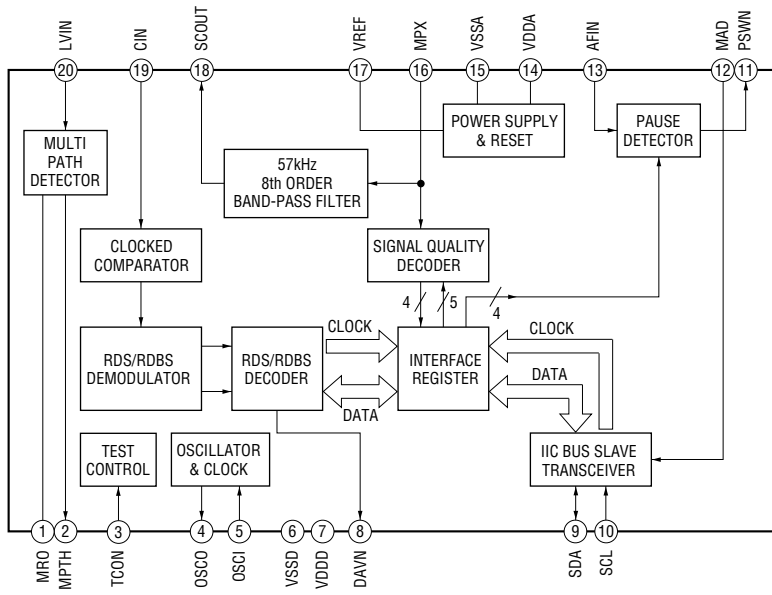


## IC505 BA8270F-E2

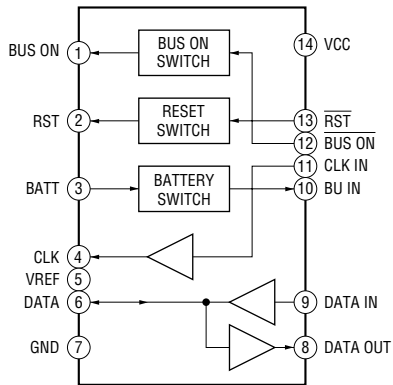


## IC601 BA4908-V3

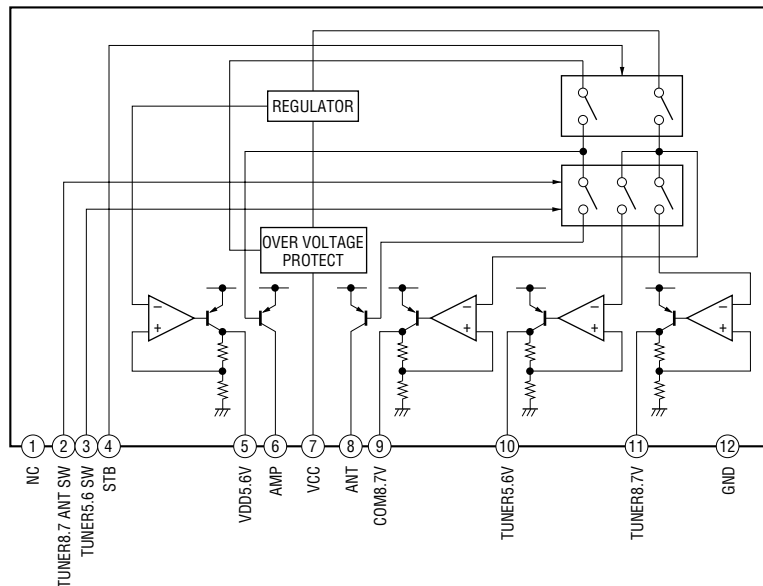

4-1. BLOCK DIAGRAM – SERVO Section –

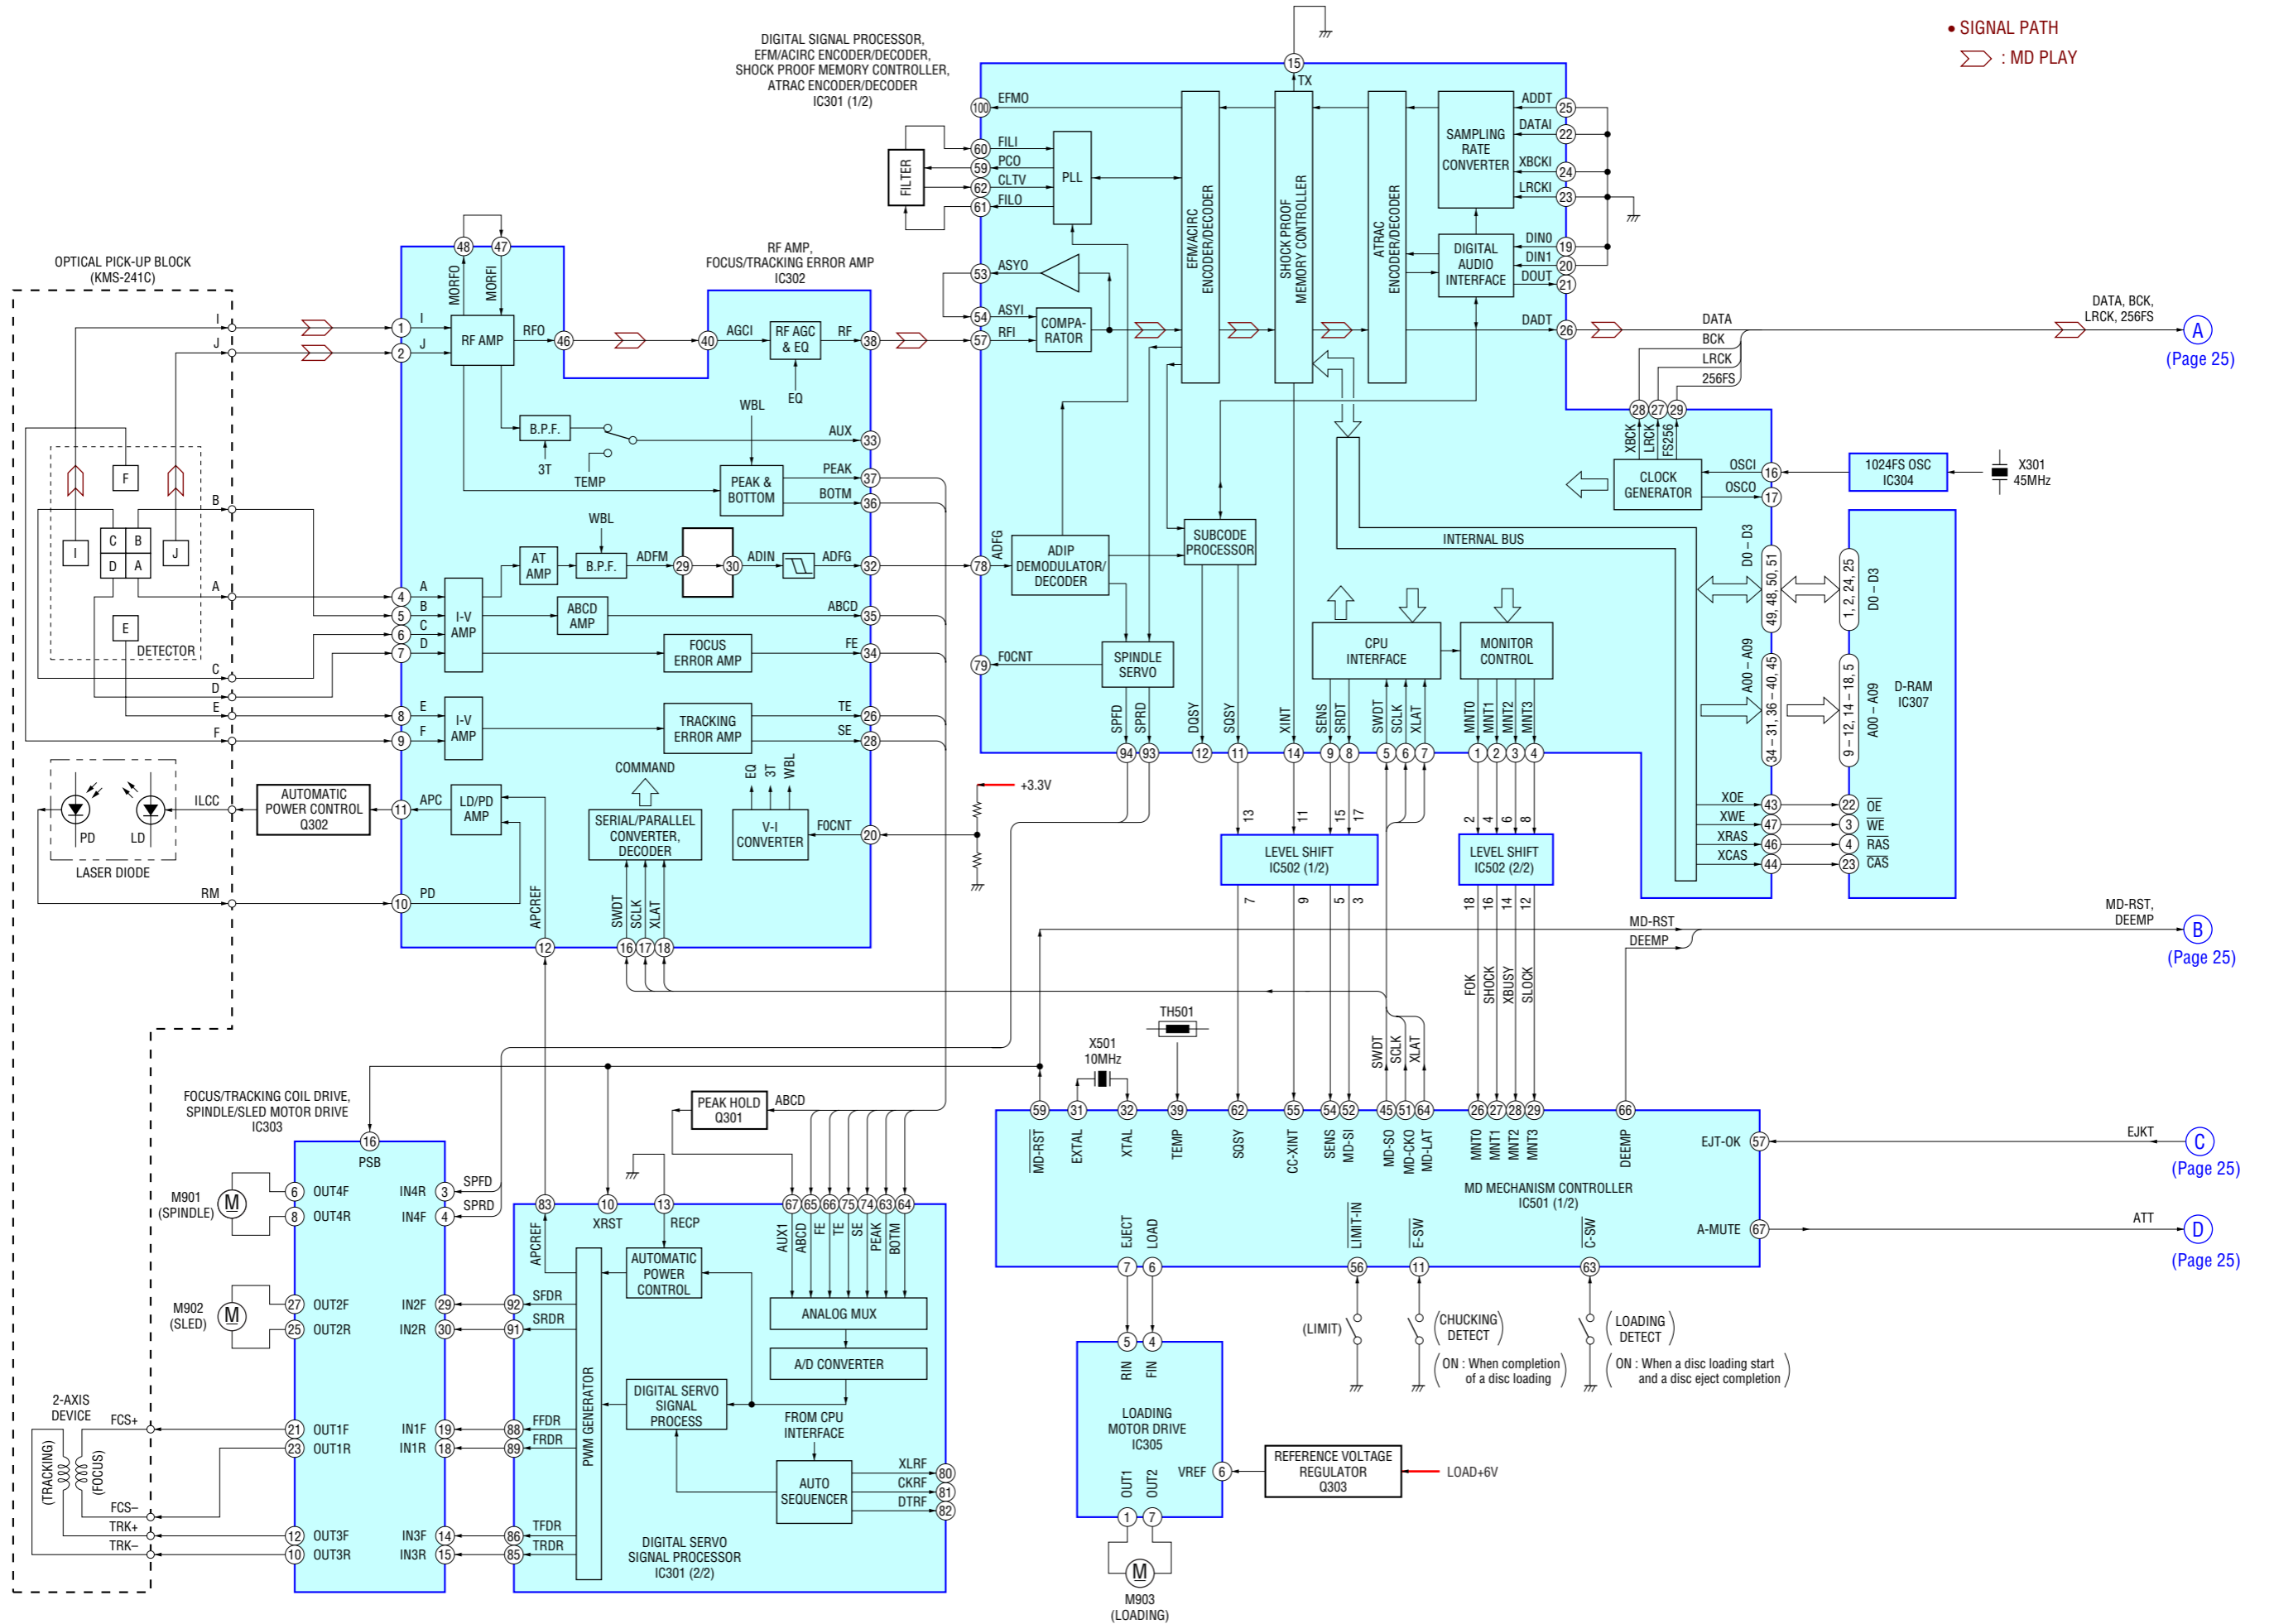


4-2. BLOCK DIAGRAM – TUNER Section –

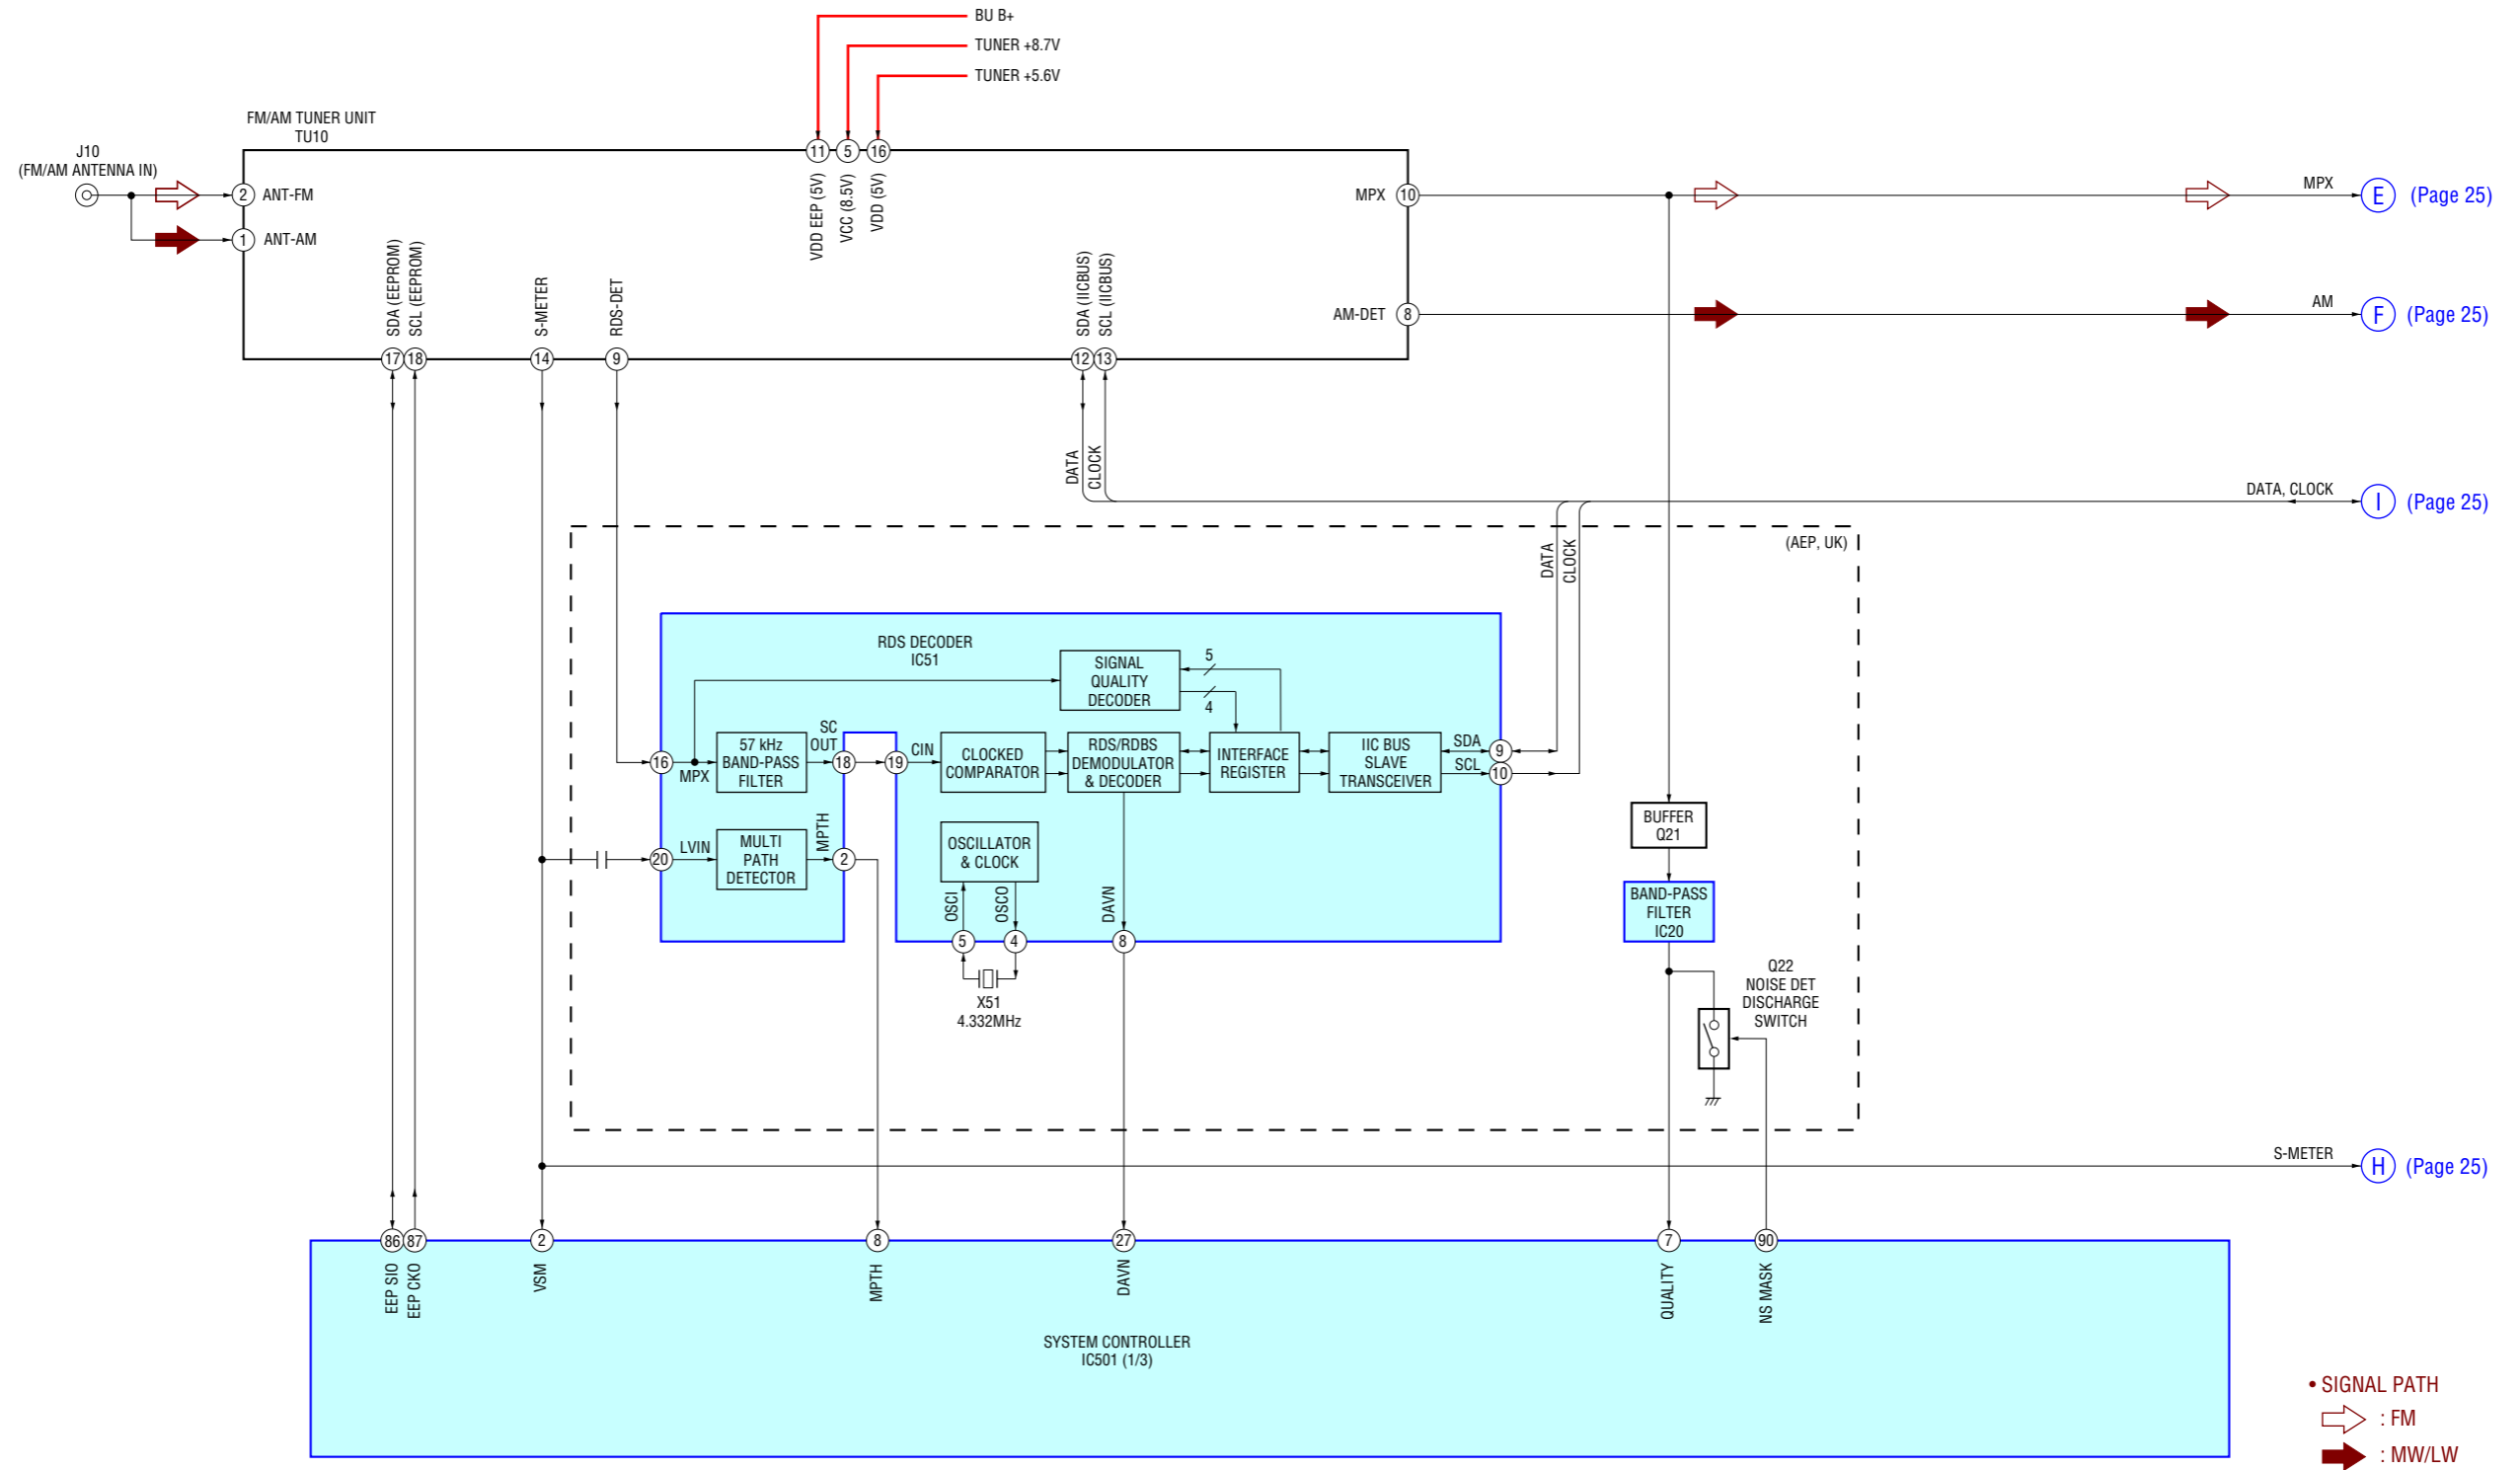




4-3. BLOCK DIAGRAM – MAIN Section –

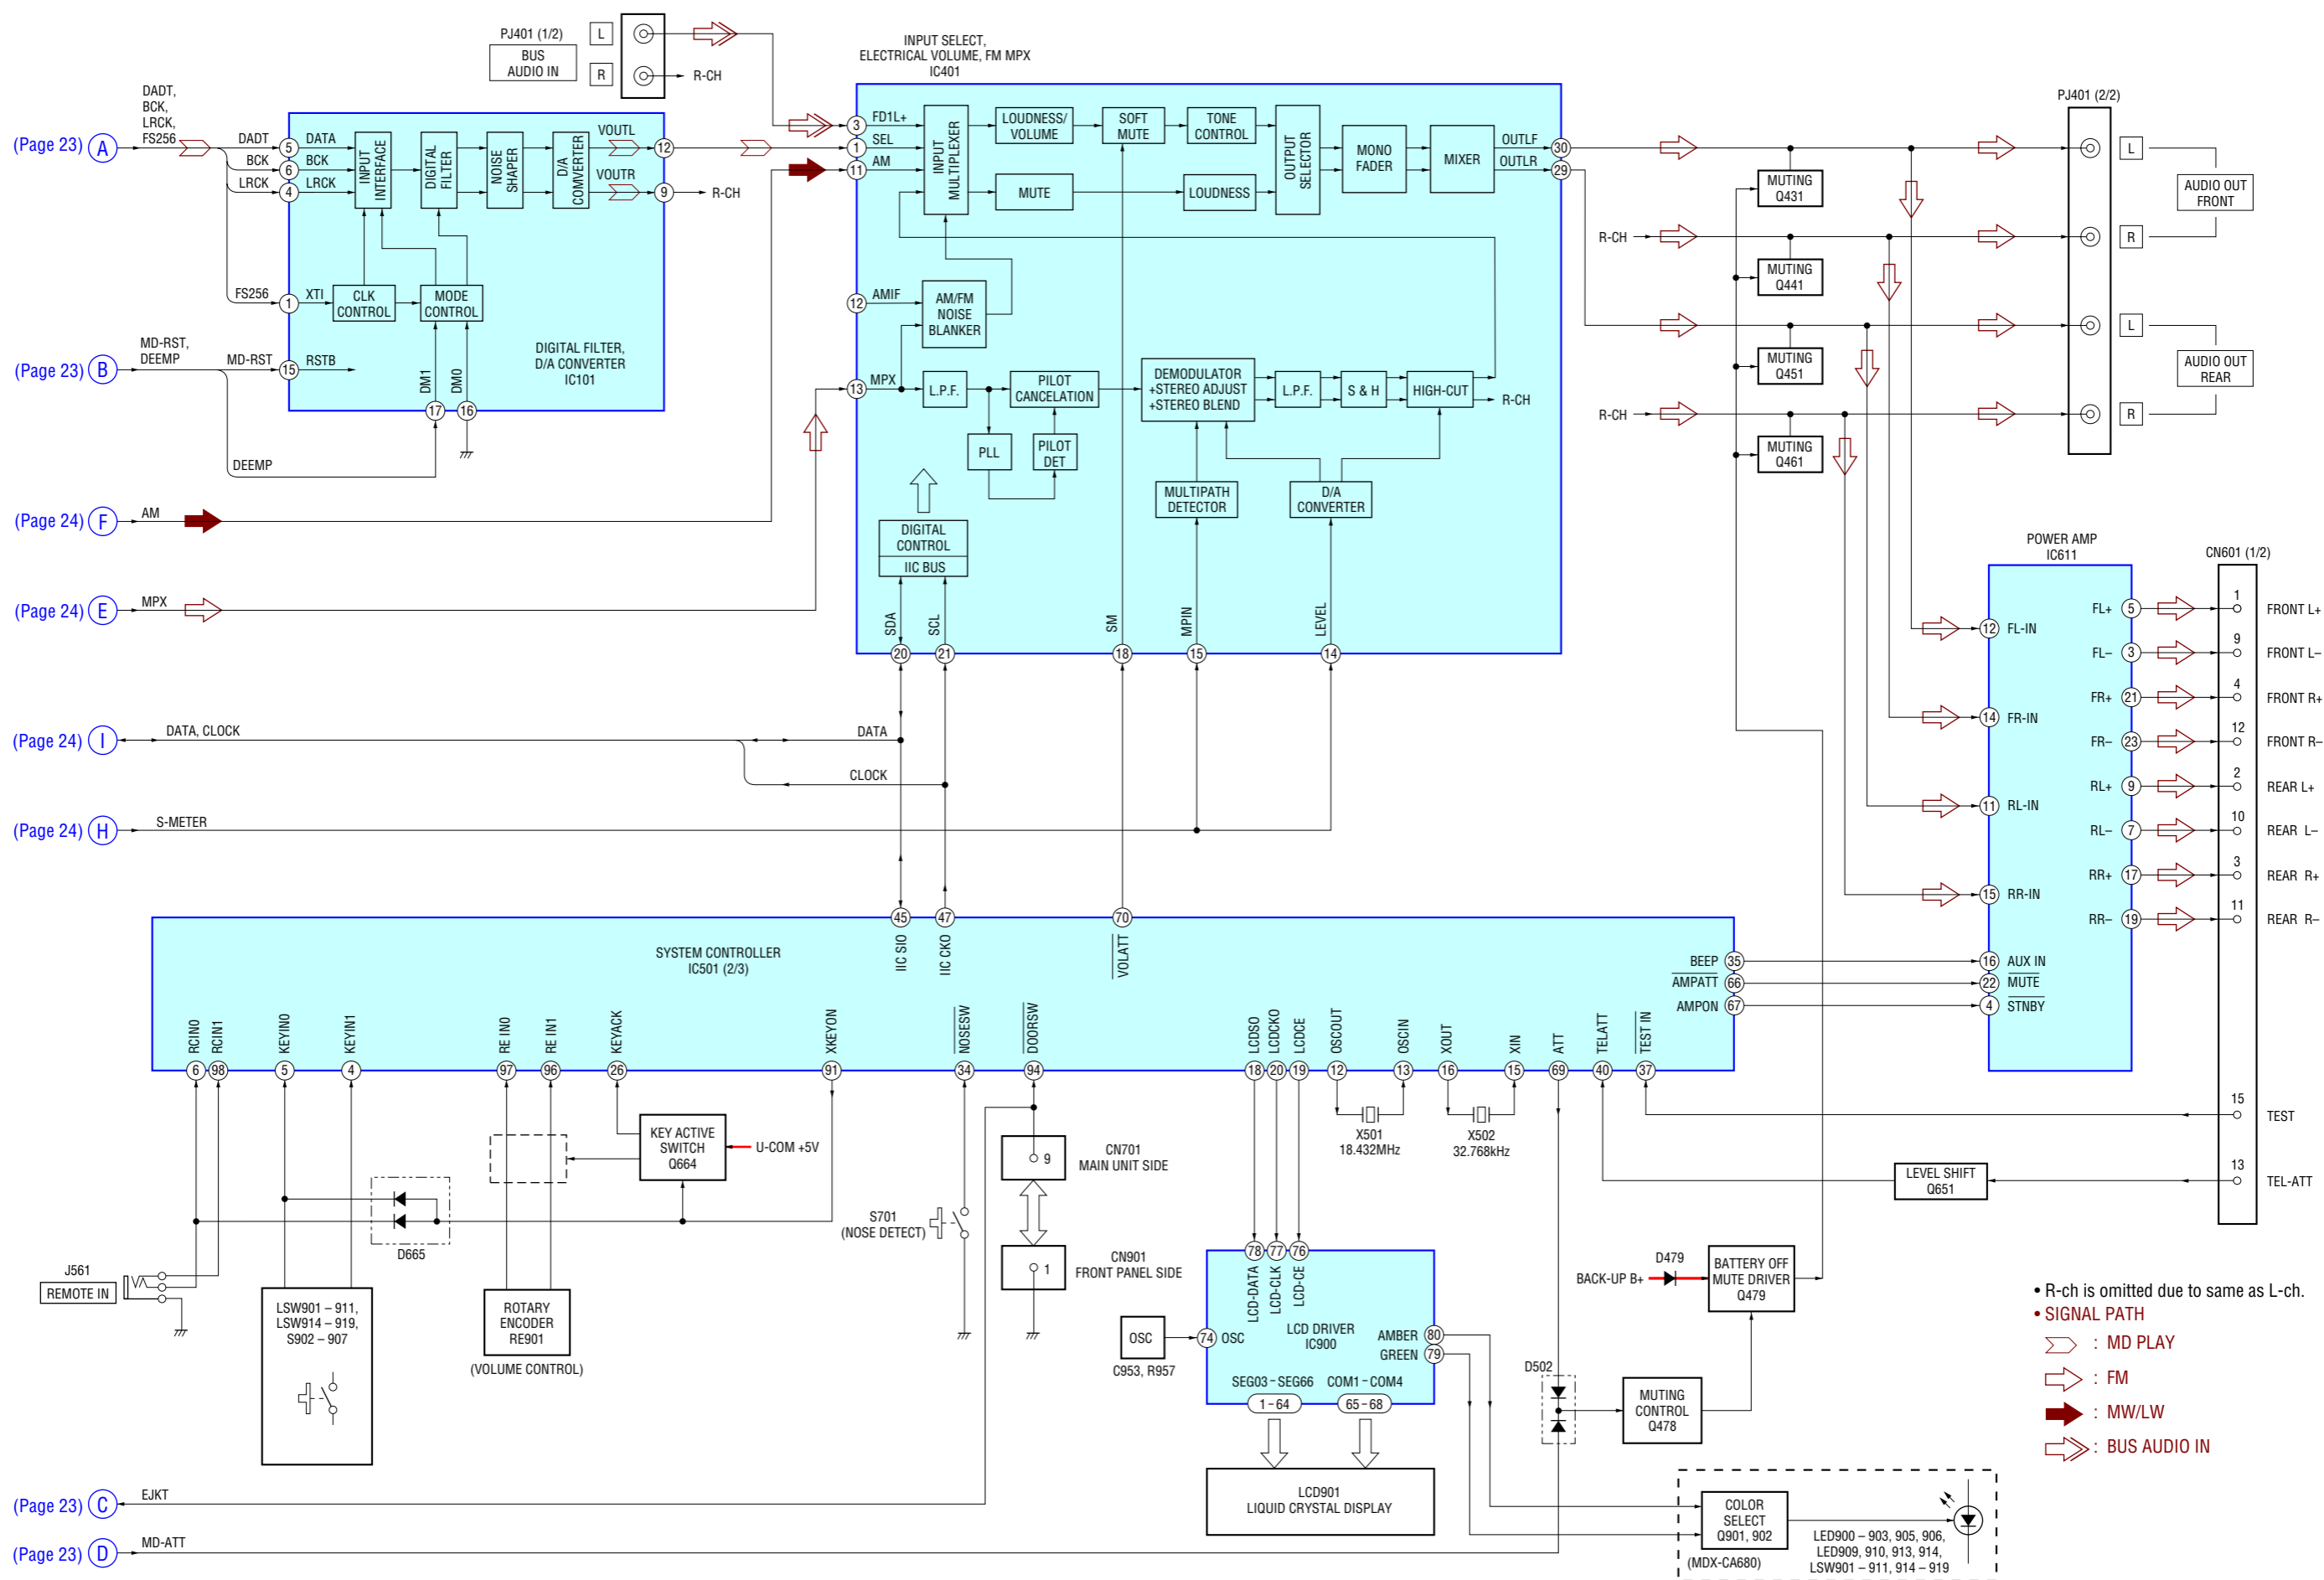






4-4. BLOCK DIAGRAM – BUS CONTROL/POWER SUPPLY Section –

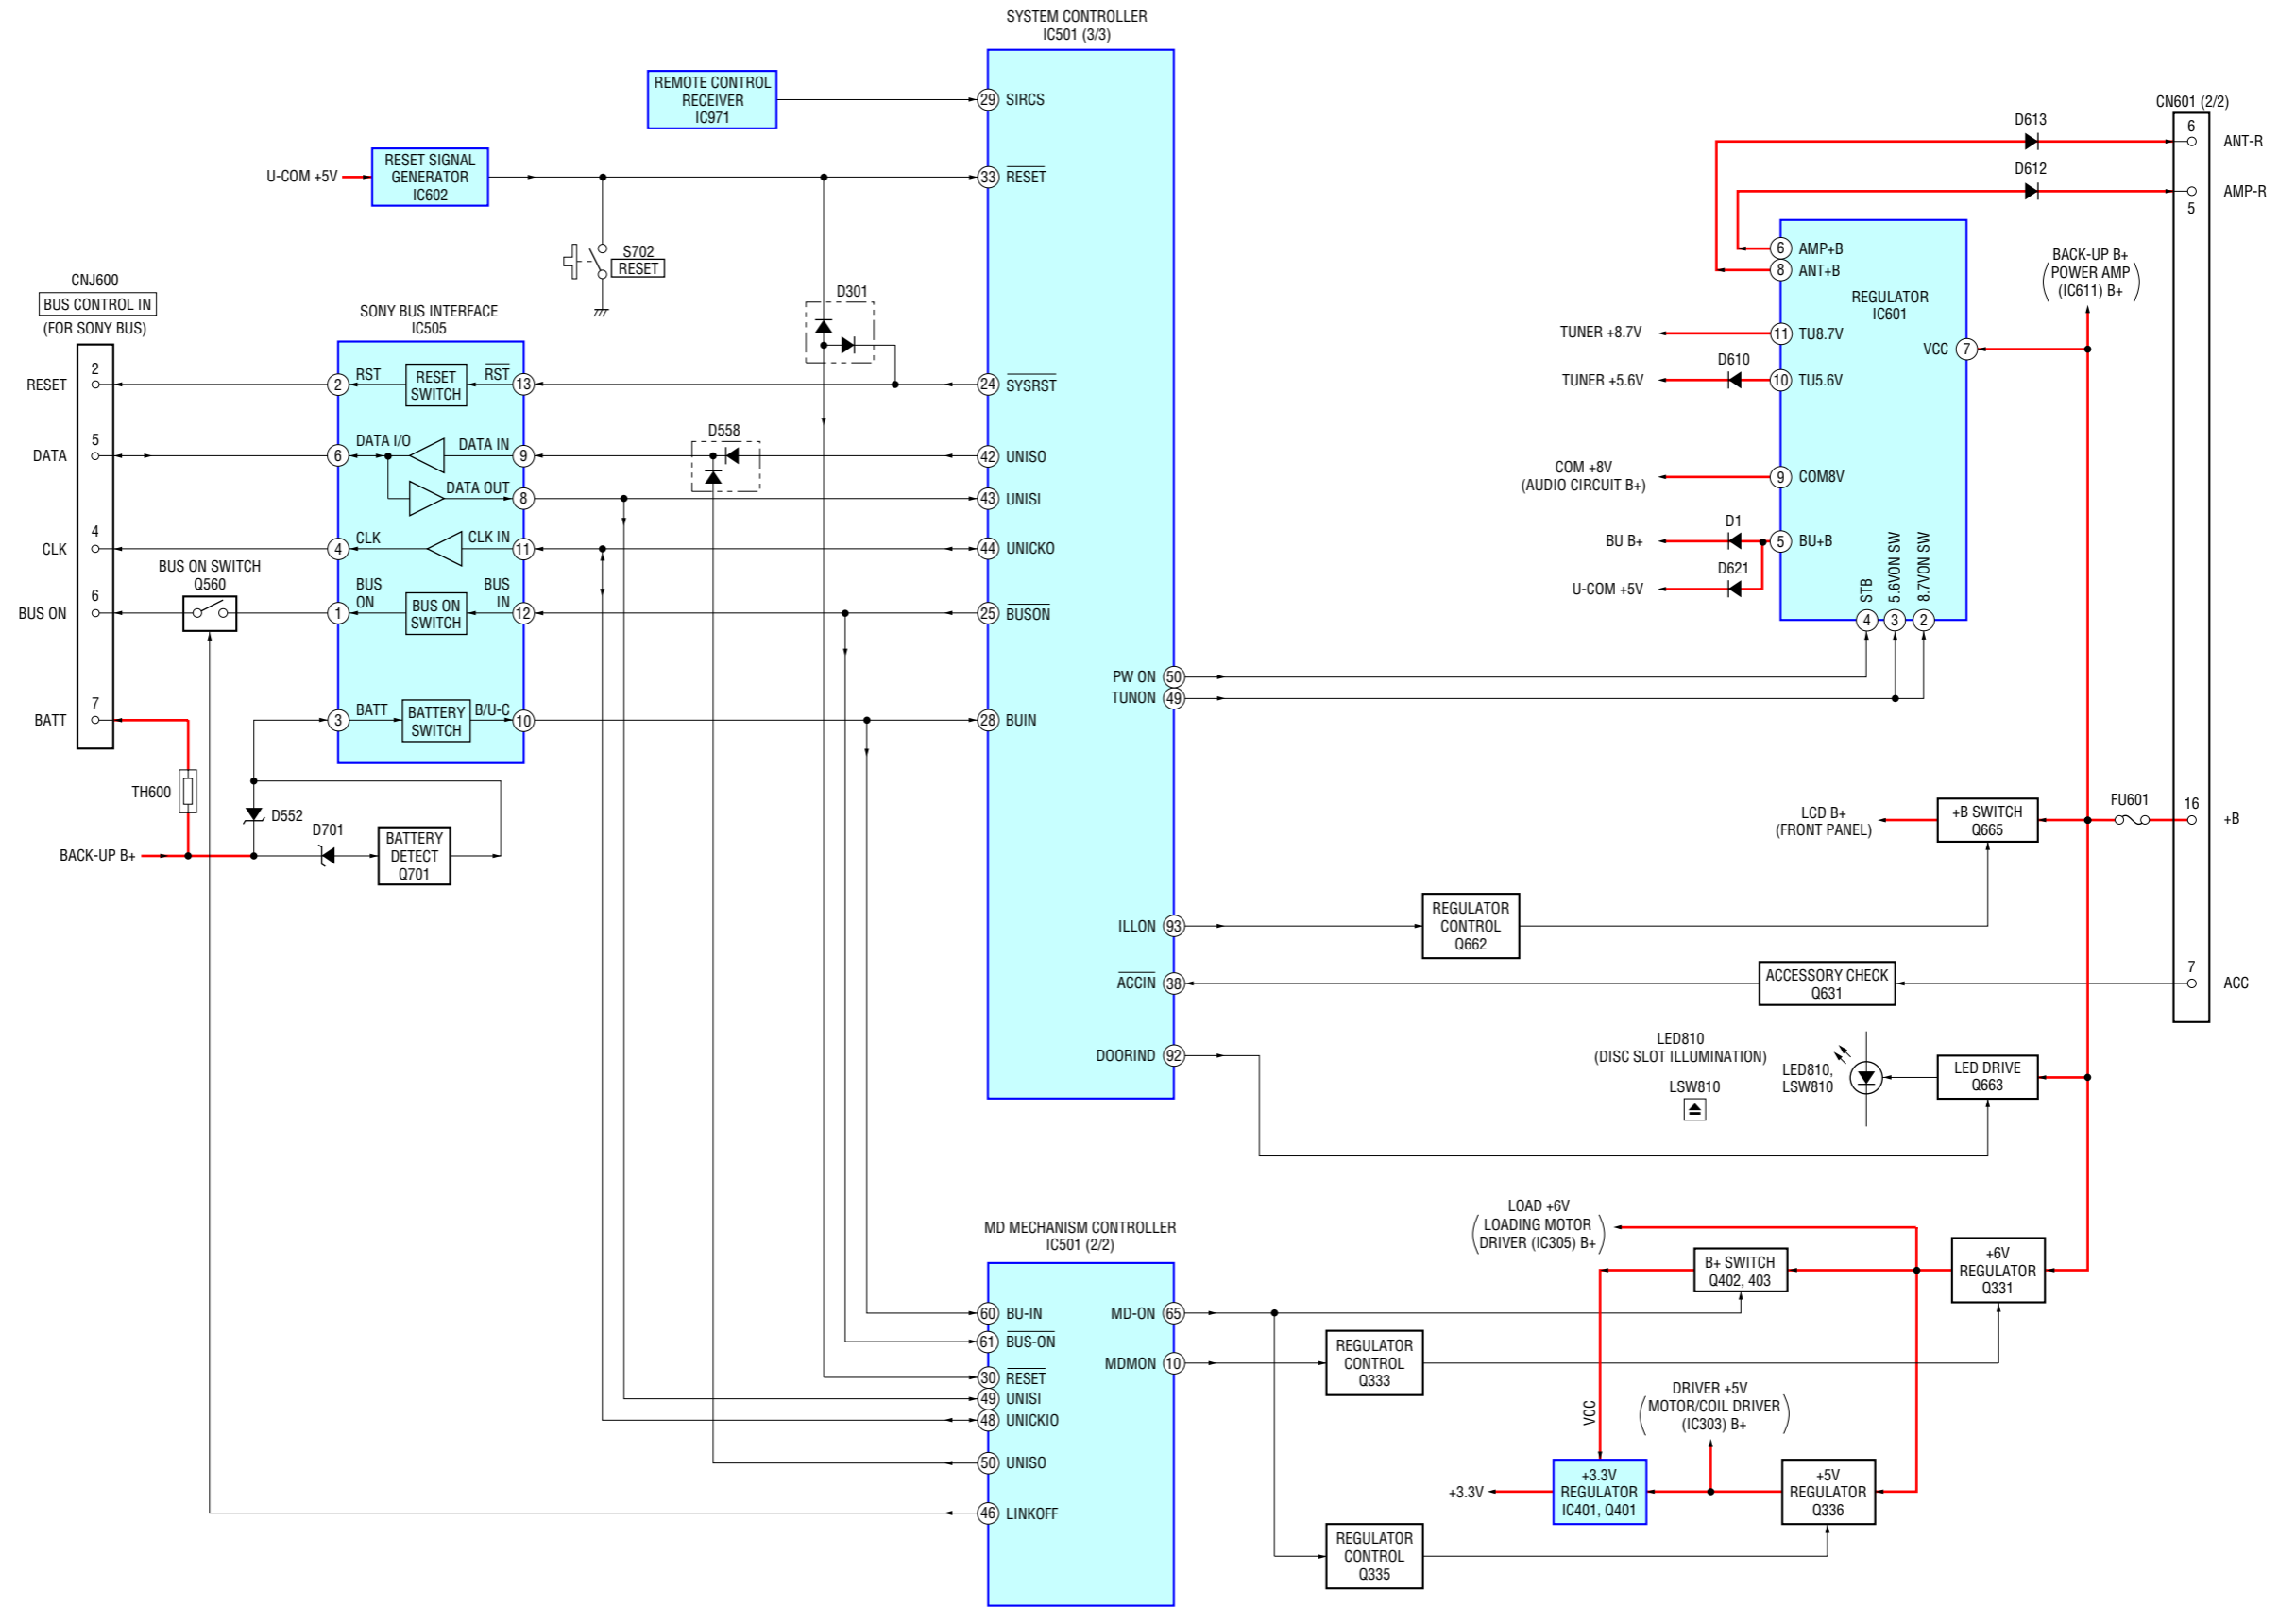

#### 4-5. NOTE FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS



##### Note on Printed Wiring Board:



-  : parts extracted from the component side.
  -  : parts extracted from the conductor side.
  -  : Through hole.
  -  : internal component.
  -  : Pattern from the side which enables seeing.
- (The other layers' patterns are not indicated.)






##### Caution:

Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component Side)	Parts on the parts face side seen from the parts face are indicated.


##### Note on Schematic Diagram:

- All capacitors are in  $\mu\text{F}$  unless otherwise noted. pF:  $\mu\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $1/4\text{W}$  or less unless otherwise specified.
-  : internal component.
-  : panel designation.


<p><b>Note:</b> The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.</p>
--

-  : B+ Line.
- Power voltage is dc 14.4V and fed with regulated dc power supply from ACC and BATT cords.
- Voltages are taken with a VOM (Input impedance 10 M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  -  : MD PLAY
  -  : FM
  -  : AM (MW/LW)
  -  : BUS AUDIO IN

- **Circuit Boards Location**

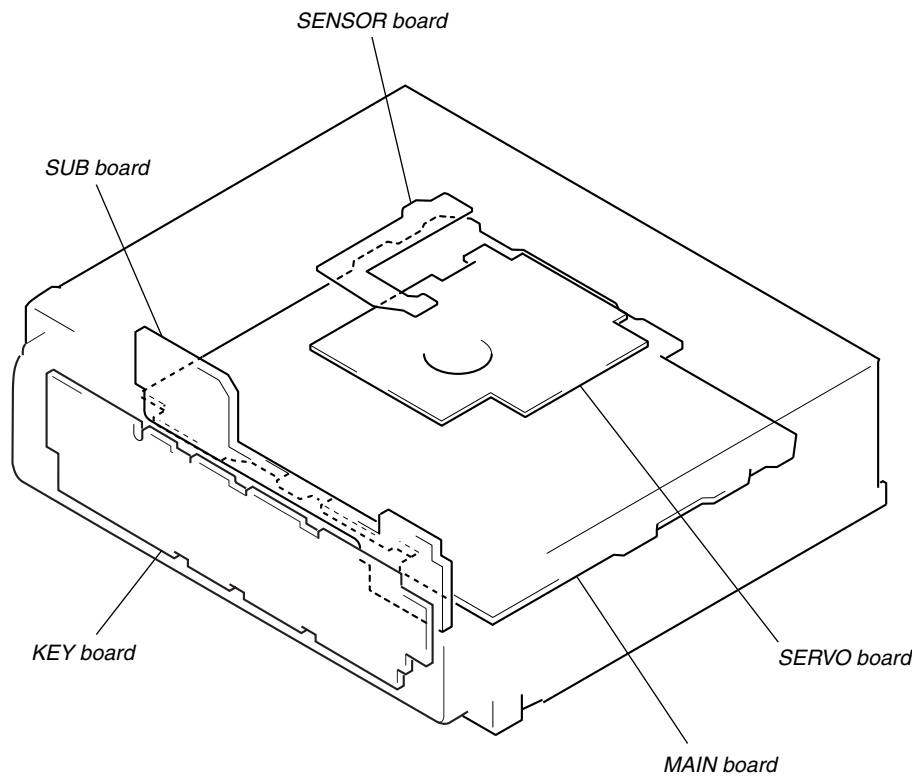


4-6. PRINTED WIRING BOARDS – SERVO Section – • See page 28 for Circuit Boards Location.

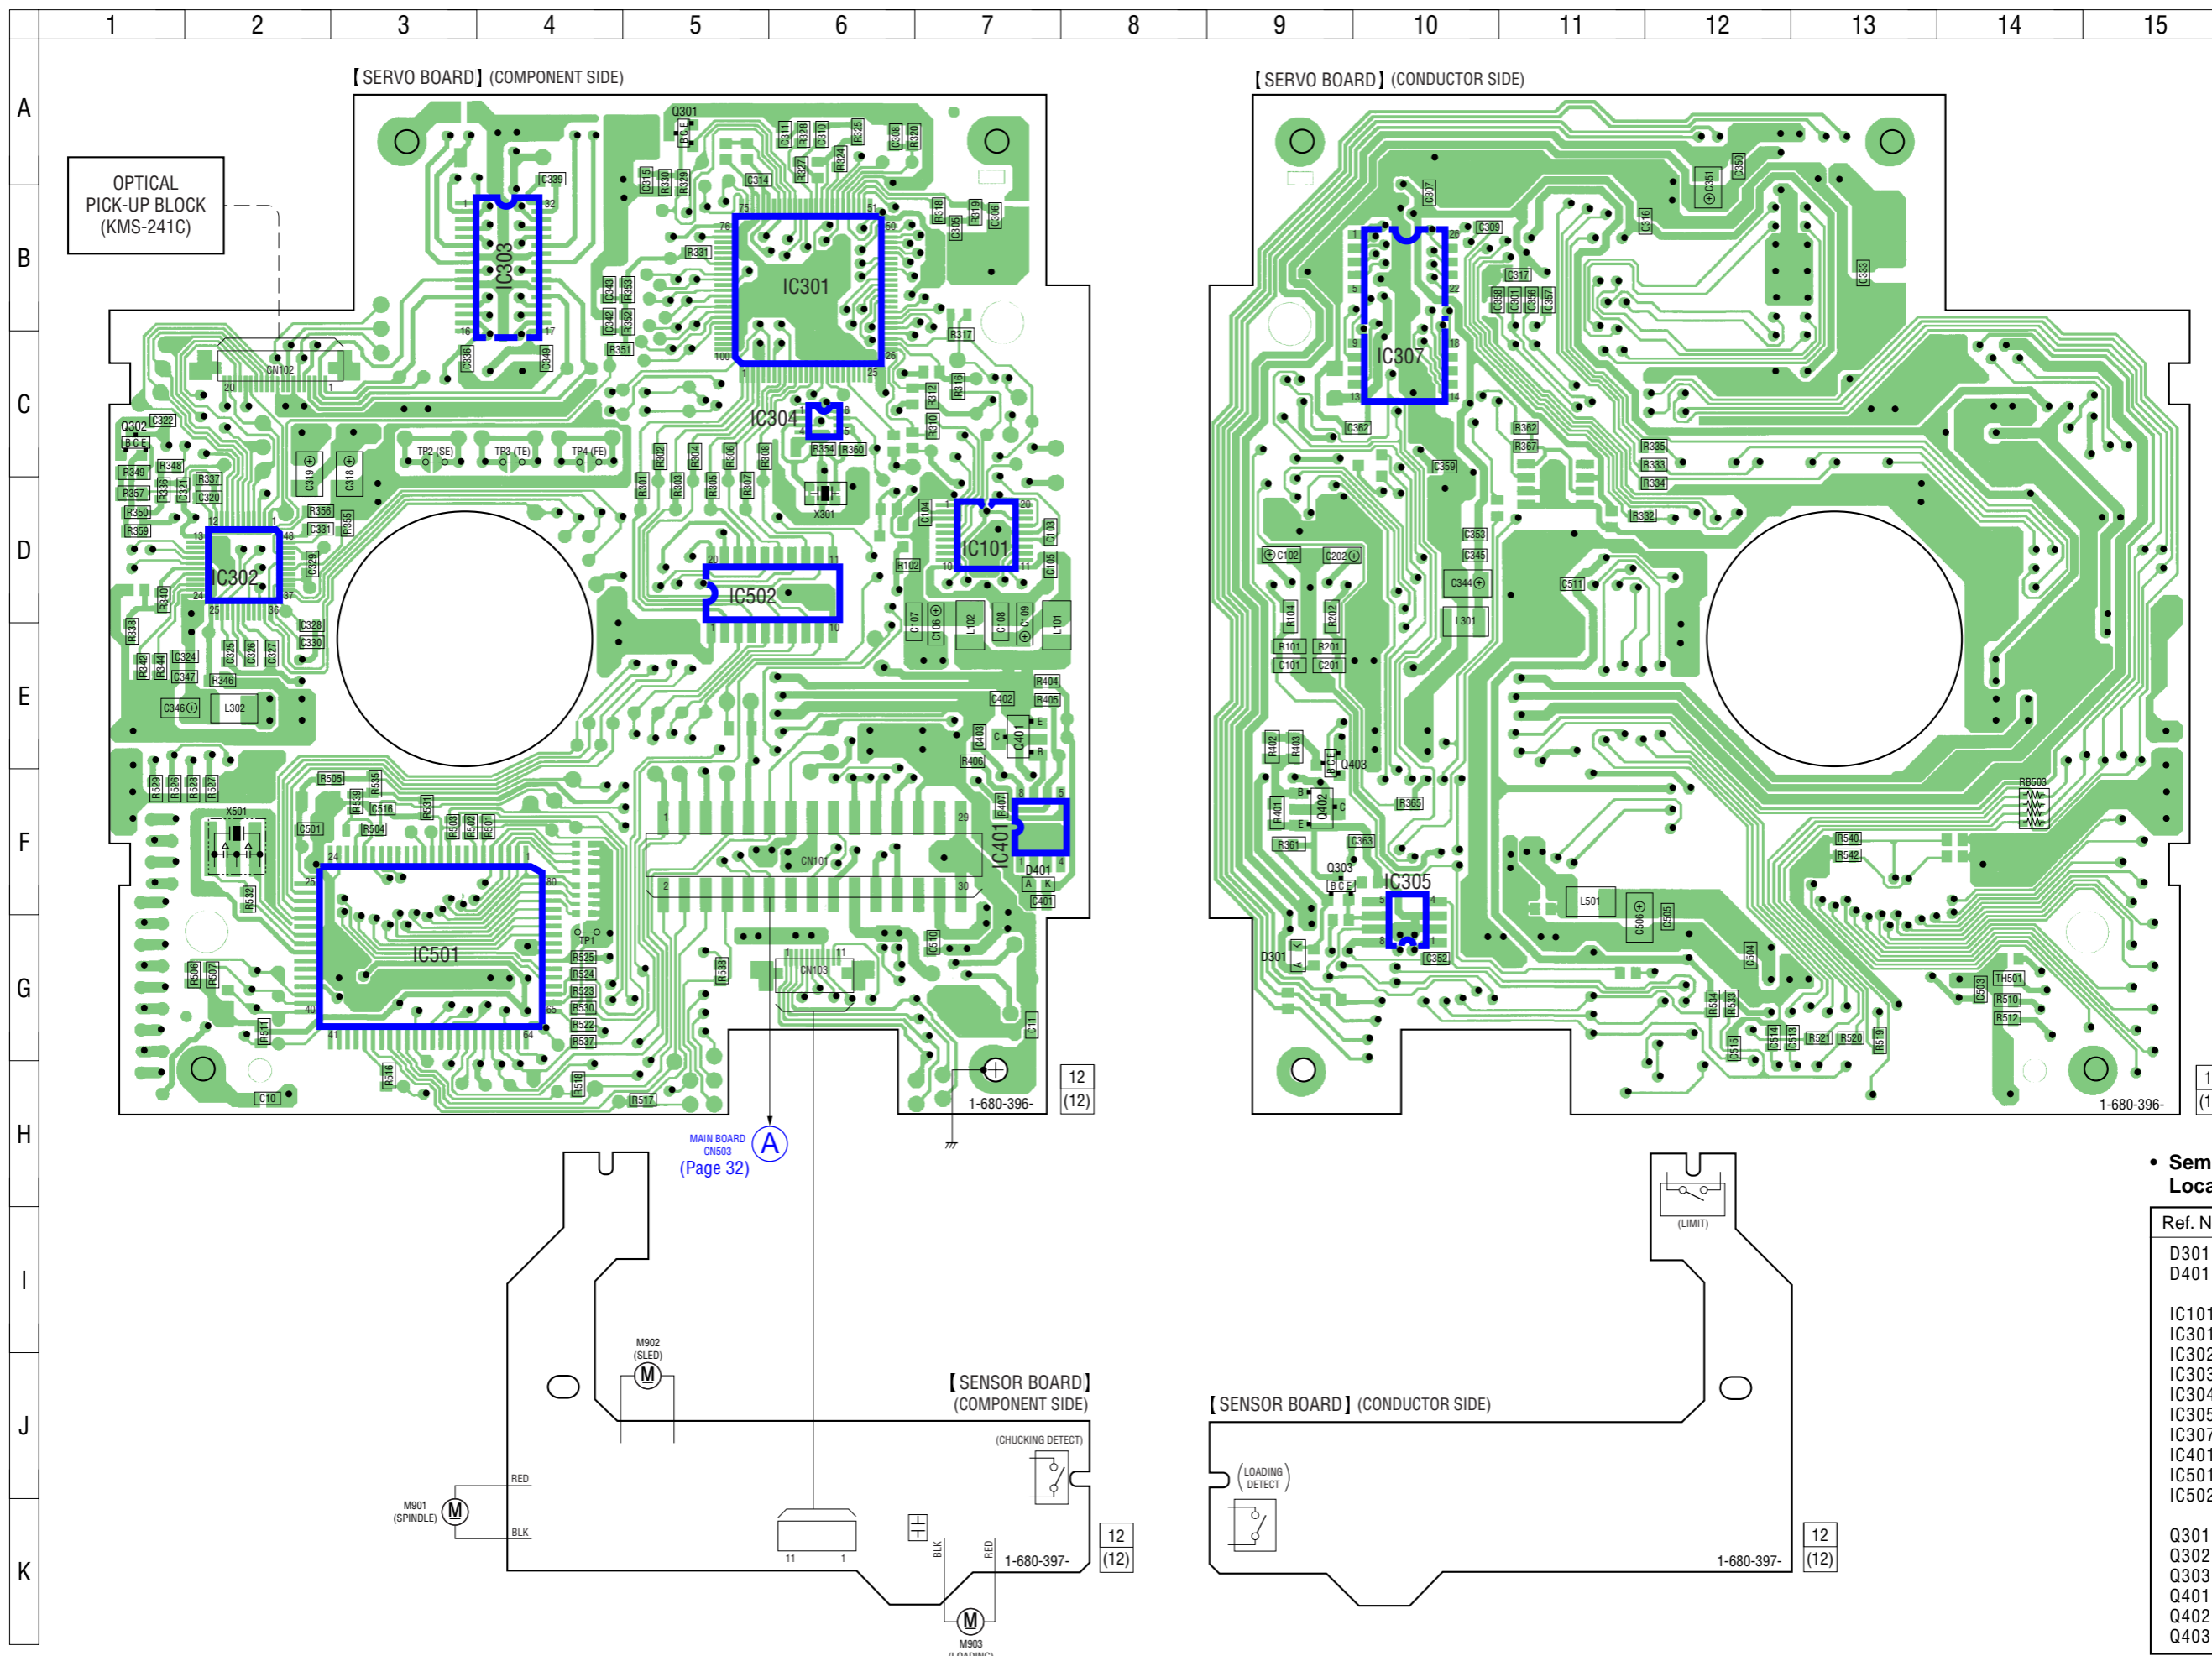

• Semiconductor Location

Ref. No.	Location
D301	G-9
D401	F-7
IC101	D-7
IC301	B-6
IC302	D-2
IC303	B-4
IC304	C-6
IC305	G-10
IC307	B-10
IC401	F-7
IC501	G-3
IC502	D-6
Q301	A-5
Q302	C-1
Q303	F-9
Q401	E-7
Q402	F-9
Q403	E-9

4-7. SCHEMATIC DIAGRAM – SERVO Section (1/2) – • See page 40 for Waveforms. • See page 18 for IC Block Diagrams.

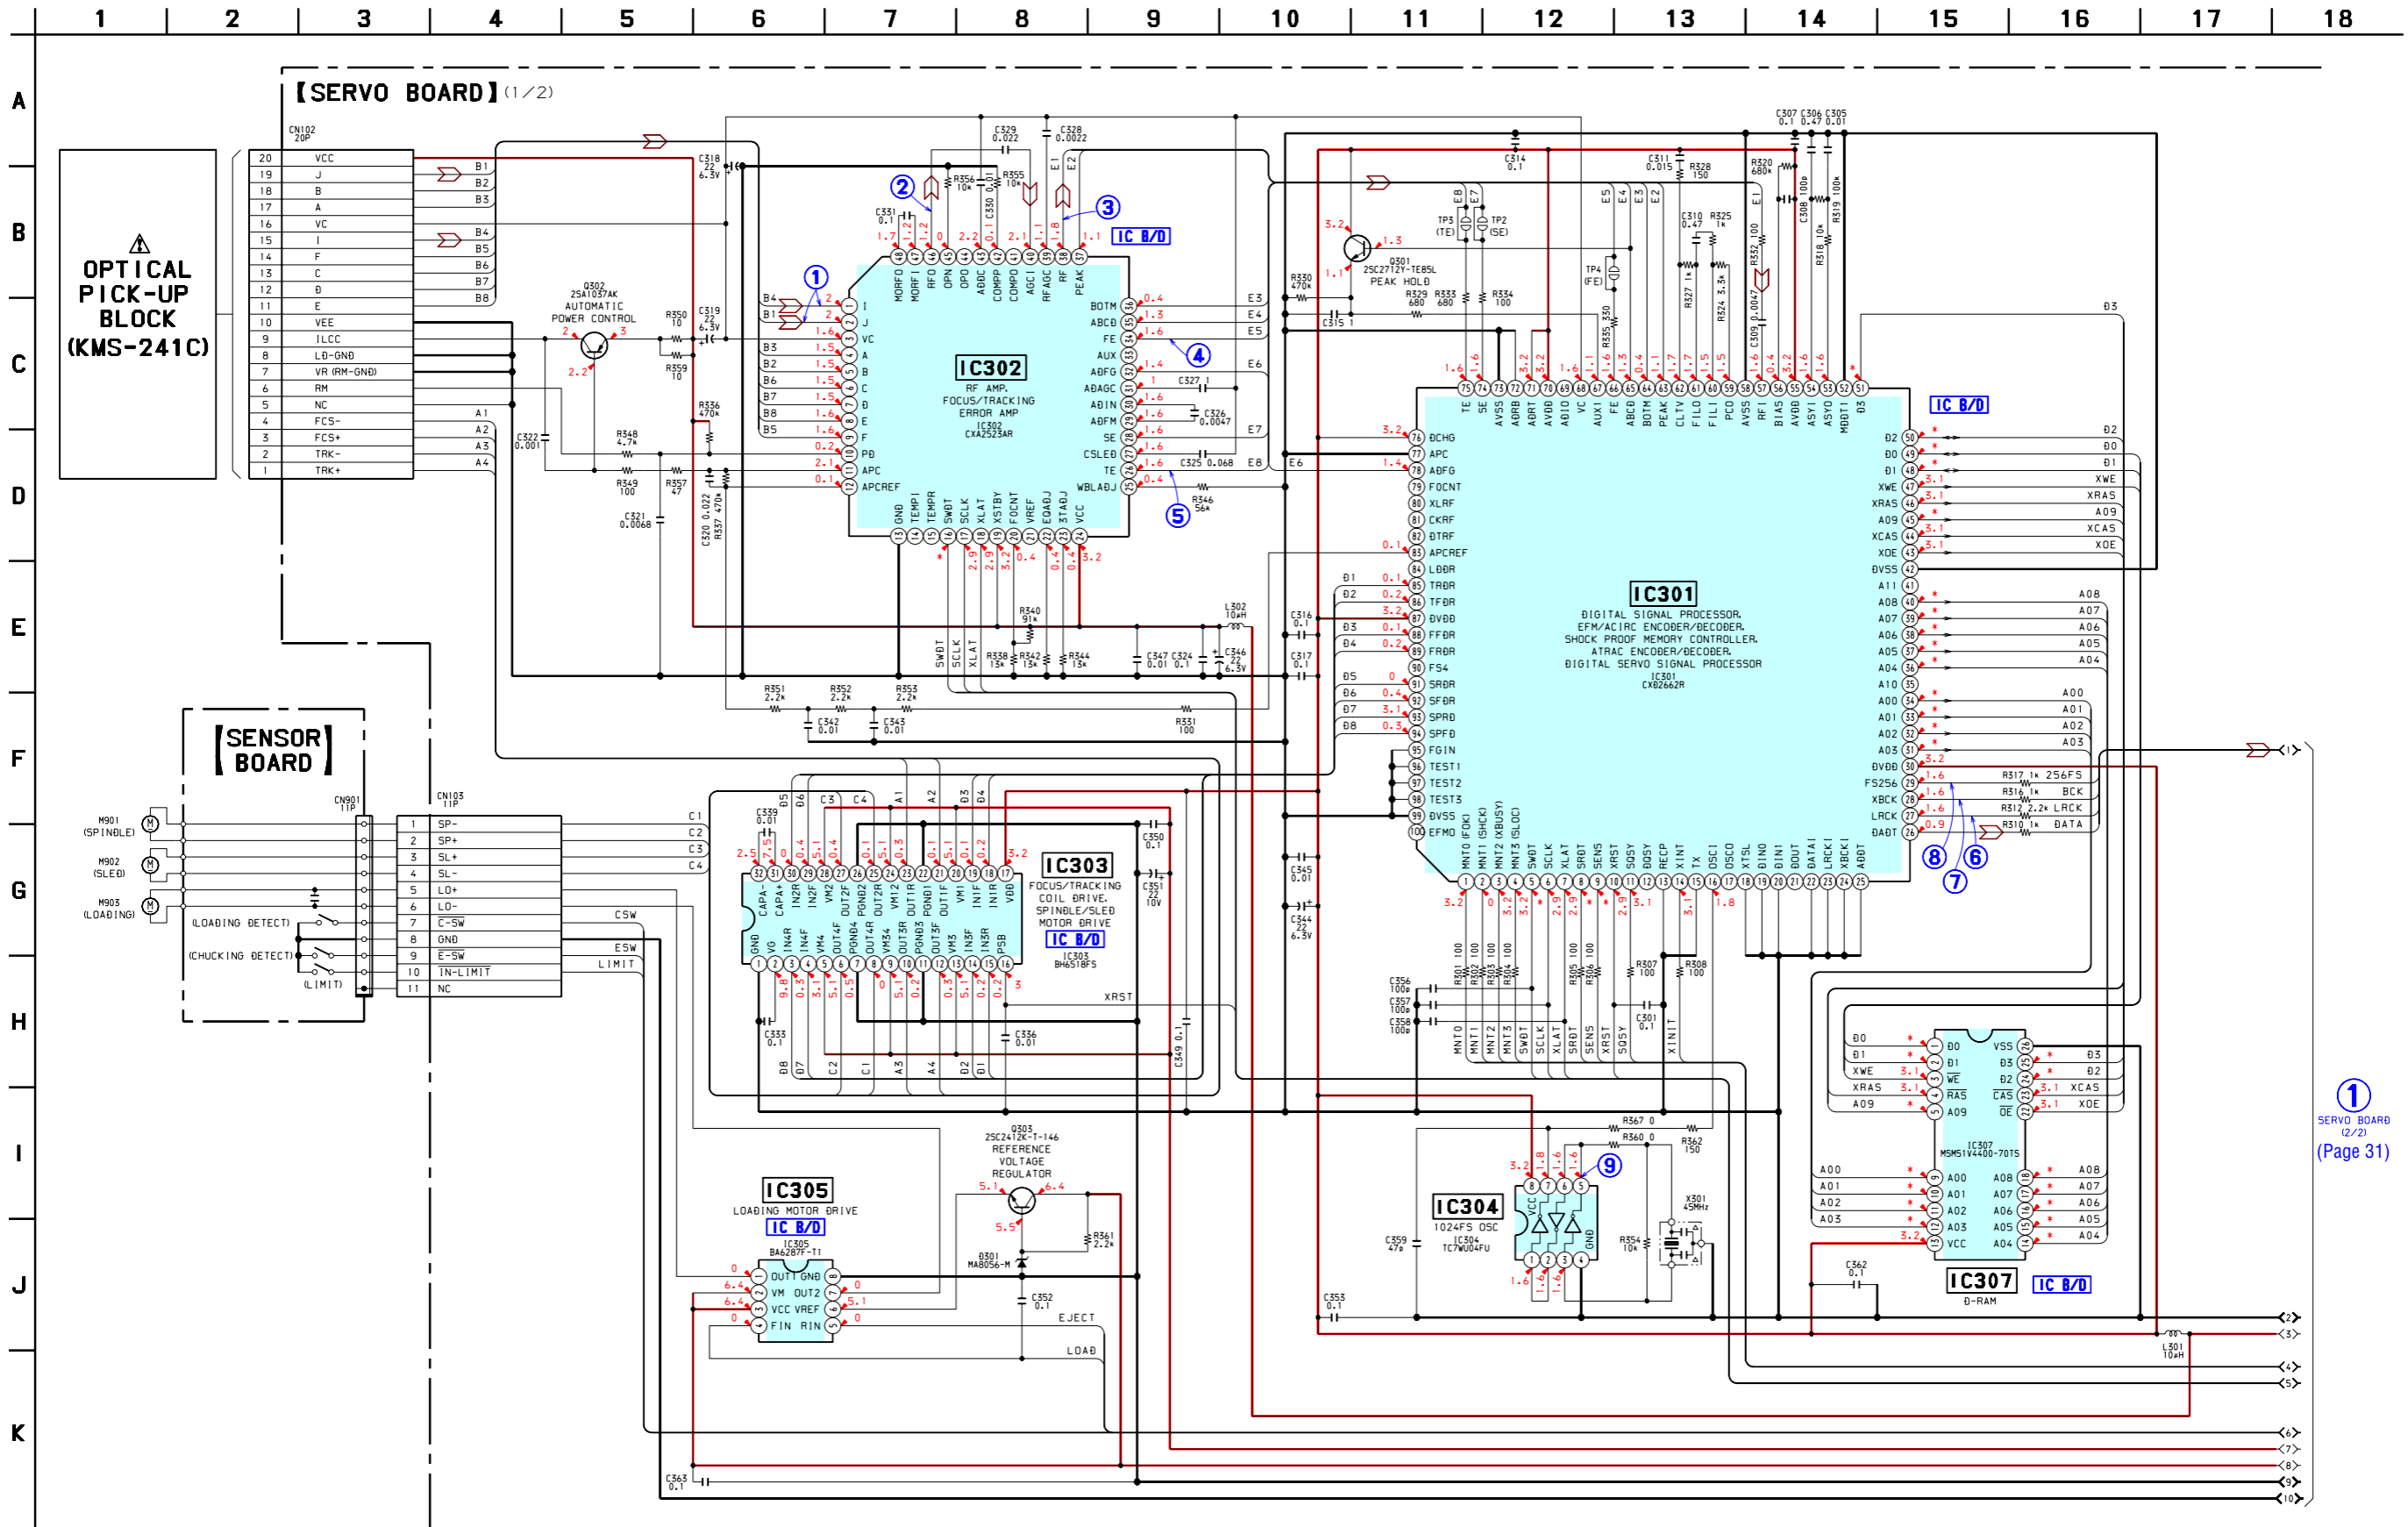

① SERVO BOARD (2/2) (Page 31)

• Voltages and waveforms are dc with respect to ground under no-signal conditions.  
 no mark : MD PLAY  
 \* : Impossible to measure


The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

4-8. SCHEMATIC DIAGRAM – SERVO Section (2/2) – • See page 40 for Waveforms. • See page 18 for IC Block Diagram.

19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34

【SERVO BOARD】(2/2)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

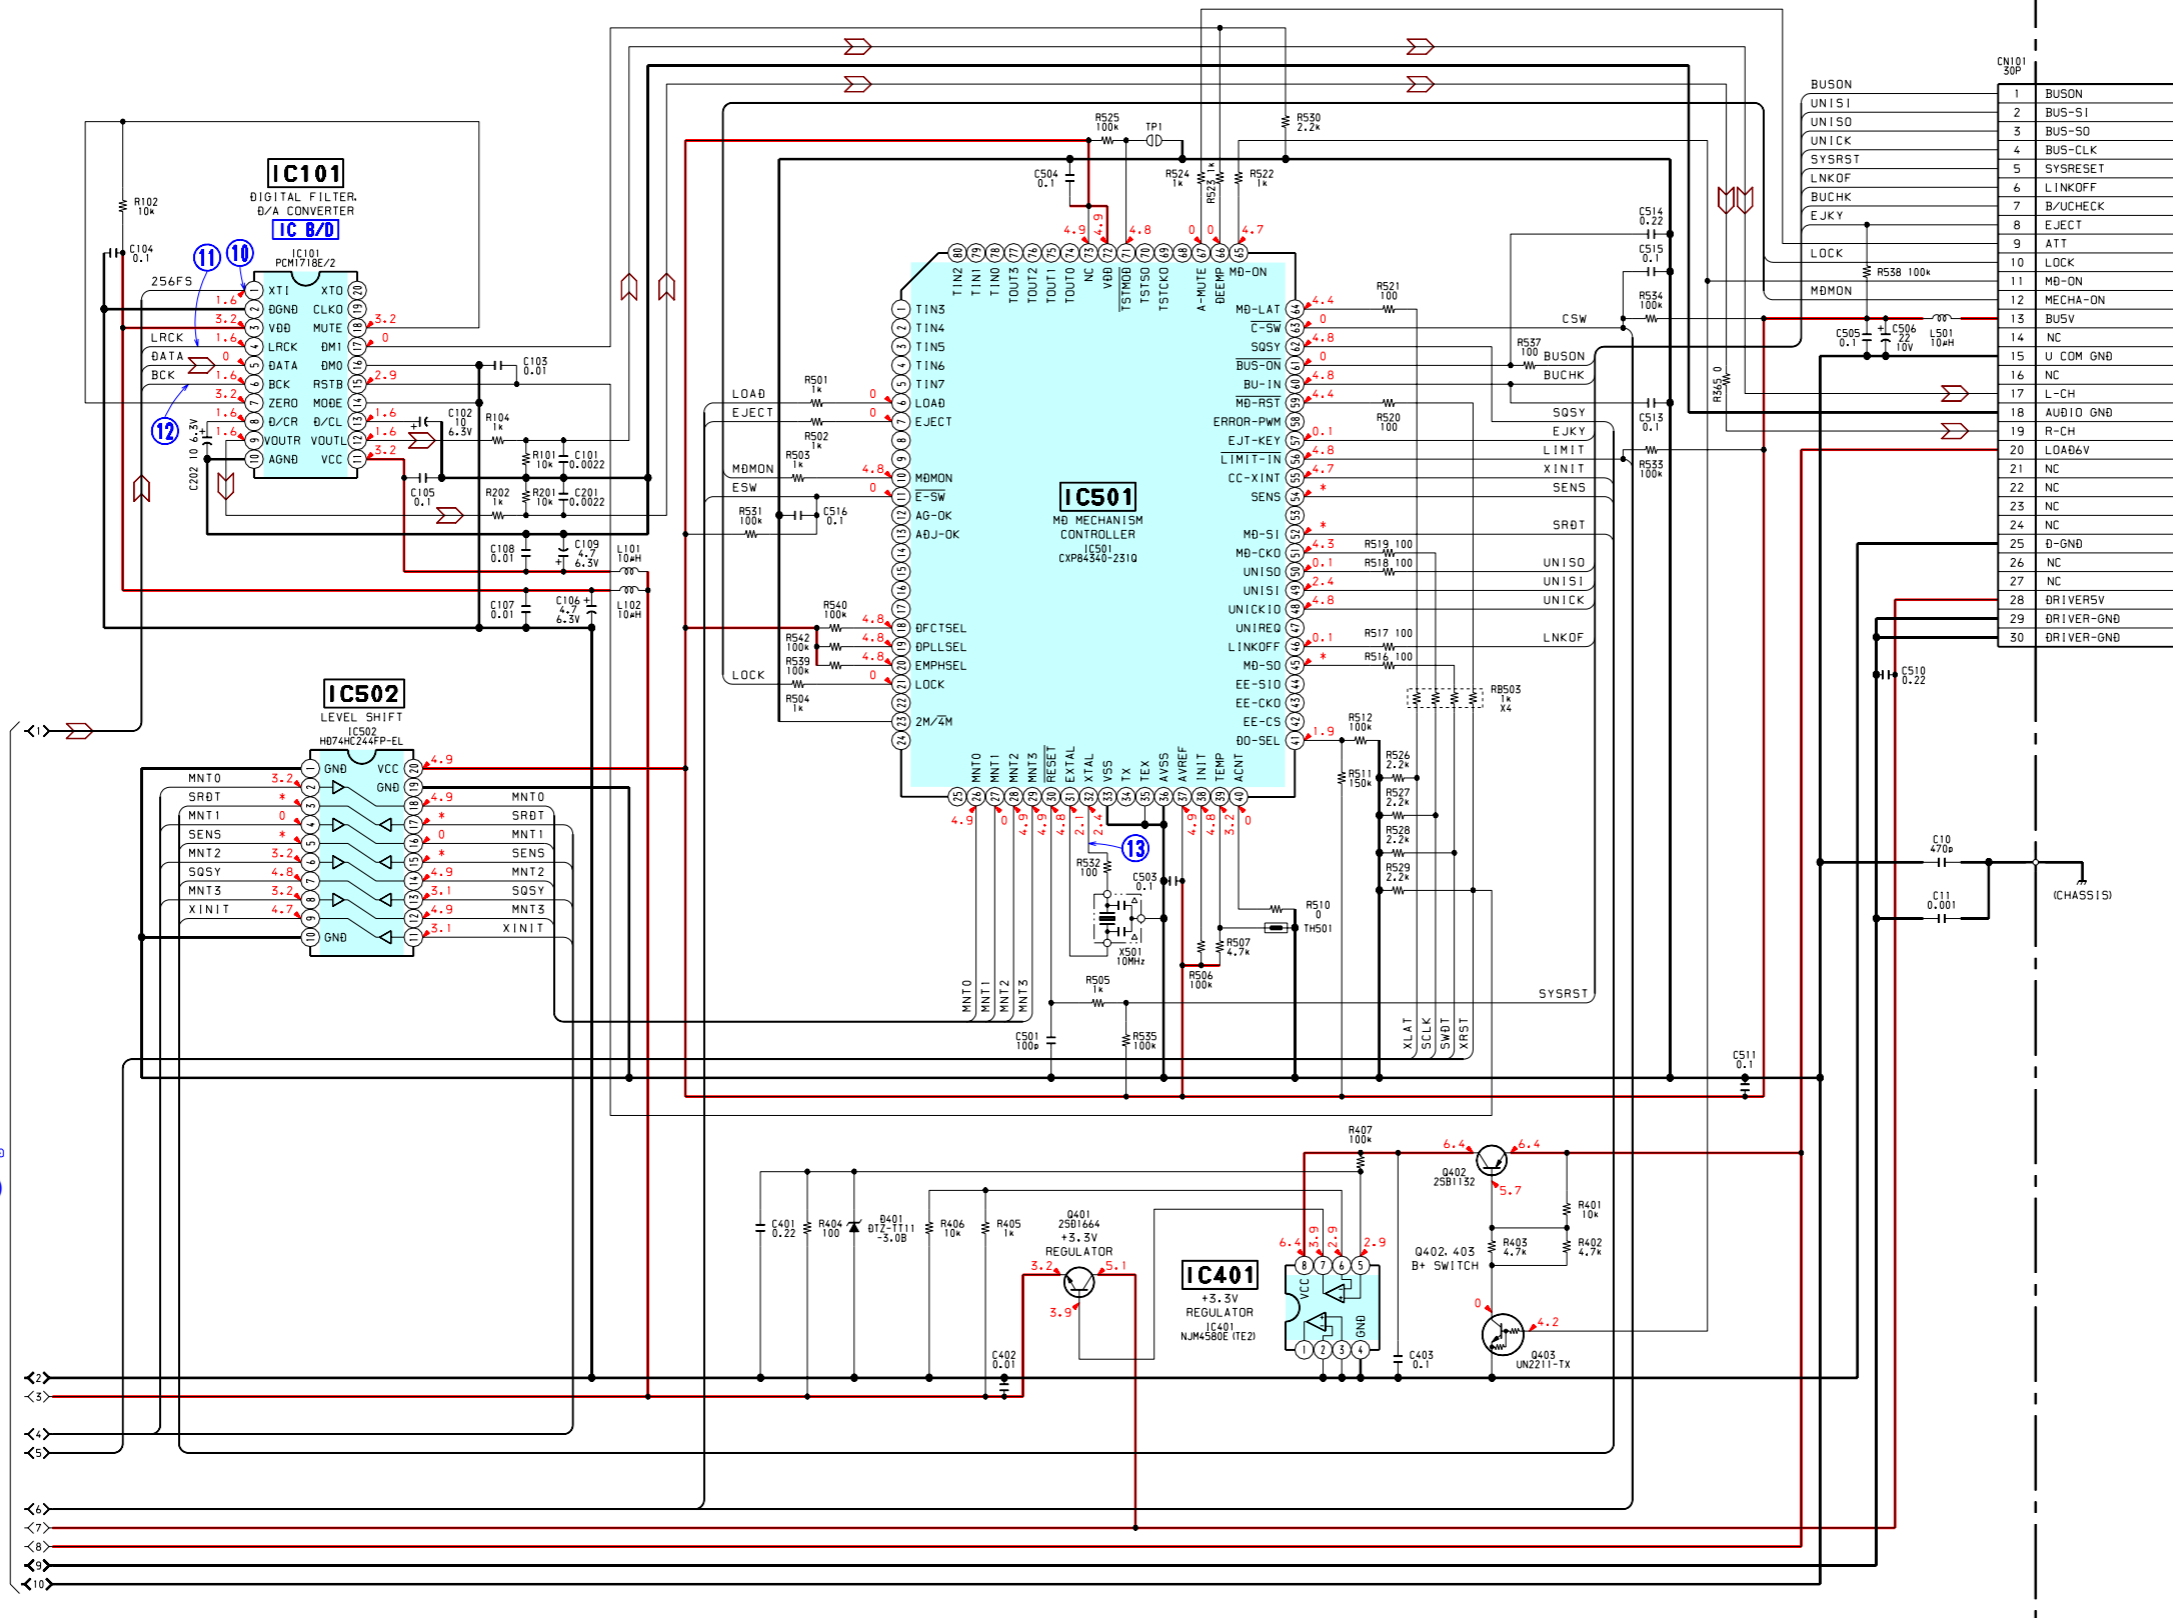

MAIN BOARD (2/3) CNP301 (Page 34)

1 SERVO BOARD (1/2) (Page 30)



- Voltages and waveforms are dc with respect to ground under no-signal conditions.
- no mark : MD PLAY
- \* : Impossible to measure

# MDX-CA680/CA680X

## 4-9. PRINTED WIRING BOARD – MAIN Board – • See page 28 for Circuit Boards Location.

### • Semiconductor Location


Ref. No.	Location
D1	H-10
D21	K-2
D22	K-2
D23	J-2
D301	I-9
D331	I-12
D333	I-12
D471	B-9
D472	B-9
D473	A-10
D474	B-9
D475	D-7
D476	B-10
D477	D-7
D478	B-10
D479	E-8
D480	E-8
D502	I-6
D552	E-12
D553	D-12
D554	C-12
D555	C-12
D558	D-13
D560	F-12
D601	D-12
D609	D-11
D610	F-8
D612	H-12
D613	G-12
D614	G-12
D621	I-11
D665	K-6
D701	E-13
D703	L-4
D710	L-4
D711	K-4
D712	K-3
D713	K-3
D714	K-3
D715	L-3
D716	L-3
D717	L-2
D718	L-2
D719	L-4
IC20	J-2
IC51	I-4
IC401	F-4
IC501	J-8
IC505	D-13
IC601	G-13
IC602	J-11
IC611	B-8
Q21	I-1
Q22	J-3
Q331	H-13
Q333	I-12
Q335	H-13
Q336	H-13
Q431	C-5
Q441	C-5
Q451	C-4
Q461	C-4
Q478	E-8
Q479	E-8
Q560	E-13
Q631	E-11
Q651	E-11
Q662	J-14
Q663	I-14
Q664	L-10
Q665	K-13
Q701	E-13

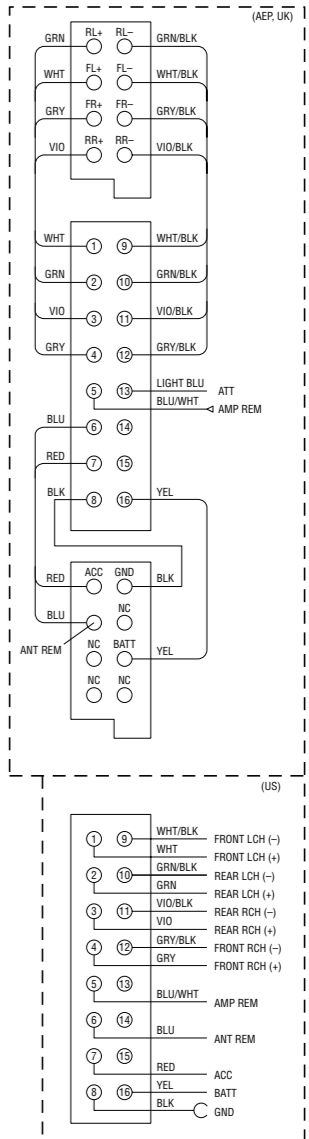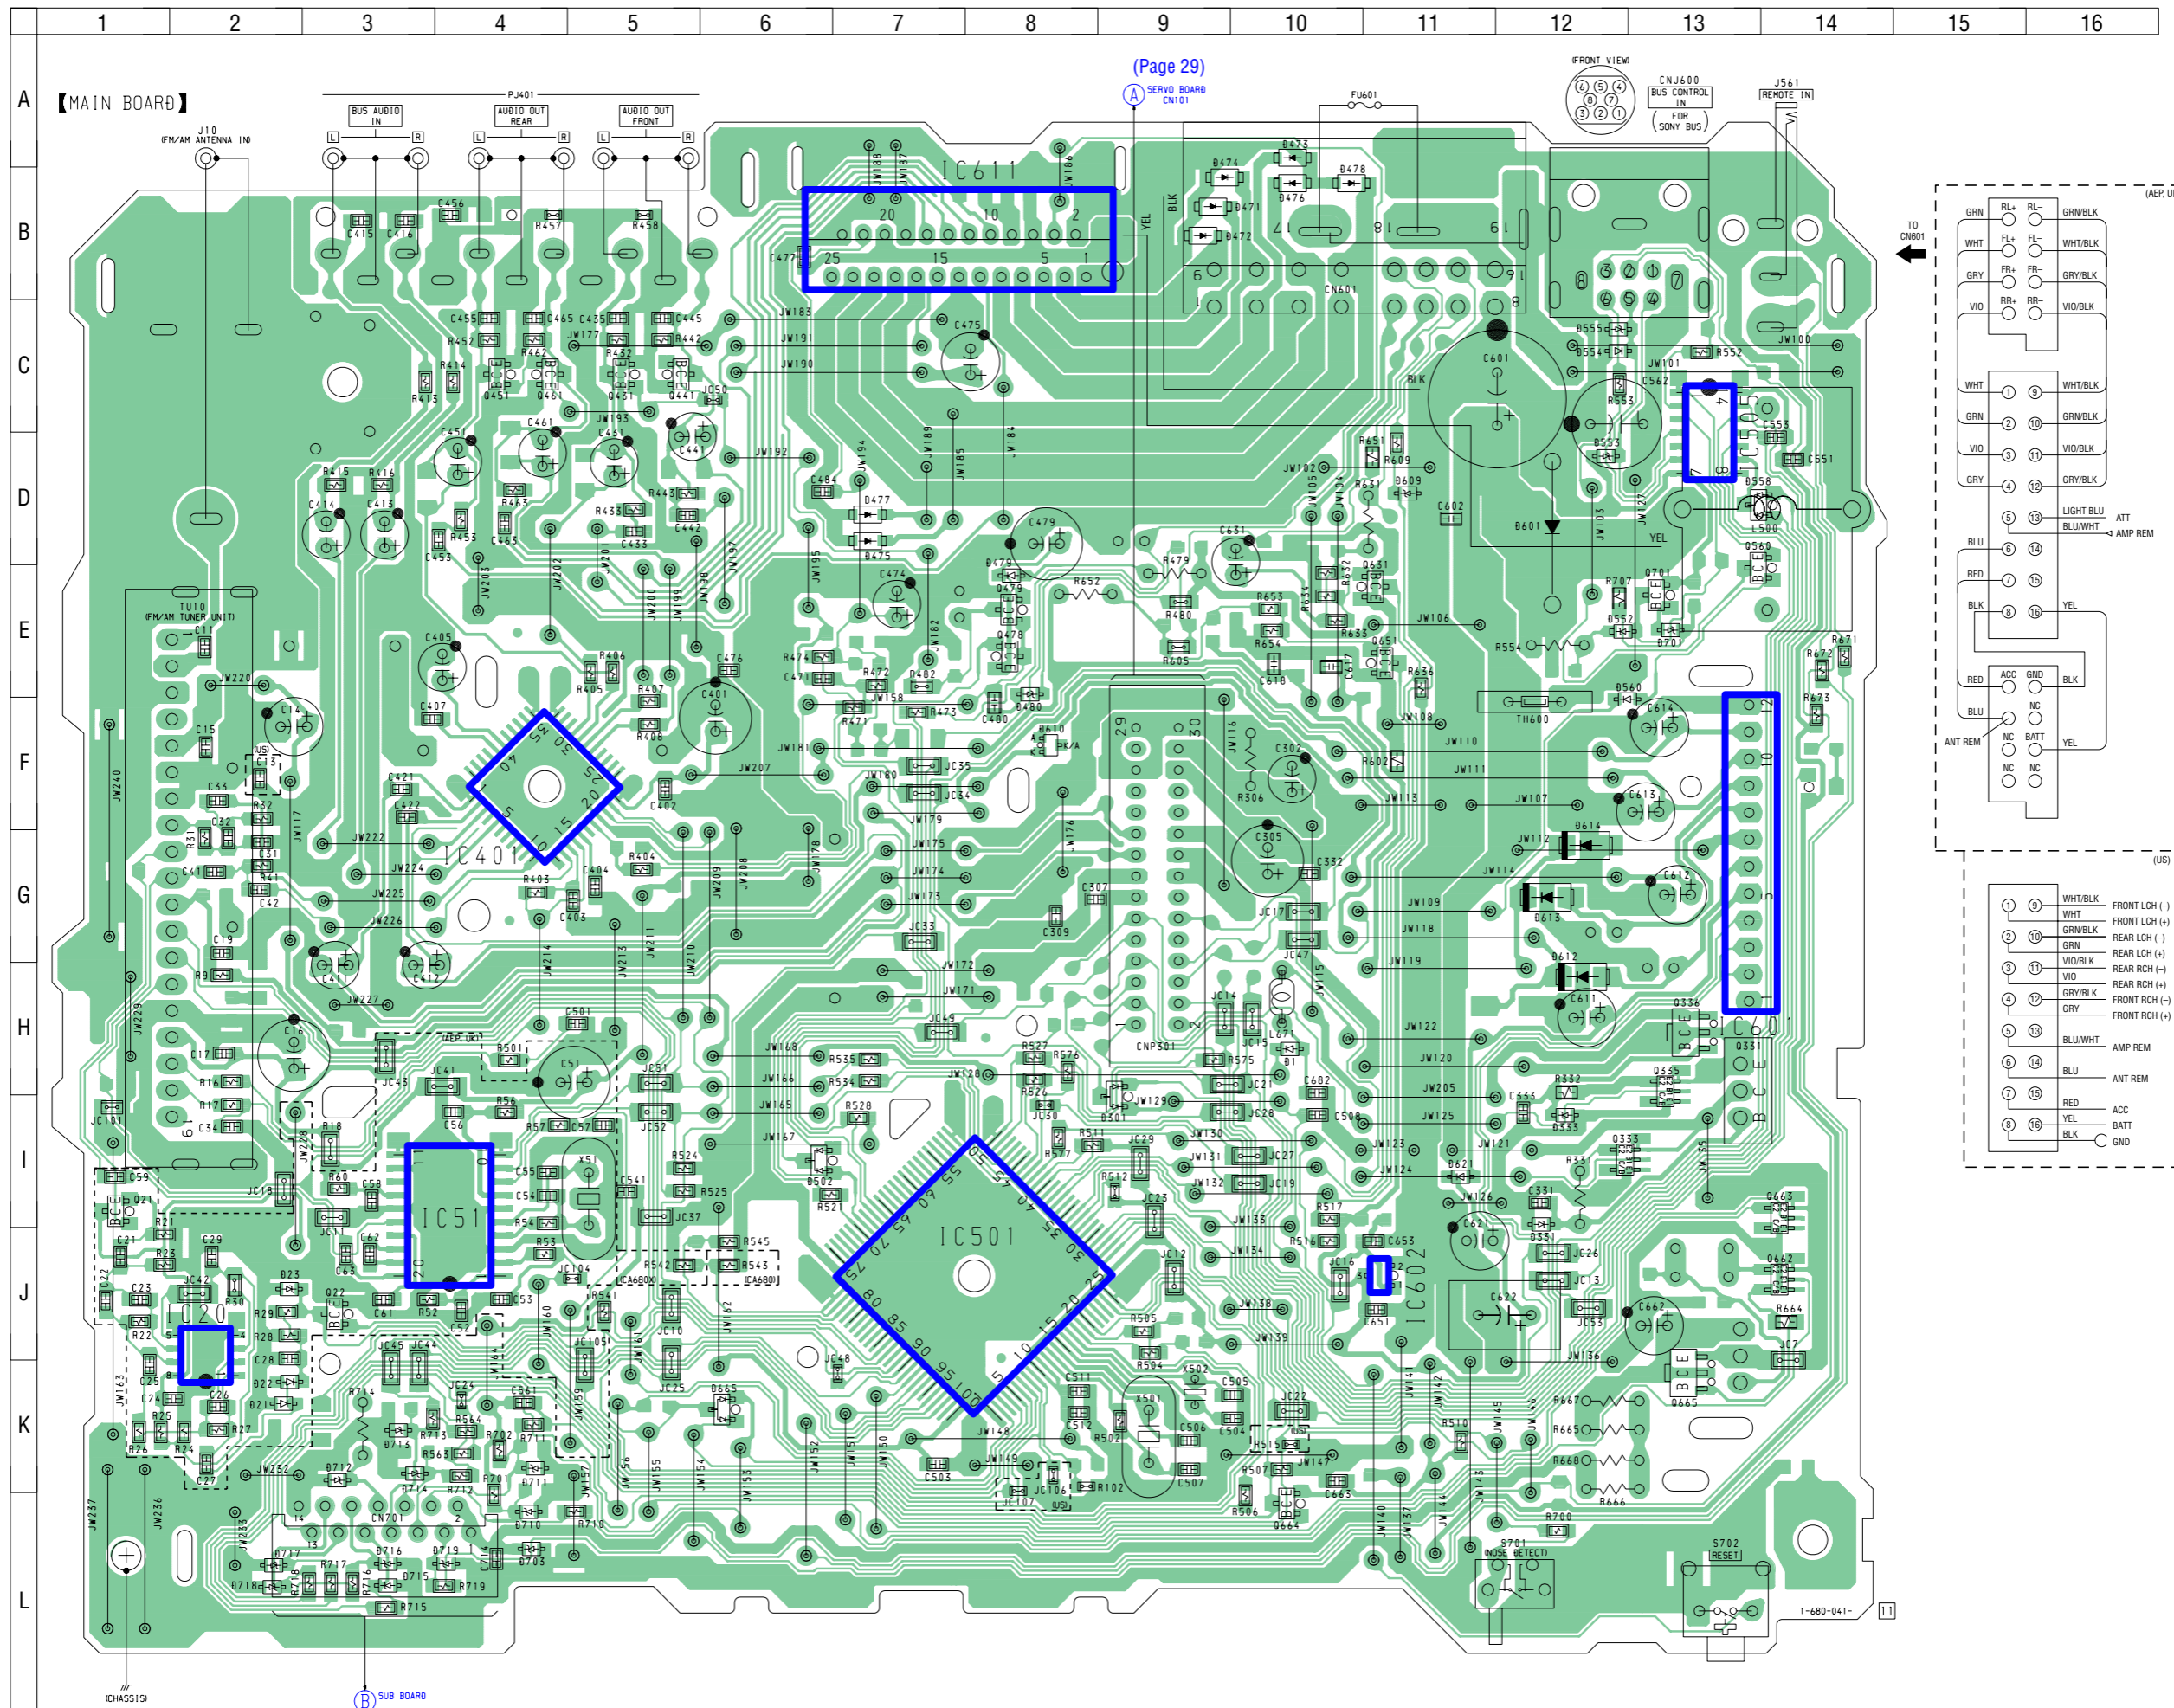

(Page 36)




4-10. SCHEMATIC DIAGRAM – MAIN Board (1/3) – • See page 40 for Waveform. • See page 18 for IC Block Diagrams.

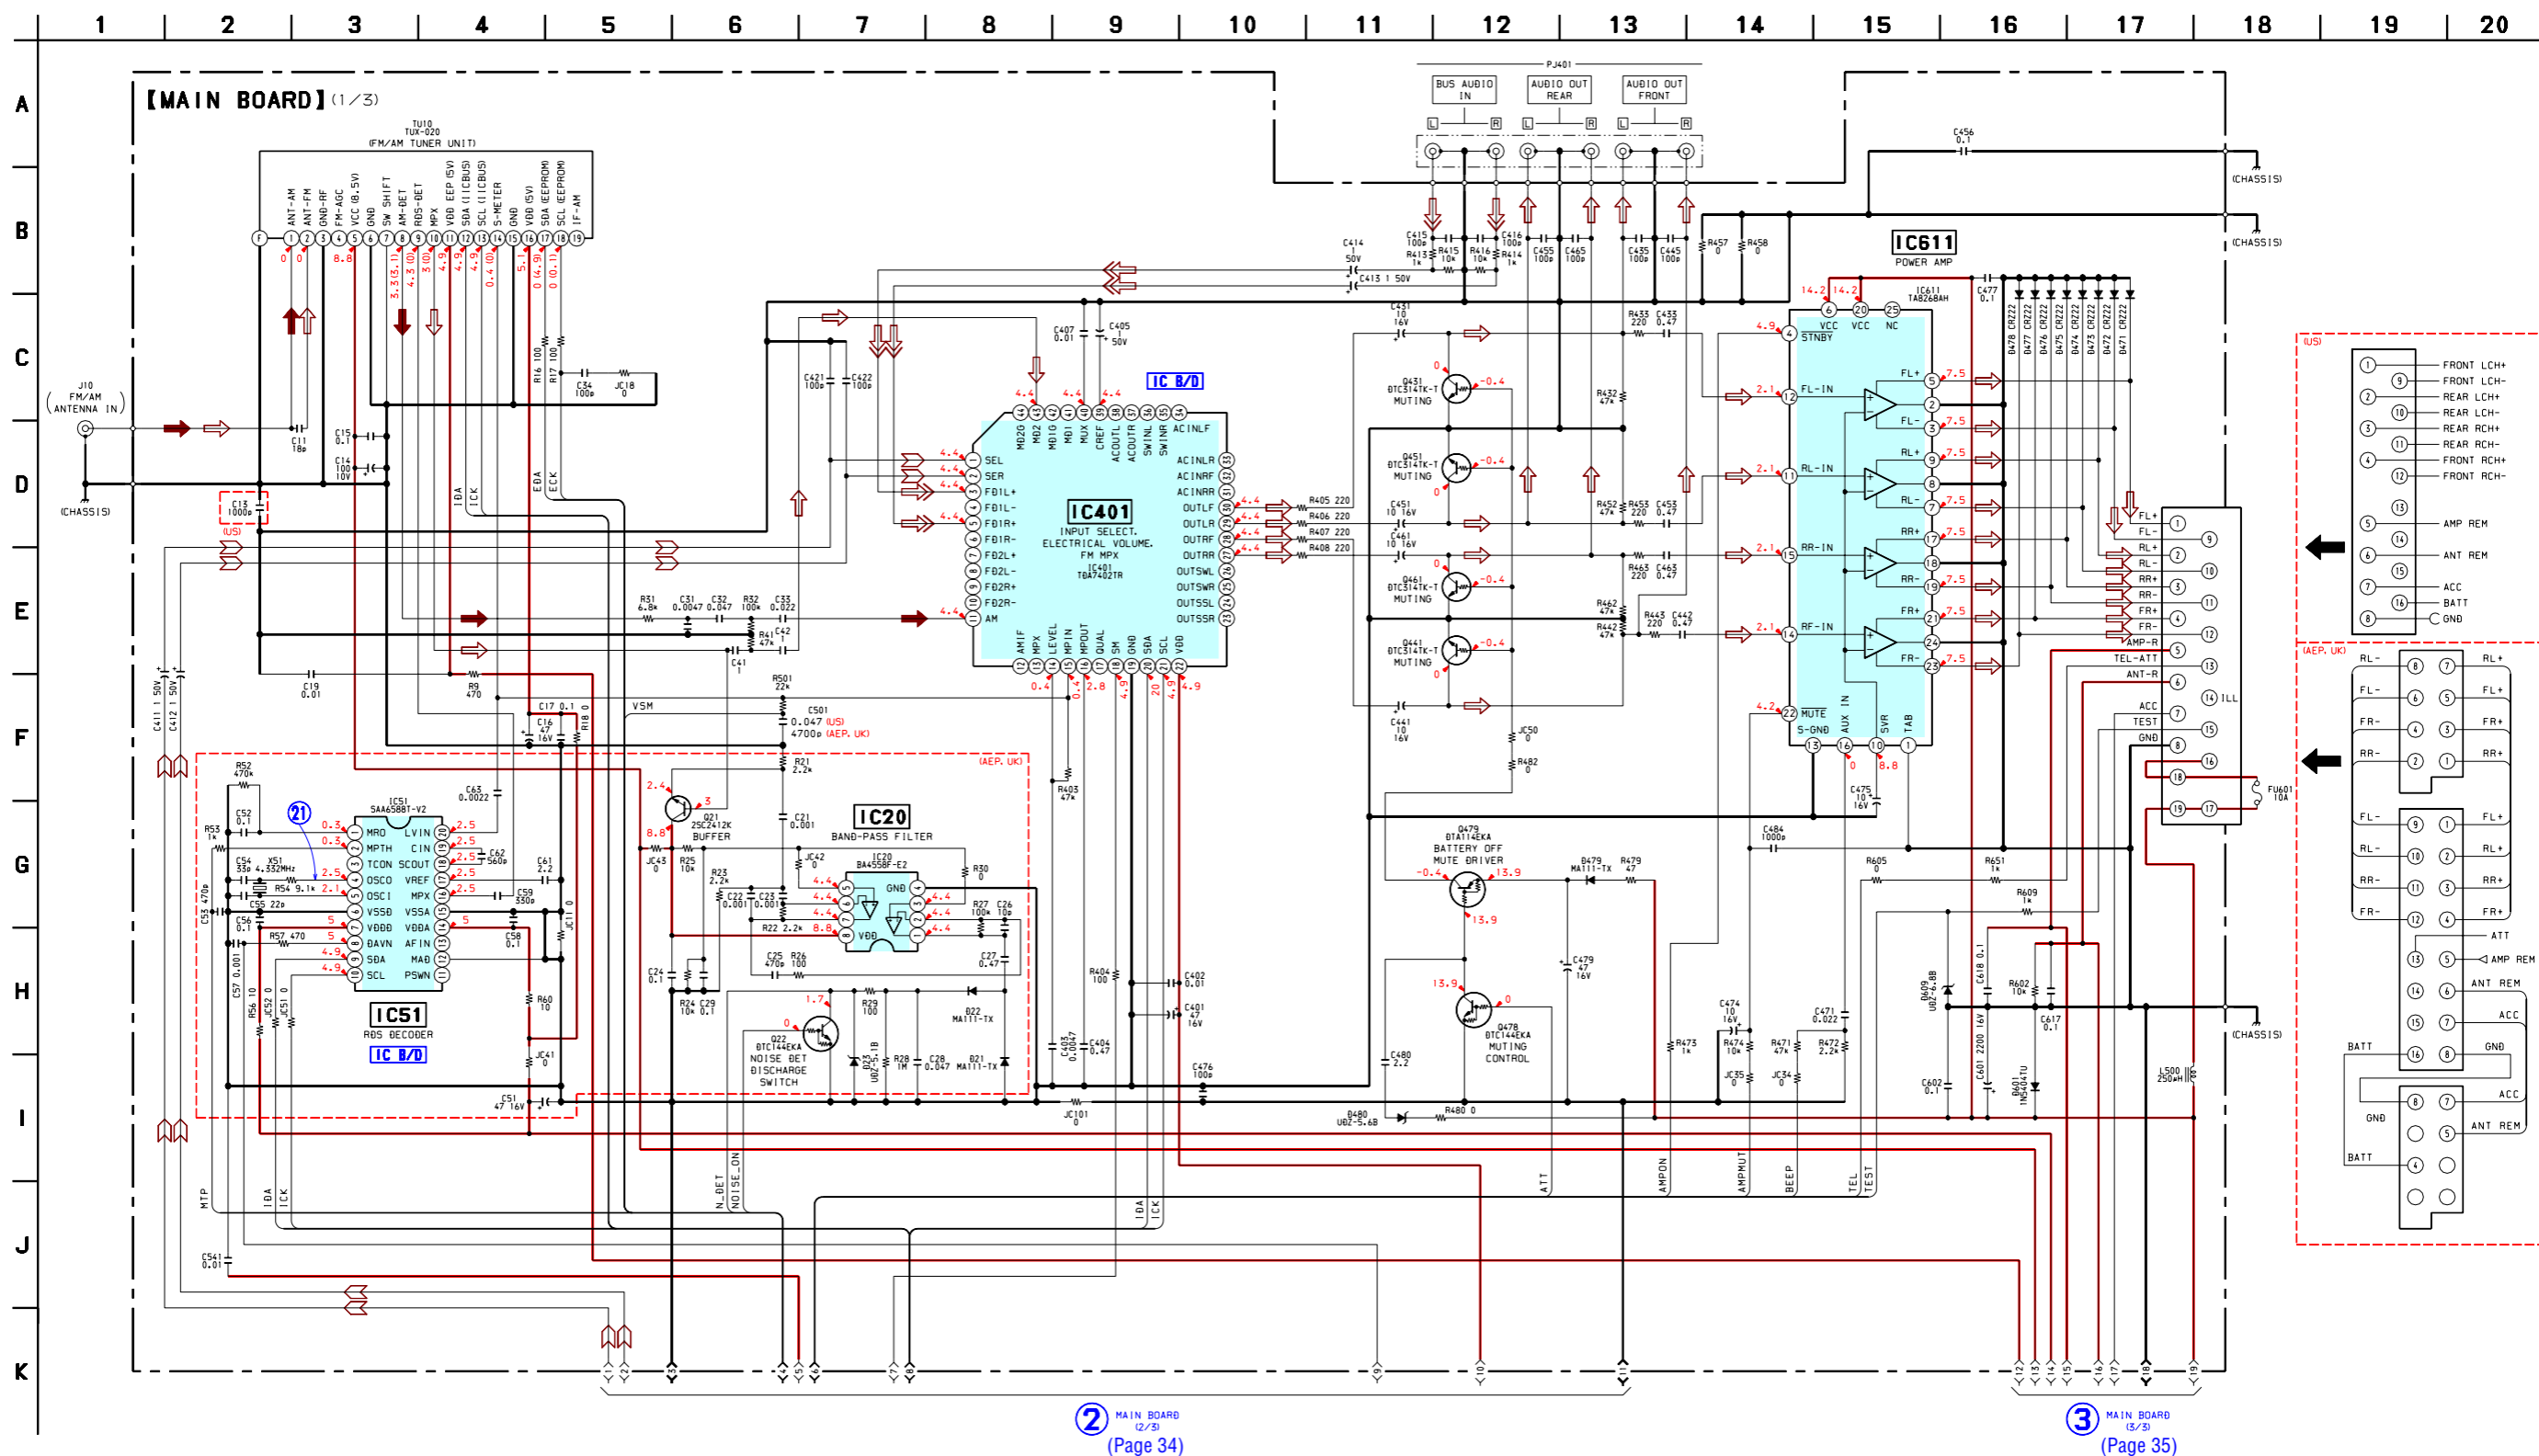

• Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.  
 no mark : FM  
 ( ) : AM (MW/LW)


4-11. SCHEMATIC DIAGRAM – MAIN Board (2/3) – • See page 40 for Waveforms.

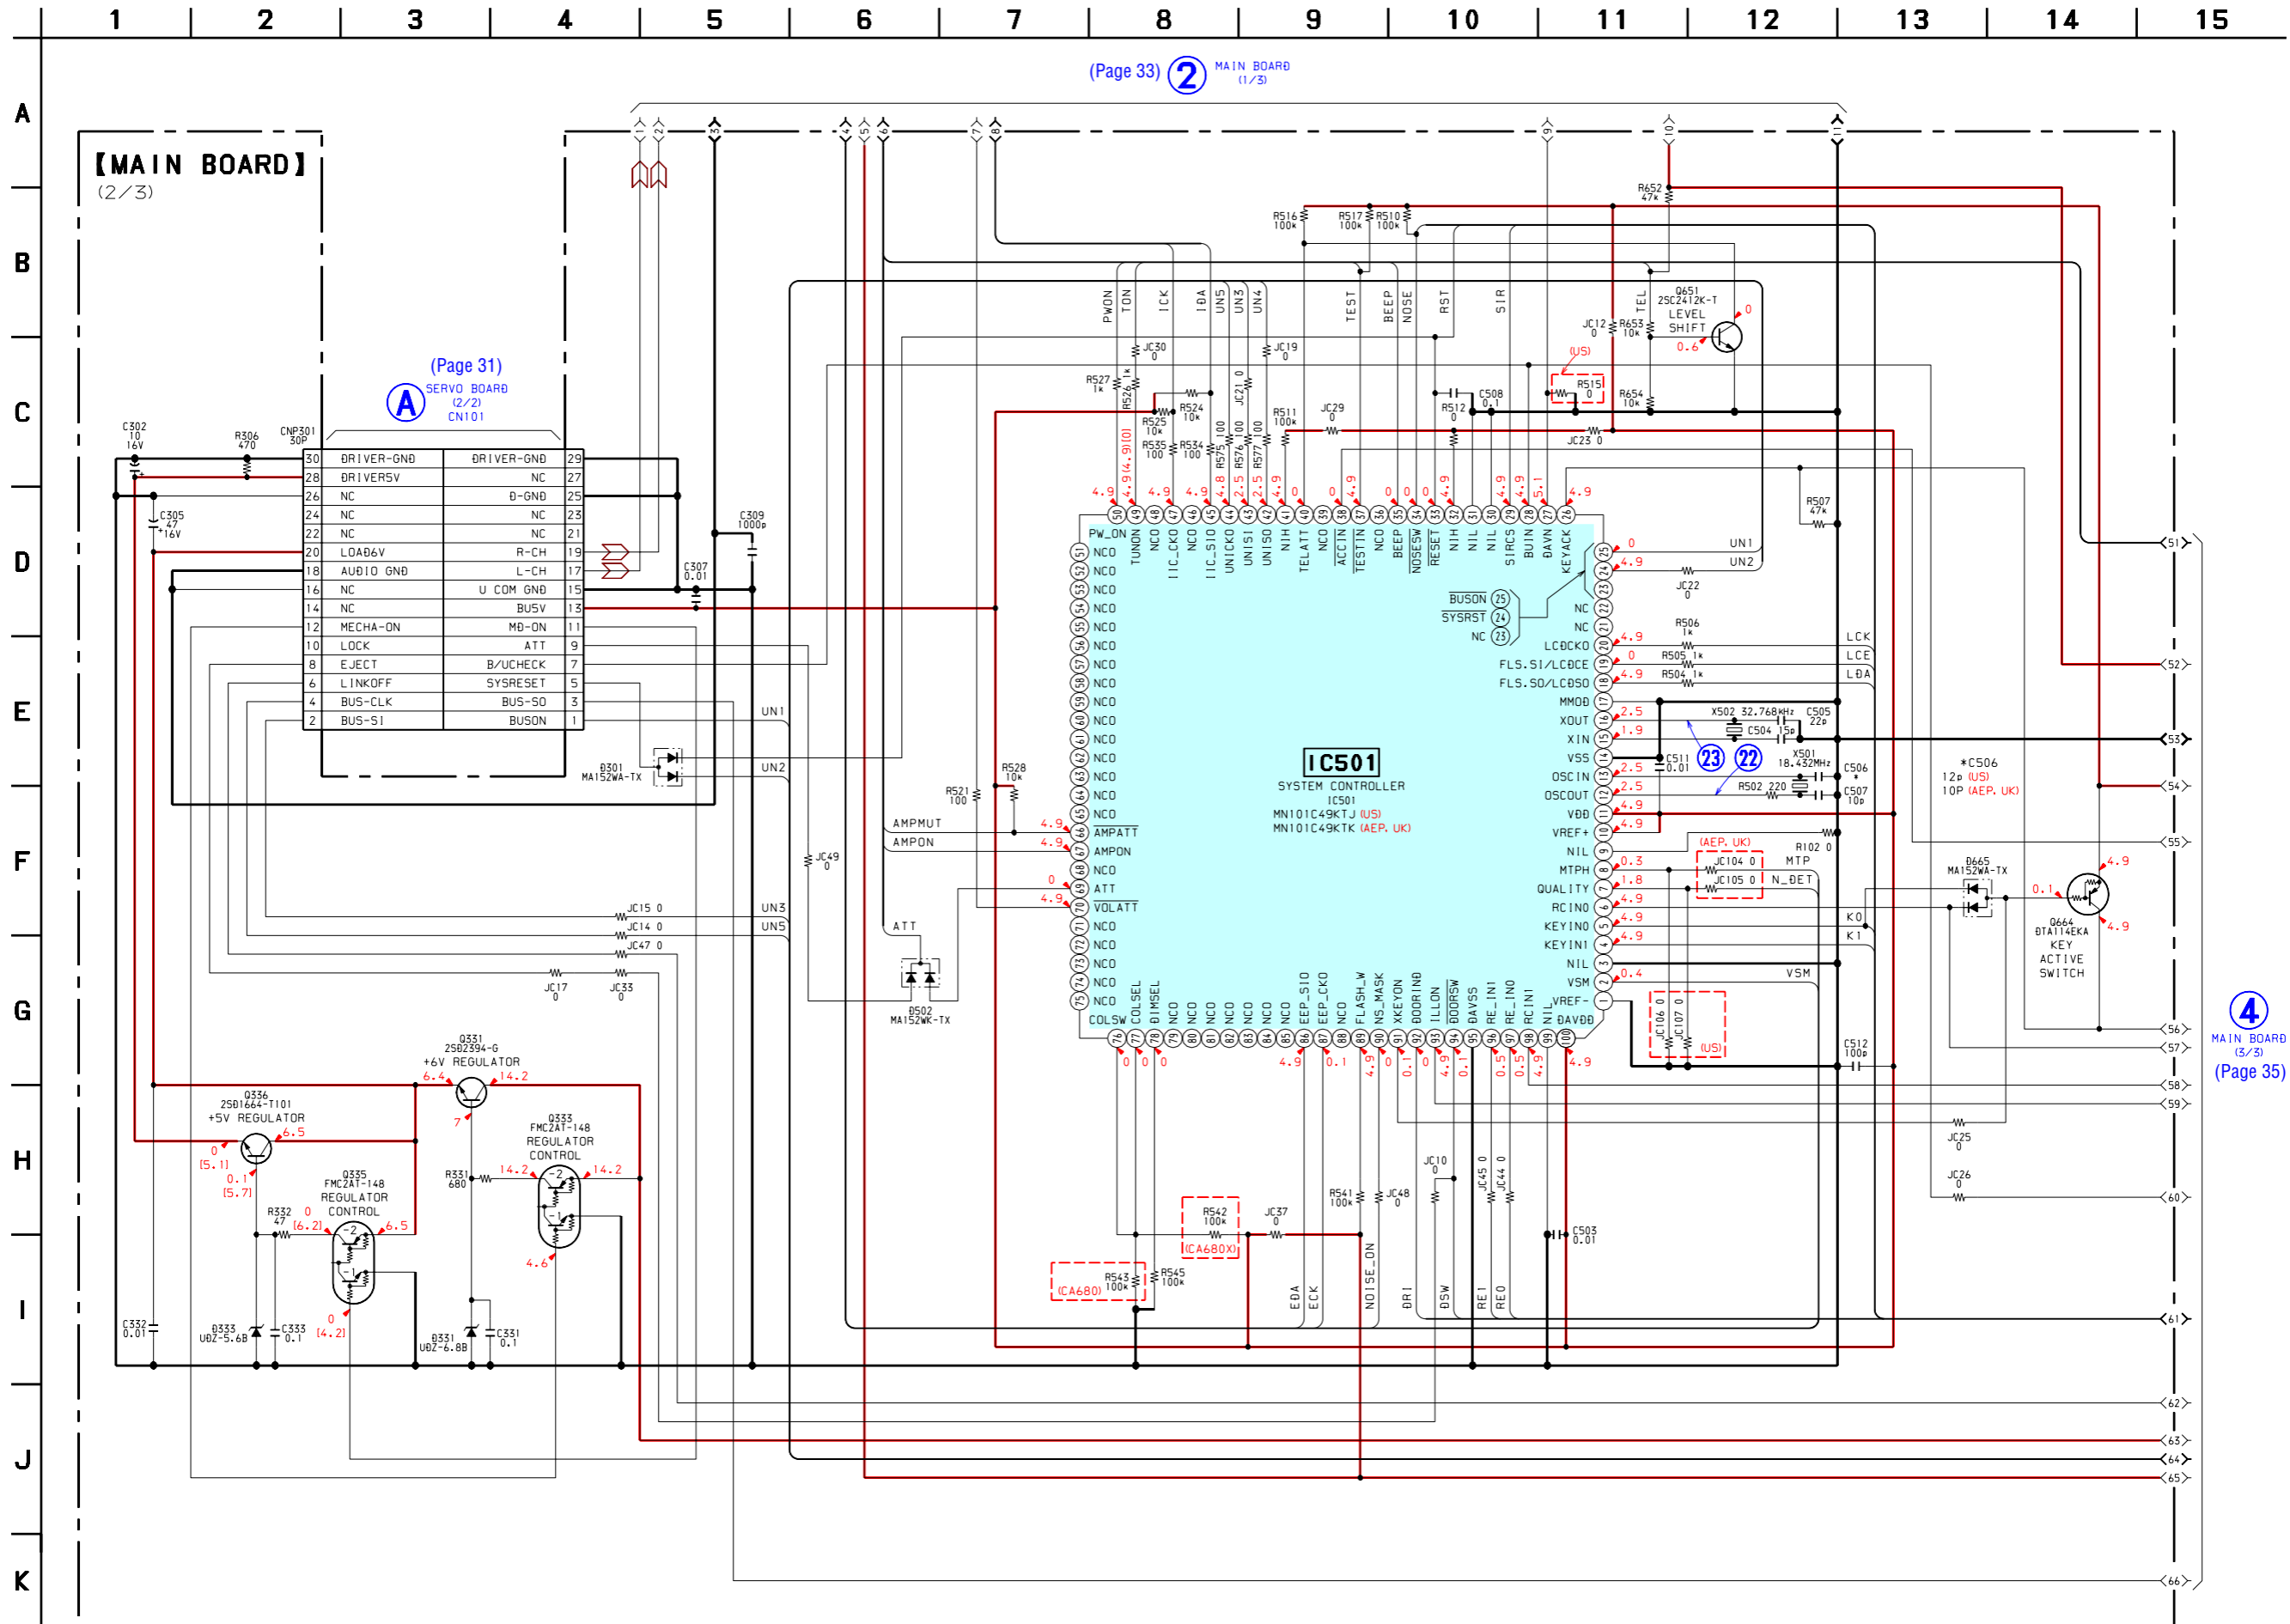

4 MAIN BOARD (3/3) (Page 35)

• Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.  
 no mark : FM  
 ( ) : AM (MW/LW)


4-12. SCHEMATIC DIAGRAM – MAIN Board (3/3) – • See page 18 for IC Block Diagrams.

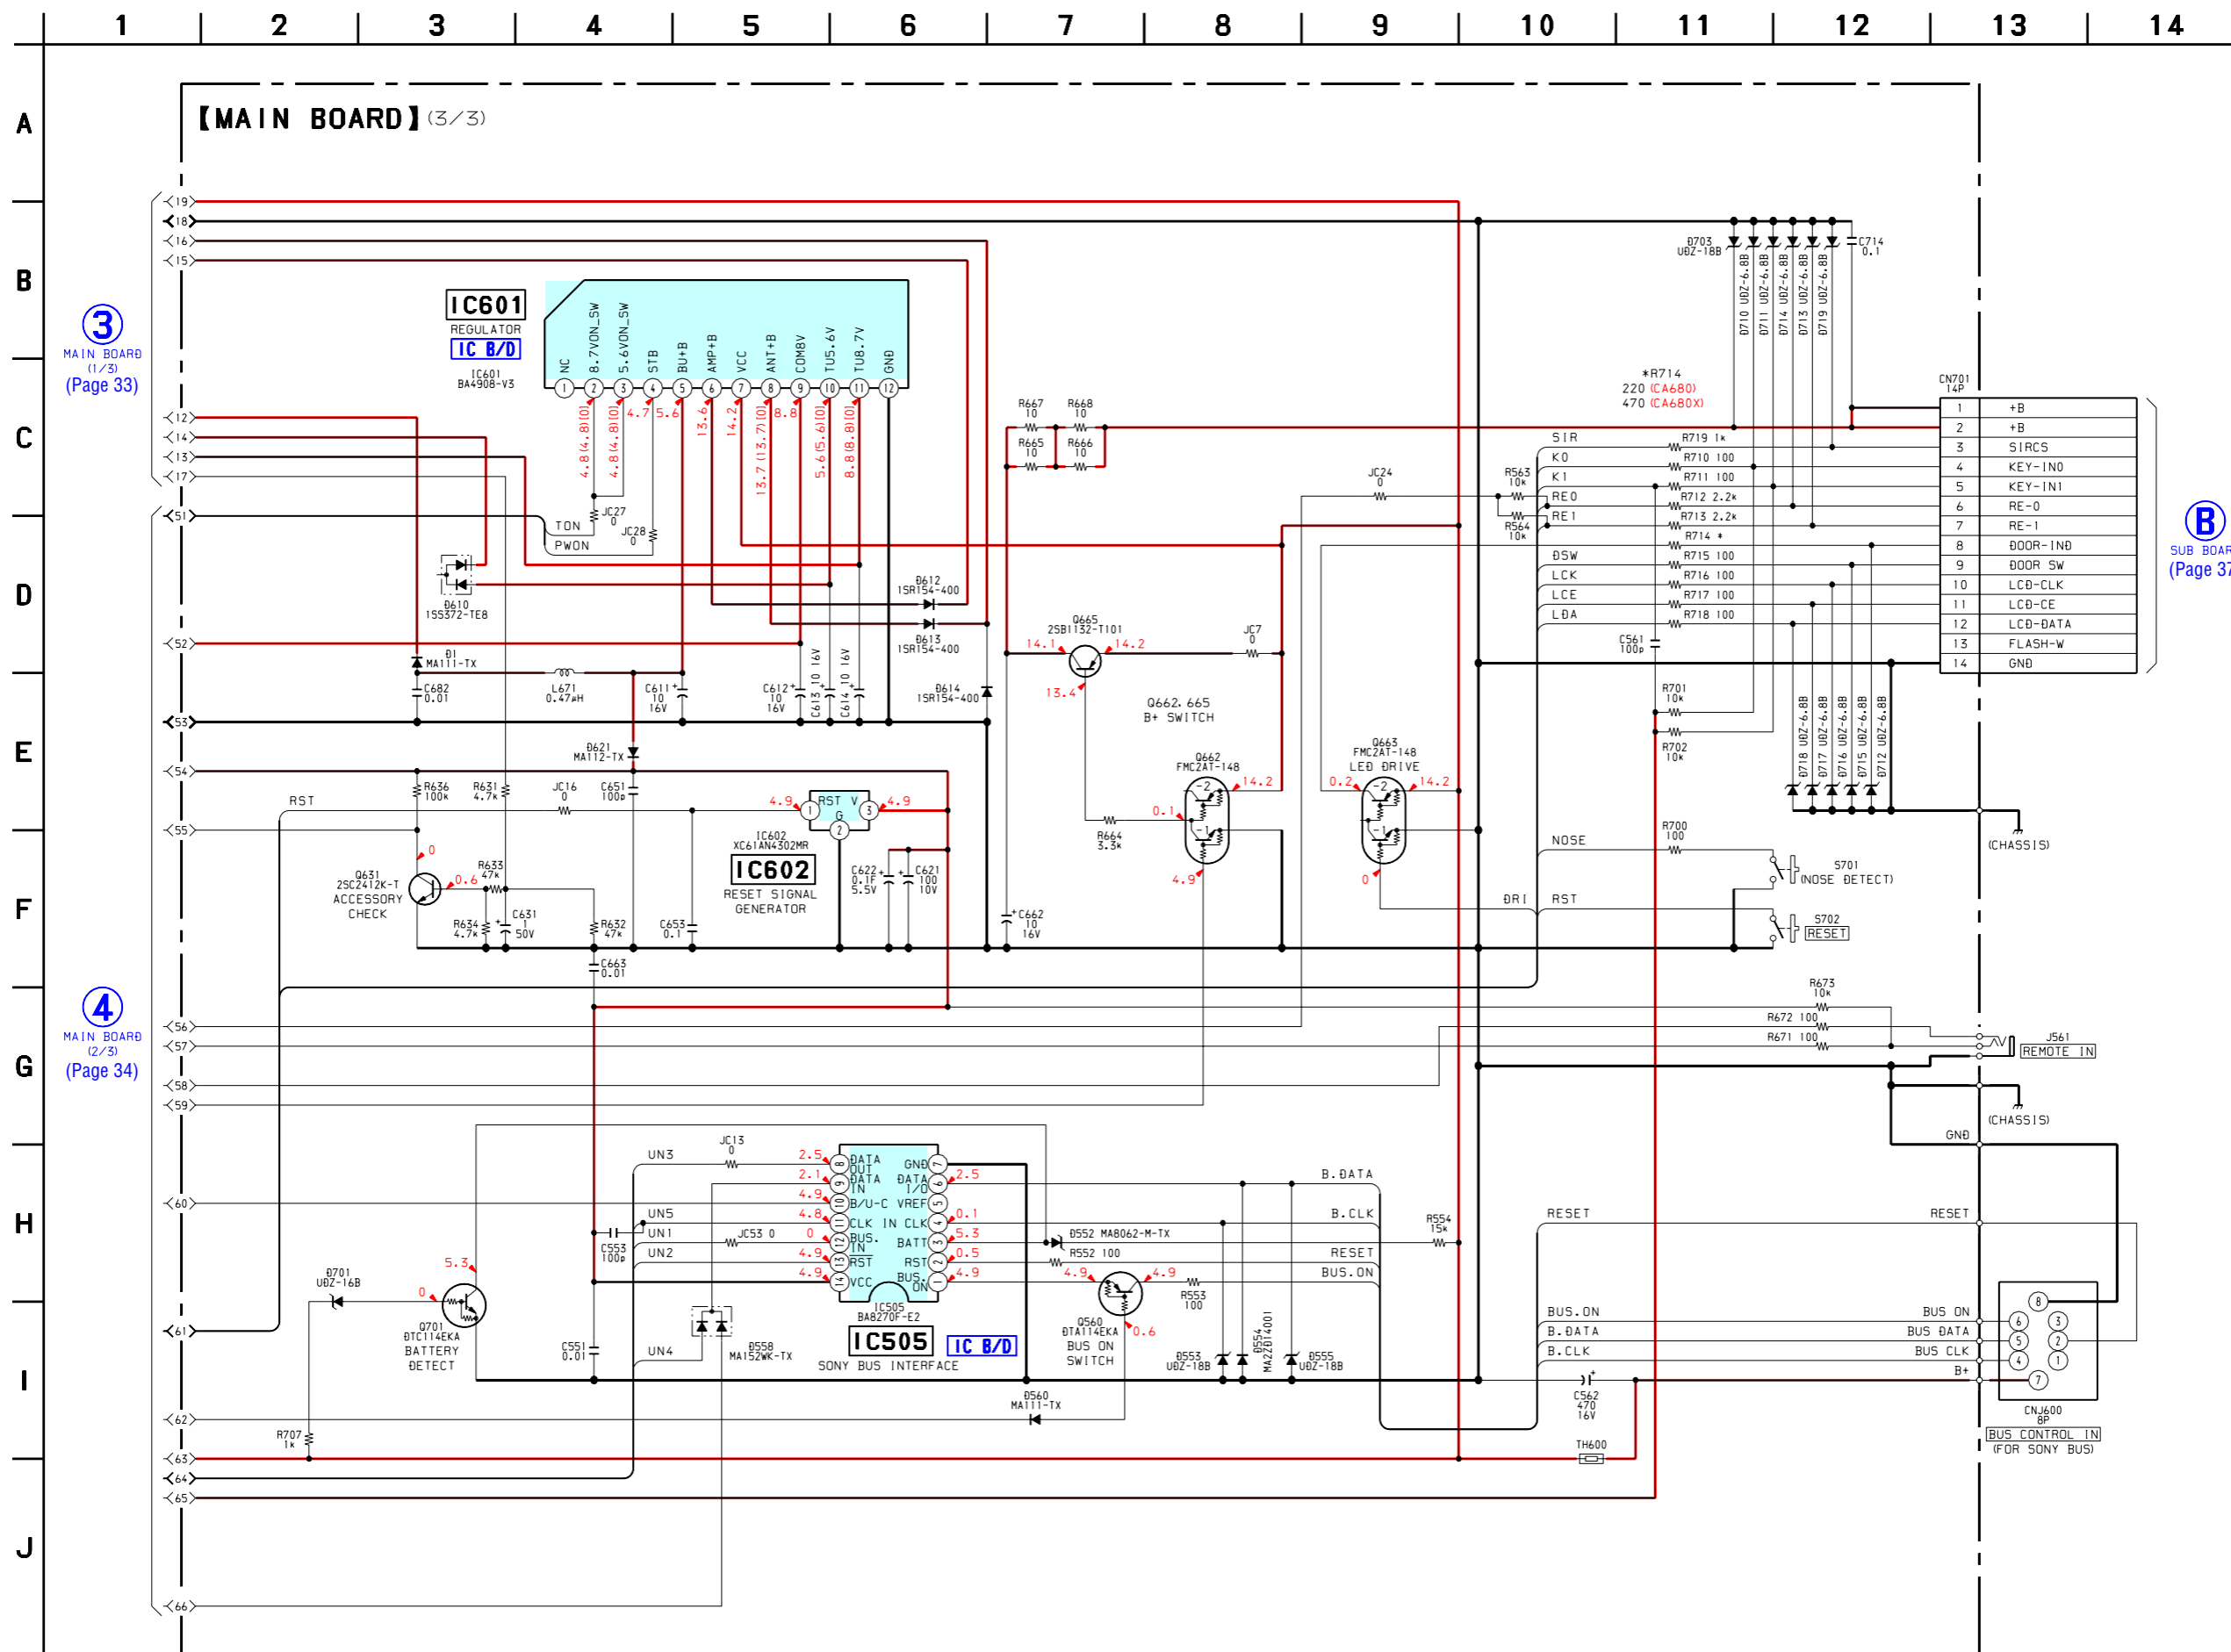


• Voltages are dc with respect to ground under no-signal (detuned) conditions.  
no mark : FM  
[ ] : MD PLAY

4-13. PRINTED WIRING BOARD – SUB Board – • See page 28 for Circuit Boards Location.


【SUB BOARD】(COMPONENT SIDE)

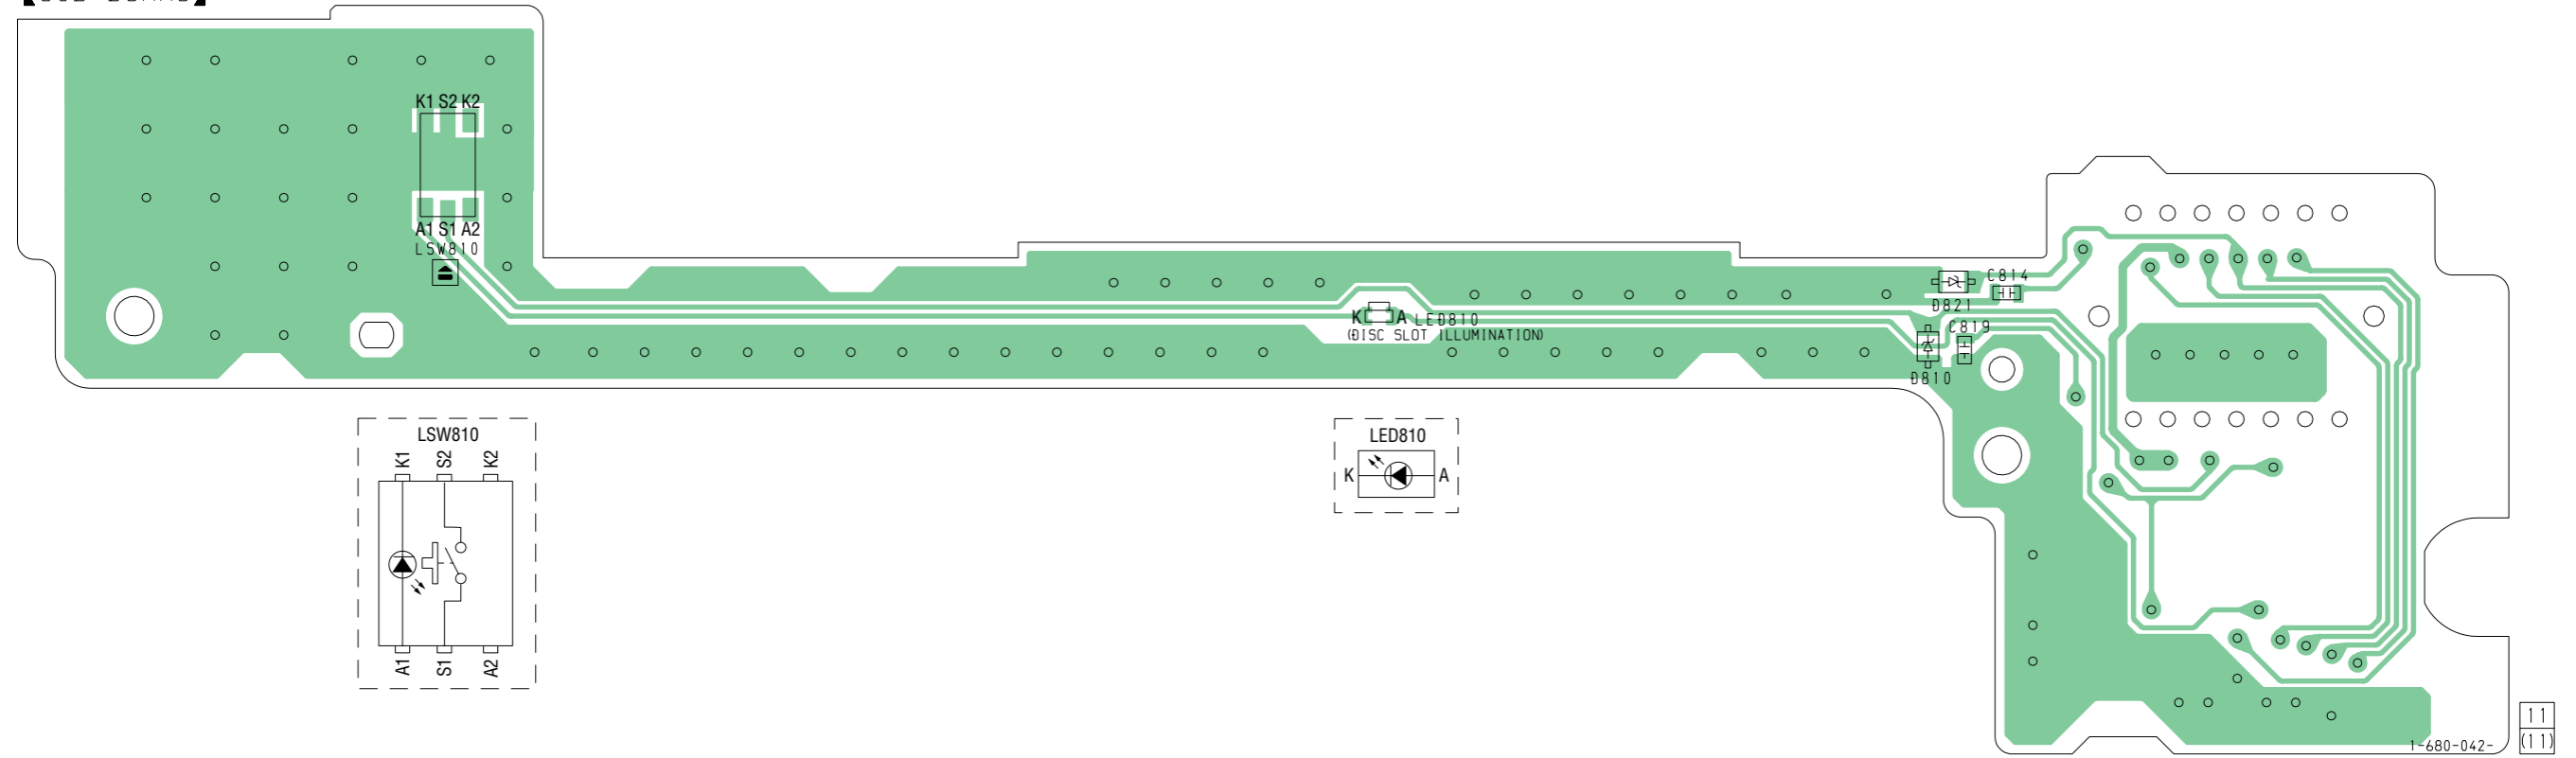

【SUB BOARD】(CONDUCTOR SIDE)

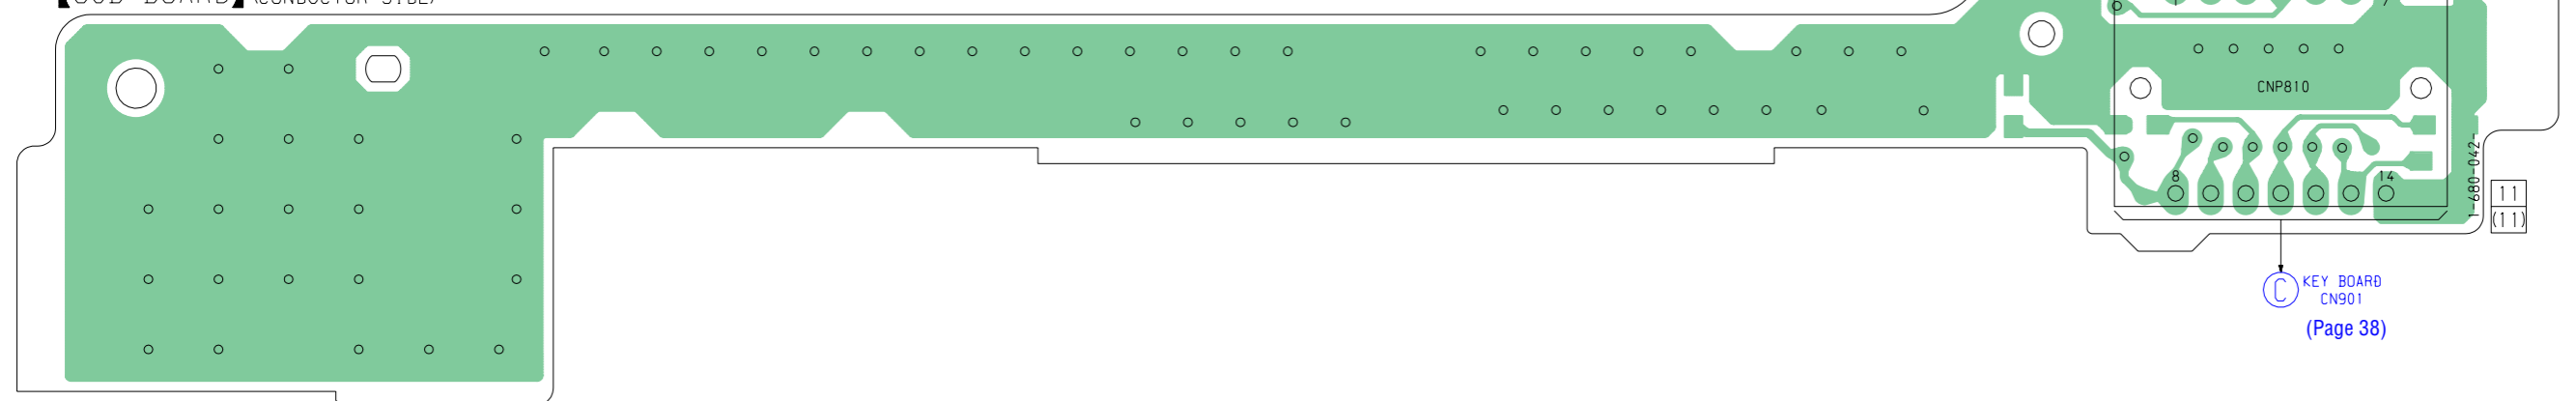


4-14. SCHEMATIC DIAGRAM – SUB Board –

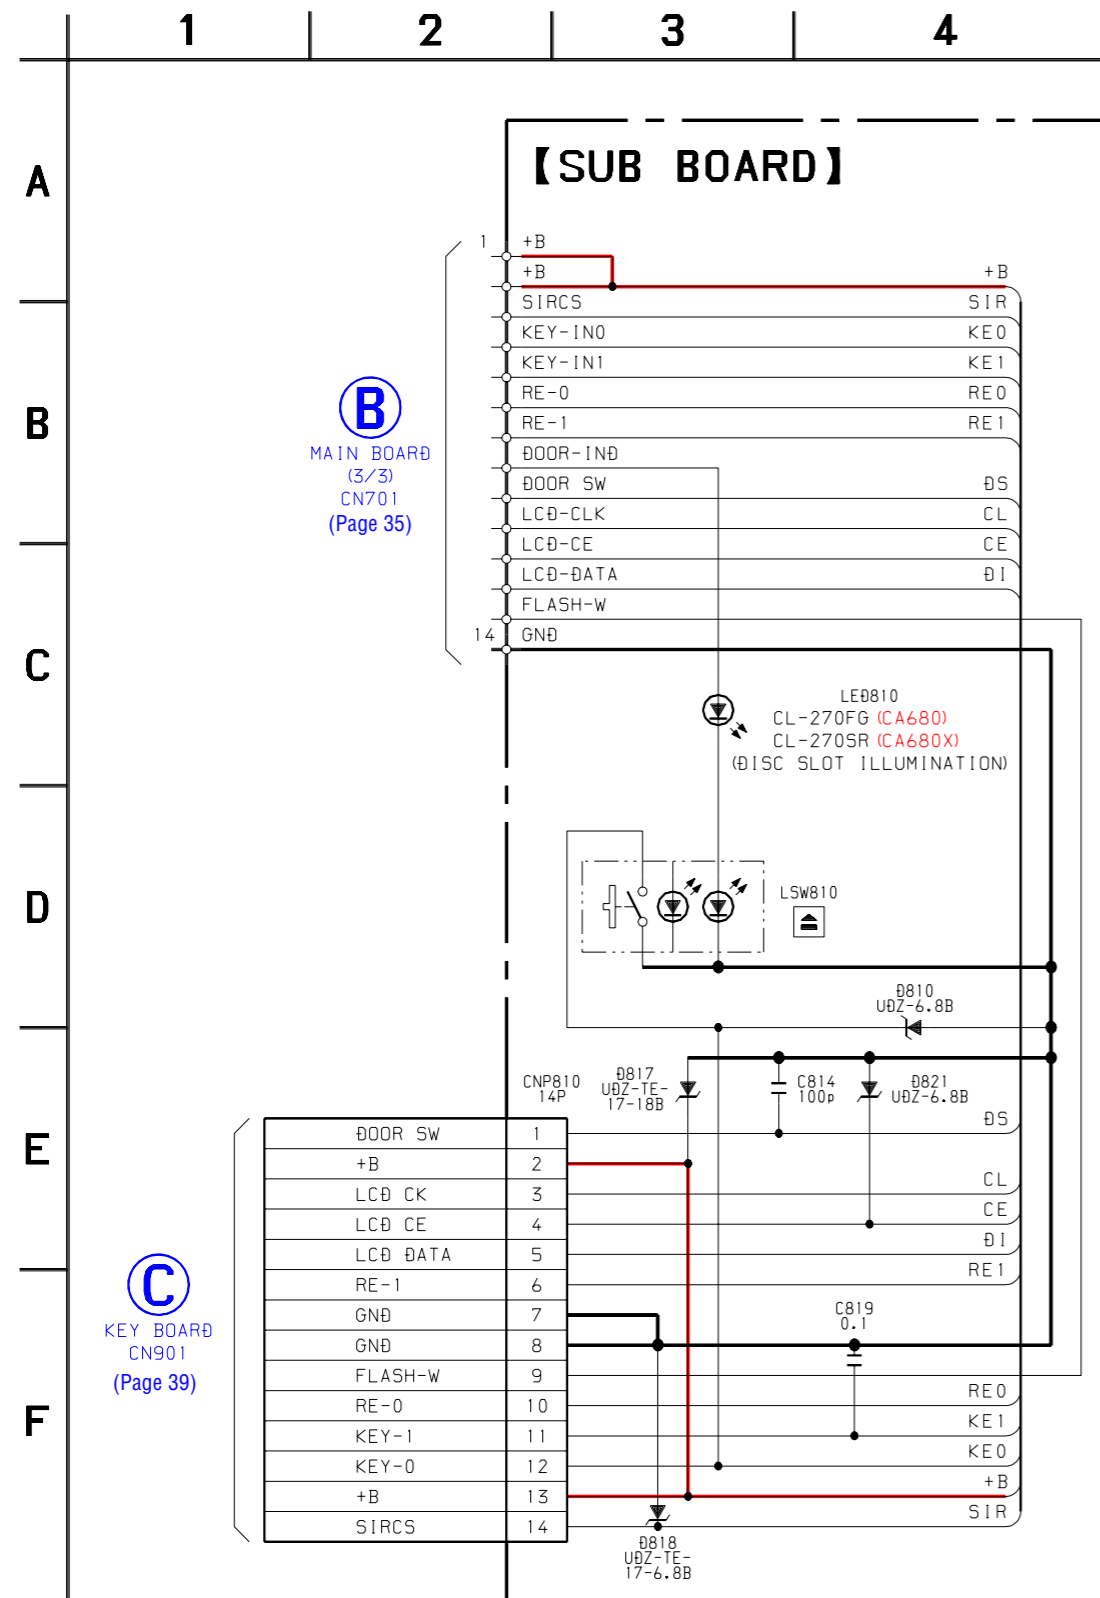


# MDX-CA680/CA680X

## 4-15. PRINTED WIRING BOARD – KEY Board – • See page 28 for Circuit Boards Location.

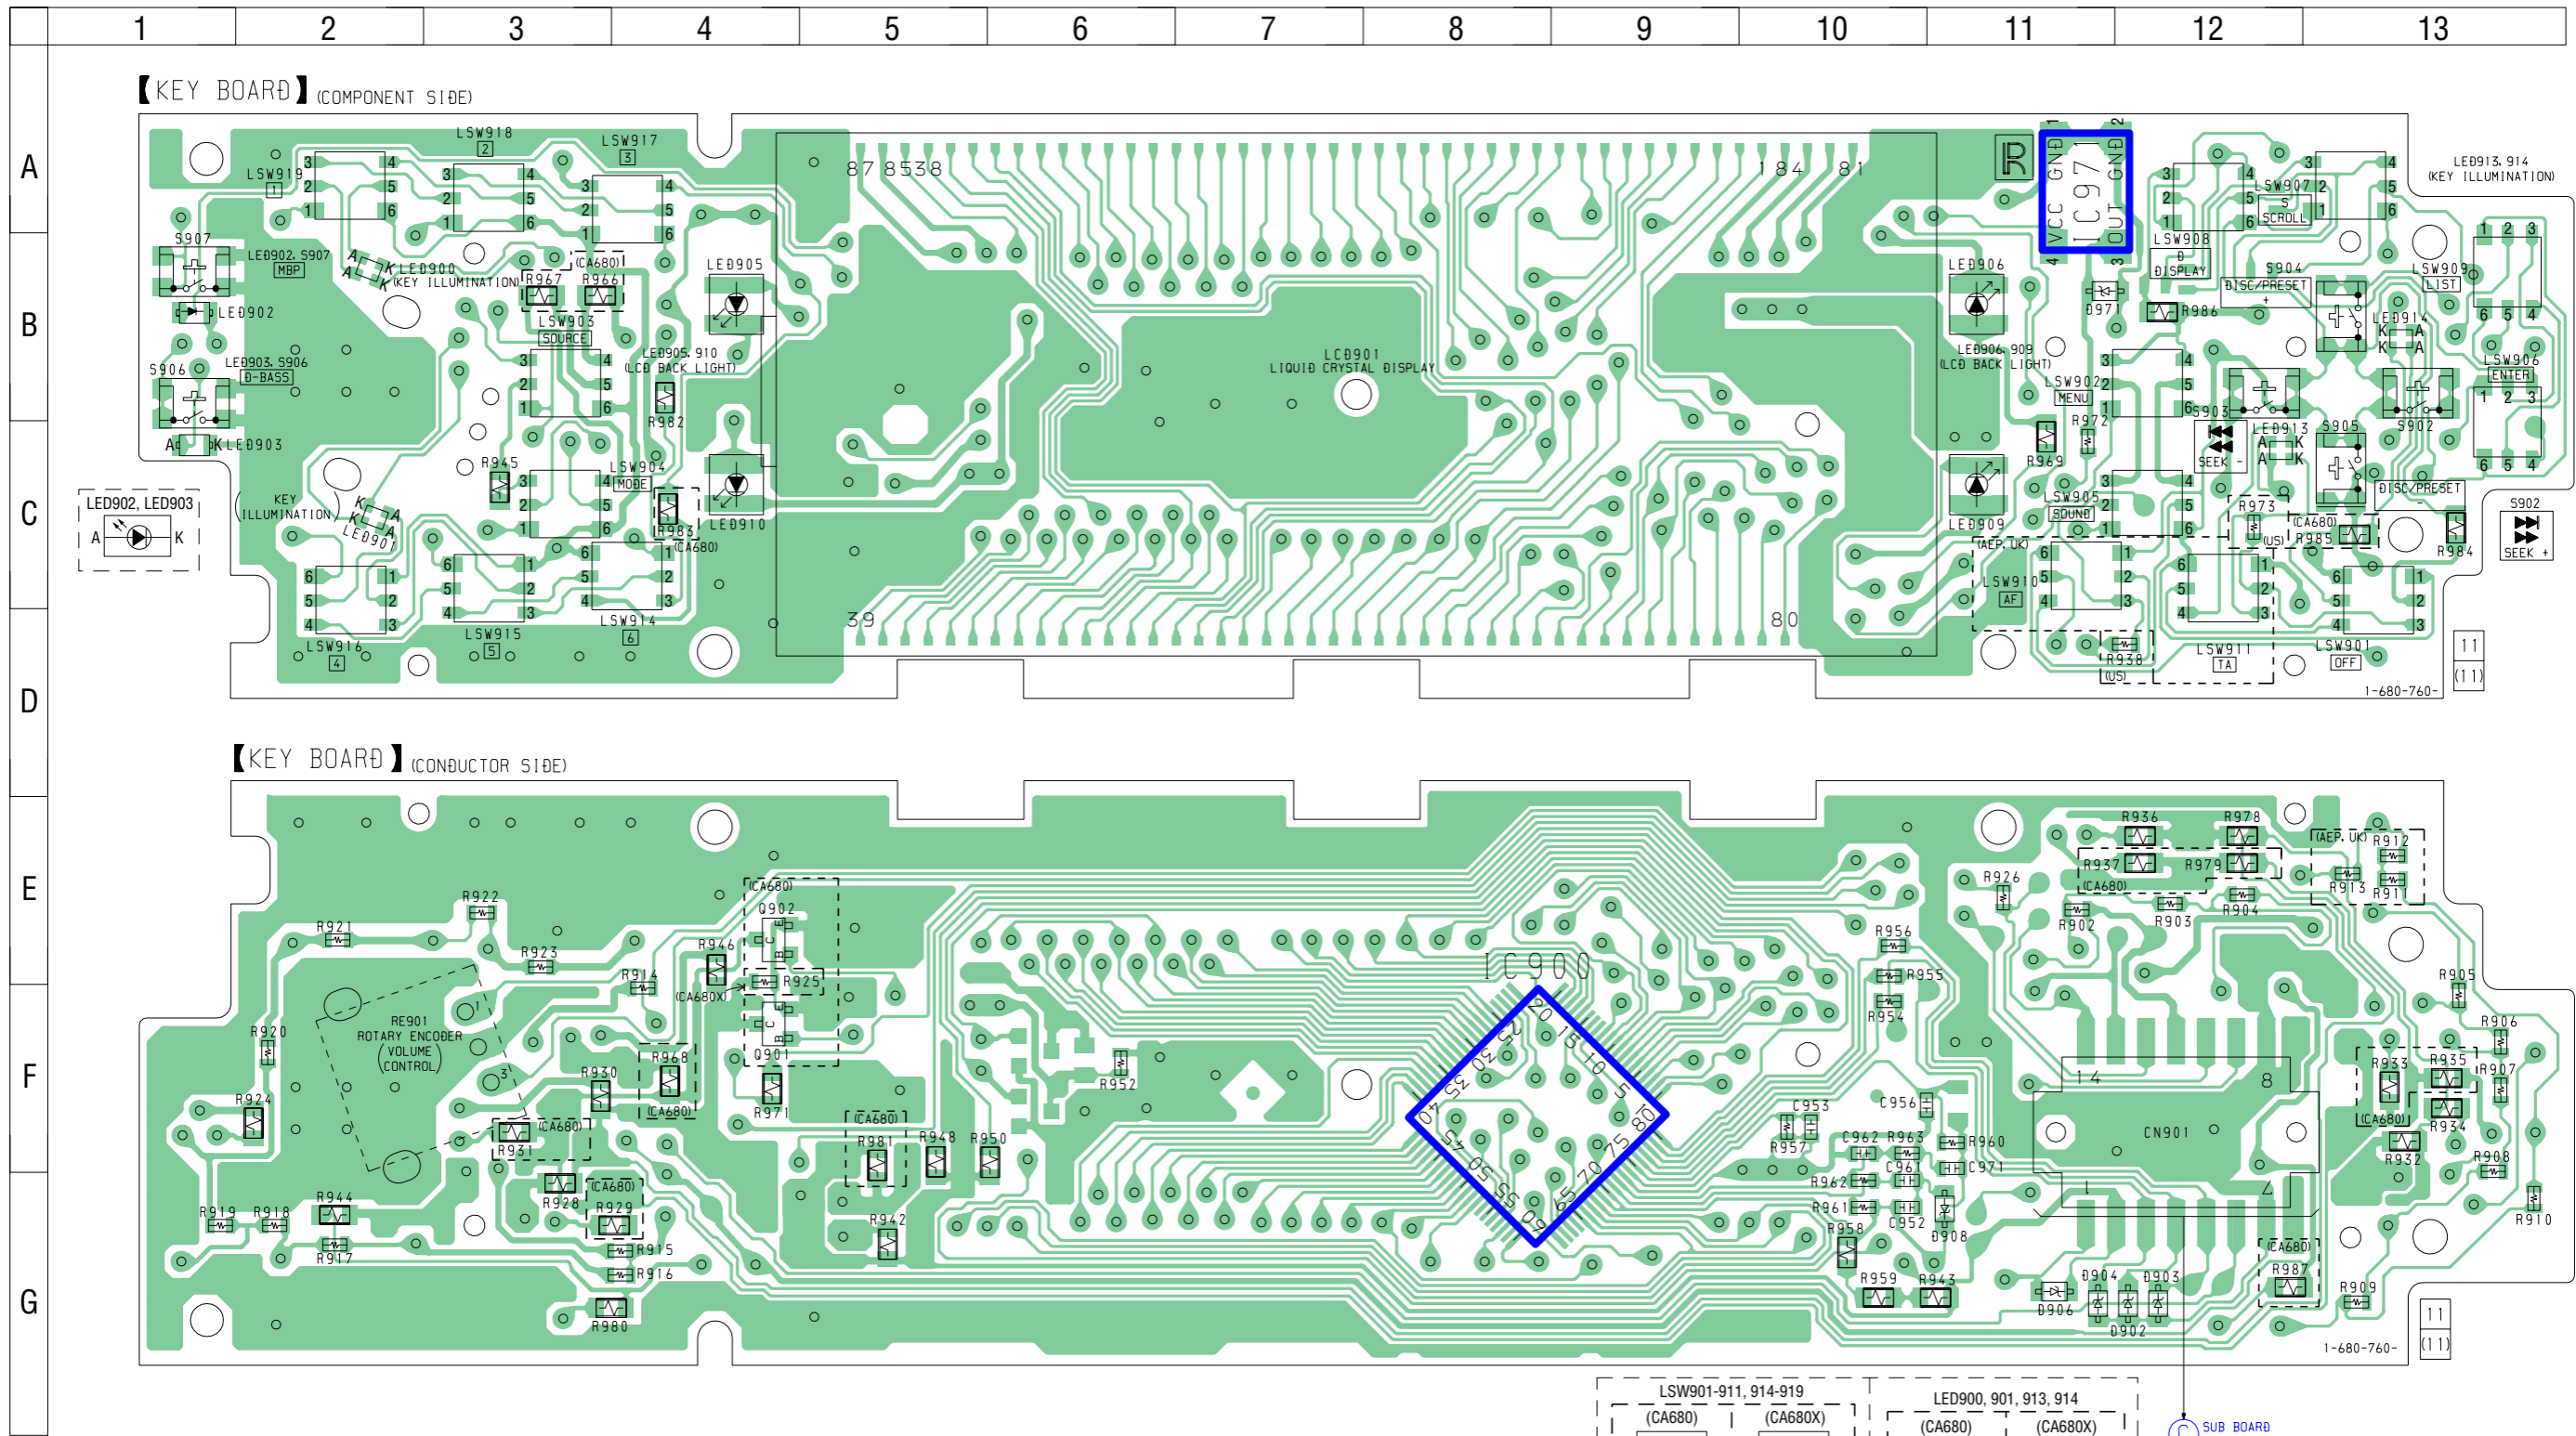

### • Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D902	G-12	LED902	B-1
D903	G-12	LED903	C-1
D904	G-11	LED905	B-4
D906	G-11	LED906	B-11
D908	G-11	LED909	C-11
D971	B-11	LED910	C-4
		LED913	C-12
IC900	F-8	LED914	B-13
IC971	A-11		
LED900	B-2	Q901	F-4
LED901	C-2	Q902	E-4

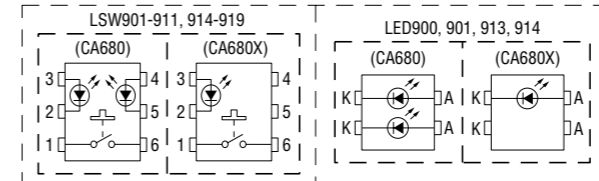


Ⓒ SUB BOARD CNP810 (Page 36)




• Waveforms  
– SERVO Board –


1 IC302 ①, ② (I, J) (MD Play Mode)

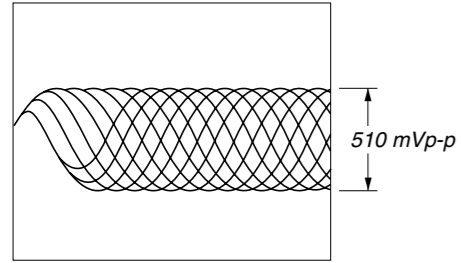


6 IC301 ⑦ (LRCK) (MD Play Mode)

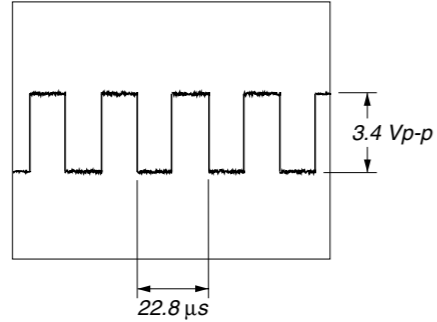


11 IC101 ④ (LRCK) (MD Play Mode)

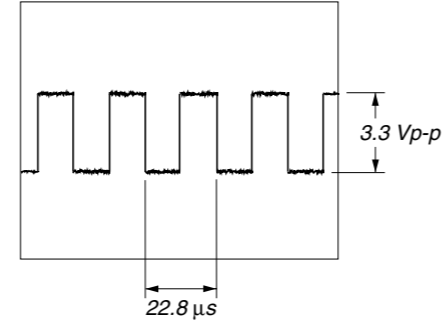


2 IC302 ④ (RFO) (MD Play Mode)

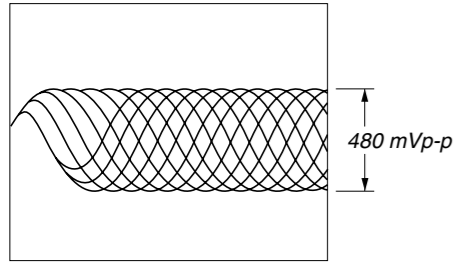


7 IC301 ⑧ (XBCK) (MD Play Mode)

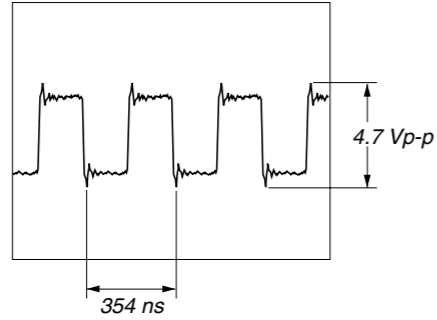


12 IC101 ⑥ (BCK) (MD Play Mode)

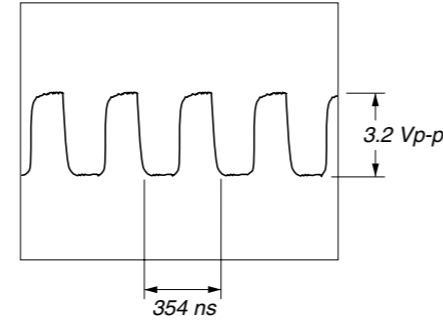


3 IC302 ③ (RF) (MD Play Mode)

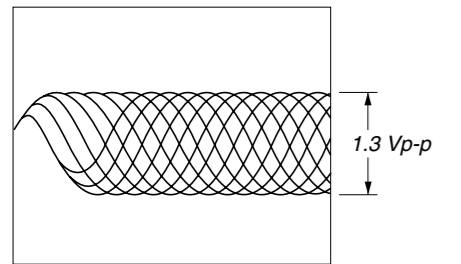


8 IC301 ⑨ (FS256) (MD Play Mode)

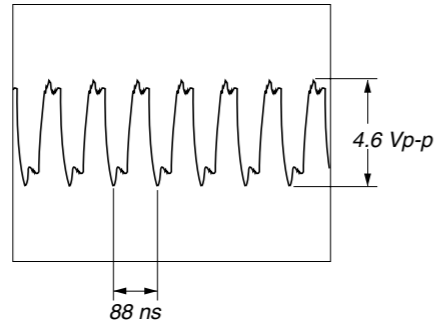


13 IC501 ③ (XTAL)

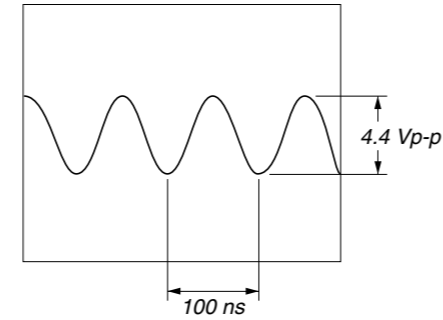


4 IC302 ④ (FE) (MD Play Mode)

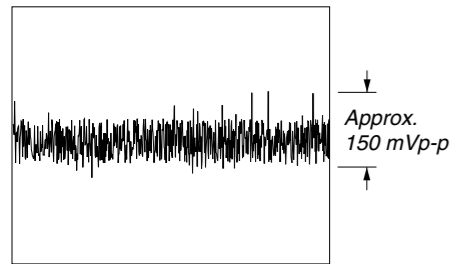


9 IC304 ⑤ (MD Play Mode)

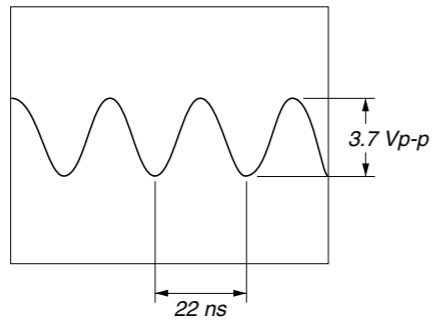

5 IC302 ⑤ (TE) (MD Play Mode)

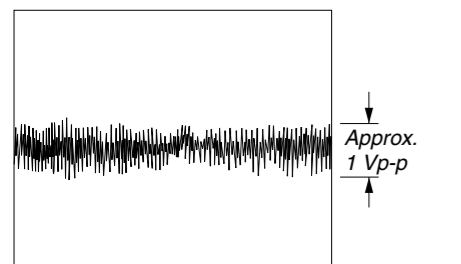


10 IC101 ① (XTI) (MD Play Mode)

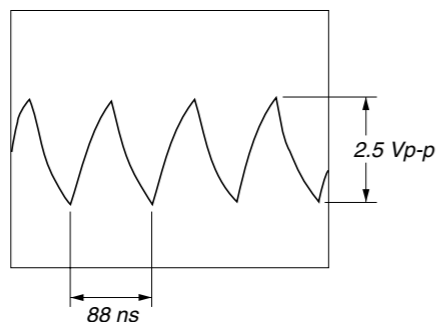


– MAIN Board –


21 IC51 ④ (OSCO)

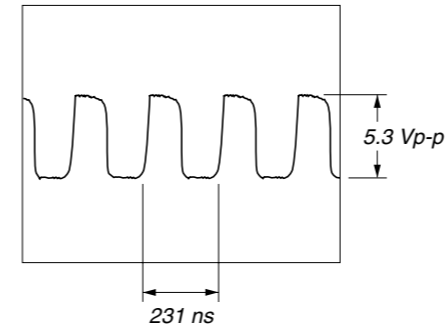

22 IC501 ⑫ (OSCOOUT)

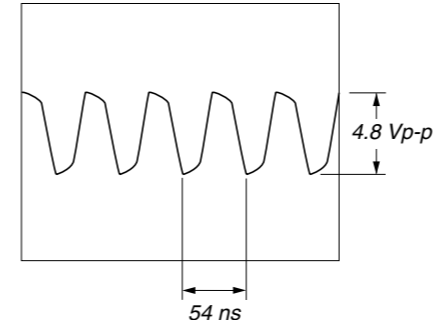


23 IC501 ⑬ (XOUT)

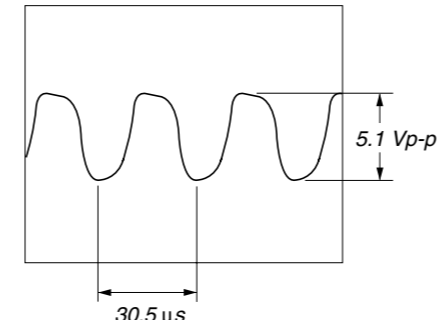

– KEY Board –

24 IC900 ⑦ (OSC)

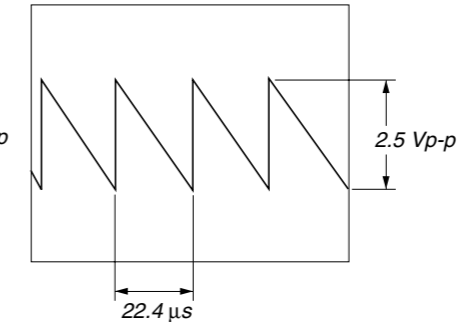



## 4-17. IC PIN FUNCTION DESCRIPTION

## • SERVO BOARD IC301 CXD2662R

(DIGITAL SIGNAL PROCESSOR, DIGITAL SERVO PROCESSOR, EFM/ACIRC ENCODER/DECODER, SHOCK PROOF MEMORY CONTROLLER, ATRAC ENCODER/DECODER)

Pin No.	Pin Name	I/O	Description
1	MNT0 (FOK)	O	Focus OK signal output to the MD mechanism controller (IC501) “H” is output when focus is on (“L”: NG)
2	MNT1 (SHOCK)	O	Track jump detection signal output to the MD mechanism controller (IC501)
3	MNT2 (XBUSY)	O	Busy monitor signal output to the MD mechanism controller (IC501)
4	MNT3 (SLOCK)	O	Spindle servo lock status monitor signal output to the MD mechanism controller (IC501)
5	SWDT	I	Writing serial data signal input from the MD mechanism controller (IC501)
6	SCLK	I	Serial data transfer clock signal input from the MD mechanism controller (IC501)
7	XLAT	I	Serial data latch pulse signal input from the MD mechanism controller (IC501)
8	SRDT	O (3)	Reading serial data signal output to the MD mechanism controller (IC501)
9	SENS	O (3)	Internal status (SENSE) output to the MD mechanism controller (IC501)
10	XRST	I	Reset signal input from the MD mechanism controller (IC501) “L”: reset
11	SQSY	O	Subcode Q sync (SCOR) output to the MD mechanism controller (IC501) “L” is output every 13.3 msec Almost all, “H” is output
12	DQSY	O	Digital In U-bit CD format subcode Q sync (SCOR) output terminal “L” is output every 13.3 msec Almost all, “H” is output Not used (open)
13	RECP	I	Laser power selection signal input terminal “L”: playback mode, “H”: recording mode (fixed at “L” in this set)
14	XINT	O	Interrupt status output to the MD mechanism controller (IC501)
15	TX	O	Recording data output enable signal input terminal Writing data transmission timing input (Also serves as the magnetic head on/off output) Not used (fixed at “L”)
16	OSCI	I	System clock signal (1024Fs=45 MHz) input from the oscillator circuit
17	OSCO	O	System clock signal (1024Fs=45 MHz) output terminal Not used (open)
18	XTSL	I	Input terminal for the system clock frequency setting “L”: 45.1584 MHz, “H”: 22.5792 MHz (fixed at “L” in this set)
19	DIN0	I	Digital audio signal input terminal when recording mode Not used (fixed at “L”)
20	DIN1	I	Digital audio signal input terminal when recording mode Not used (fixed at “L”)
21	DOUT	O	Digital audio signal output terminal when playback mode Not used
22	DADTAI	I	Recording data input terminal Not used (fixed at “L”)
23	LRCKI	I	L/R sampling clock signal (44.1 kHz) input terminal Not used (fixed at “L”)
24	XBCKI	I	Bit clock signal (2.8224 MHz) input terminal Not used (fixed at “L”)
25	ADDT	I	Recording data input terminal Not used (fixed at “L”)
26	DADT	O	Playback data output to the PCM1718E (IC101)
27	LRCK	O	L/R sampling clock signal (44.1 kHz) output to the PCM1718E (IC101)
28	XBCK	O	Bit clock signal (2.8224 MHz) output to the PCM1718E (IC101)
29	FS256	O	Clock signal (11.2896 MHz) output to the PCM1718E (IC101)
30	DVDD	—	Power supply terminal (+3.3V) (digital system)
31 to 34	A03 to A00	O	Address signal output to the D-RAM (IC307)
35	A10	O	Address signal output to the external D-RAM Not used (open)
36 to 40	A04 to A08	O	Address signal output to the D-RAM (IC307)
41	A11	O	Address signal output to the external D-RAM Not used (open)
42	DVSS	—	Ground terminal (digital system)
43	XOE	O	Output enable signal output to the D-RAM (IC307) “L” active
44	XCAS	O	Column address strobe signal output to the D-RAM (IC307) “L” active
45	A09	O	Address signal output to the D-RAM (IC307)

Pin No.	Pin Name	I/O	Description
46	XRAS	O	Row address strobe signal output to the D-RAM (IC307) "L" active
47	XWE	O	Write enable signal output to the D-RAM (IC307) "L" active
48	D1	I/O	Two-way data bus with the D-RAM (IC307)
49	D0	I/O	
50	D2	I/O	
51	D3	I/O	
52	MVCI	I	Digital in PLL oscillation input from the external VCO Not used (fixed at "L")
53	ASYO	O	Playback EFM full-swing output terminal
54	ASYI	I (A)	Playback EFM asymmetry comparator voltage input terminal
55	AVDD	—	Power supply terminal (+3.3V) (analog system)
56	BIAS	I (A)	Playback EFM asymmetry circuit constant current input terminal
57	RFI	I (A)	Playback EFM RF signal input from the CXA2523AR (IC302)
58	AVSS	—	Ground terminal (analog system)
59	PCO	O (3)	Phase comparison output for master clock of the recording/playback EFM master PLL
60	FILI	I (A)	Filter input for master clock of the recording/playback master PLL
61	FILO	O (A)	Filter output for master clock of the recording/playback master PLL
62	CLTV	I (A)	Internal VCO control voltage input of the recording/playback master PLL
63	PEAK	I (A)	Light amount signal (RF/ABCD) peak hold input from the CXA2523AR (IC302)
64	BOTM	I (A)	Light amount signal (RF/ABCD) bottom hold input from the CXA2523AR (IC302)
65	ABCD	I (A)	Light amount signal (ABCD) input from the CXA2523AR (IC302)
66	FE	I (A)	Focus error signal input from the CXA2523AR (IC302)
67	AUX1	I (A)	Auxiliary signal (I <sub>3</sub> signal/temperature signal) input from the CXA2523AR (IC302)
68	VC	I (A)	Middle point voltage (+1.65V) input from the CXA2523AR (IC302)
69	ADIO	O (A)	Monitor output of the A/D converter input signal Not used (open)
70	AVDD	—	Power supply terminal (+3.3V) (analog system)
71	ADRT	I (A)	A/D converter operational range upper limit voltage input terminal (fixed at "H" in this set)
72	ADRB	I (A)	A/D converter operational range lower limit voltage input terminal (fixed at "L" in this set)
73	AVSS	—	Ground terminal (analog system)
74	SE	I (A)	Sled error signal input from the CXA2523AR (IC302)
75	TE	I (A)	Tracking error signal input from the CXA2523AR (IC302)
76	DCHG	I (A)	Connected to the +3.3V power supply
77	APC	I (A)	Error signal input for the laser automatic power control Not used (fixed at "L")
78	ADFG	I	ADIP duplex FM signal (22.05 kHz ± 1 kHz) input from the CXA2523AR (IC302)
79	F0CNT	O	Filter f <sub>0</sub> control signal output terminal Not used (open)
80	XLRF	O	Serial data latch pulse signal output terminal Not used (open)
81	CKRF	O	Serial data transfer clock signal output terminal Not used (open)
82	DTRF	O	Writing serial data output terminal Not used (open)
83	APCREF	O	Control signal output to the reference voltage generator circuit for the laser automatic power control
84	TEST0	O	Input terminal for the test Not used (open)
85	TRDR	O	Tracking servo drive PWM signal (–) output to the BH6518FS (IC303)
86	TFDR	O	Tracking servo drive PWM signal (+) output to the BH6518FS (IC303)
87	DVDD	—	Power supply terminal (+3.3V) (digital system)
88	FFDR	O	Focus servo drive PWM signal (+) output to the BH6518FS (IC303)
89	FRDR	O	Focus servo drive PWM signal (–) output to the BH6518FS (IC303)
90	FS4	O	Clock signal (176.4 kHz) output terminal (X'tal system) Not used (open)

Pin No.	Pin Name	I/O	Description
91	SRDR	O	Sled servo drive PWM signal (-) output to the BH6518FS (IC303)
92	SFDR	O	Sled servo drive PWM signal (+) output to the BH6518FS (IC303)
93	SPRD	O	Spindle servo drive PWM signal (-) output to the BH6518FS (IC303)
94	SPFD	O	Spindle servo drive PWM signal (+) output to the BH6518FS (IC303)
95	FGIN	I	Input terminal for the test (fixed at "L")
96	TEST1	I	
97	TEST2	I	
98	TEST3	I	
99	DVSS	—	Ground terminal (digital system)
100	EFMO	O	EFM signal output terminal when recording mode Not used (open)

\* I (A) for analog input, O (3) for 3-state output, and O (A) for analog output in the column I/O.

## • SERVO BOARD IC302 CXA2523AR (RF AMP, FOCUS/TRACKING ERROR AMP)

Pin No.	Pin Name	I/O	Description
1	I	I	I-V converted RF signal I input from the optical pick-up block detector
2	J	I	I-V converted RF signal J input from the optical pick-up block detector
3	VC	O	Middle point voltage (+1.65V) generation output terminal
4 to 9	A to F	I	Signal input from the optical pick-up detector
10	PD	I	Light amount monitor input from the optical pick-up block laser diode
11	APC	O	Laser amplifier output terminal to the automatic power control circuit
12	APCREF	I	Reference voltage input terminal for setting laser power
13	GND	—	Ground terminal
14	TEMPI	I	Connected to the temperature sensor Not used (open)
15	TEMPR	O	Output terminal for a temperature sensor reference voltage Not used (open)
16	SWDT	I	Writing serial data input from the MD mechanism controller (IC501)
17	SCLK	I	Serial data transfer clock signal input from the MD mechanism controller (IC501)
18	XLAT	I	Serial data latch pulse signal input from the MD mechanism controller (IC501)
19	XSTBY	I	Standby signal input terminal “L”: standby (fixed at “H” in this set)
20	F0CNT	I	Center frequency control voltage input terminal of internal circuit (BPF22, BPF3T, EQ) input terminal
21	VREF	O	Reference voltage output terminal Not used (open)
22	EQADJ	I	Center frequency setting terminal for the internal circuit (EQ)
23	3TADJ	I	Center frequency setting terminal for the internal circuit (BPF3T)
24	VCC	—	Power supply terminal (+3.3V)
25	WBLADJ	I	Center frequency setting terminal for the internal circuit (BPF22)
26	TE	O	Tracking error signal output to the CXD2662R (IC301)
27	CSLED	I	Connected to the external capacitor for low-pass filter of the sled error signal
28	SE	O	Sled error signal output to the CXD2662R (IC301)
29	ADFM	O	FM signal output of the ADIP
30	ADIN	I	Receives a ADIP FM signal in AC coupling
31	ADAGC	I	Connected to the external capacitor for ADIP AGC
32	ADFG	O	ADIP duplex signal (22.05 kHz $\pm$ 1 kHz) output to the CXD2662R (IC301)
33	AUX	O	Auxiliary signal (I <sub>3</sub> signal/temperature signal) output terminal Not used (open)
34	FE	O	Focus error signal output to the CXD2662R (IC301)
35	ABCD	O	Light amount signal (ABCD) output to the CXD2662R (IC301)
36	BOTM	O	Light amount signal (RF/ABCD) bottom hold output to the CXD2662R (IC301)
37	PEAK	O	Light amount signal (RF/ABCD) peak hold output to the CXD2662R (IC301)
38	RF	O	Playback EFM RF signal output to the CXD2662R (IC301)
39	RFAGC	I	Connected to the external capacitor for RF auto gain control circuit
40	AGCI	I	Receives a RF signal in AC coupling
41	COMPO	O	User comparator output terminal Not used (open)
42	COMPP	I	User comparator input terminal Not used (fixed at “L”)
43	ADDC	I	Connected to the external capacitor for cutting the low band of the ADIP amplifier
44	OPO	O	User operational amplifier output terminal Not used (open)
45	OPN	I	User operational amplifier inversion input terminal Not used (fixed at “L”)
46	RFO	O	RF signal output
47	MORFI	I	Receives a MO RF signal in AC coupling
48	MORFO	O	MO RF signal output

• SERVO BOARD IC501 CXP84340-231Q (MD MECHANISM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1 to 5	TIN3 to TIN7	I/O	Input of the 4×8 matrix test keys (“L” is always output, except in test mode) Not used (open)
6	LOAD	O	Loading motor control signal output to the motor driver (IC305) “H” active *1
7	EJECT	O	Loading motor control signal output to the motor driver (IC305) “H” active *1
8, 9	—	O	Not used (open)
10	MDMON	O	Power supply on/off control signal output of the MD mechanism deck section main power supply and loading motor drive (IC305) power supply “H”: power on
11	$\overline{\text{E-SW}}$	I	Inputs a disc loading completion detect switch detection signal “L”: When completed of a disc loading operation
12	AG-OK	O	Output of aging status in test mode “L”: under aging, “H”: aging completed Not used (open)
13	ADJ-OK	O	Output of status when aging completed in test mode “L”: aging NG, “H”: aging OK Not used (open)
14 to 17	—	O	Not used (open)
18	DFCTSEL	I	Select whether defect function is used for the CXD2662R (IC301) “L”: used this function, “H”: not used this function (fixed at “H” in this set)
19	DPLLSEL	I	Select whether double PLL function is used for the CXD2662R (IC301) “L”: used this function, “H”: not used this function (fixed at “H” in this set)
20	EMPHSEL	I	Select whether emphasis signal output from pin or unilink data “L”: outputs from both pin and unilink data, “H”: output from pin only (fixed at “H” in this set)
21	LOCK	O	Mini-disc lock detection signal output terminal Not used
22	—	O	Not used (open)
23	2M/4M	I	Select whether D-RAM capacitance 2M bit or 4M bit “L”: 4M bit (external D-RAM), “H”: 2M bit (internal D-RAM of CXD2652AR) (fixed at “L” in this set)
24, 25	—	O	Not used (open)
26	MNT0	I	Focus OK signal input from the CXD2662R (IC301) “H” is input when focus is on (“L”: NG)
27	MNT1	I	Track jump detection signal input from the CXD2662R (IC301)
28	MNT2	I	Busy monitor signal input from the CXD2662R (IC301)
29	MNT3	I	Spindle servo lock status monitor signal input from the CXD2662R (IC301)
30	$\overline{\text{RESET}}$	I	System reset signal input from the system controller (IC501), reset signal generator (IC602) and reset switch (S702) “L”: reset For several hundreds msec. after the power supply rises, “L” is input, then it changes to “H”
31	EXTAL	I	Main system clock input terminal (10 MHz)
32	XTAL	O	Main system clock output terminal (10 MHz)
33	VSS	—	Ground terminal
34	TX	O	Sub system clock output terminal (32.768 kHz) Not used (open)
35	TEX	I	Sub system clock input terminal (32.768 kHz) Not used (fixed at “L”)
36	AVSS	—	Ground terminal (for A/D converter)
37	AVREF	I	Reference voltage input terminal (+5V) (for A/D converter)
38	INIT	I	Initial reset signal input terminal (A/D input) (fixed at “H”)
39	TEMP	I	Temperature sensor (TH501) input terminal (A/D input)
40	ACNT	I	Select the number of load/eject aging times (A/D input) 0h – 54h (30 times), 55h – 0A9h (20 times), 0AAh – 0FFh (10 times)
41	DO-SEL	I	Select the digital output bits (A/D input)
42	EE-CS	O	Chip select signal output to the external EEPROM device Not used (open)
43	EE-CKO	O	Serial data transfer clock signal output to the external EEPROM device Not used (open)
44	EE-SIO	I/O	Two way data bus with the external EEPROM device Not used (open)
45	MD-SO	O	Writing serial data signal output to the CXD2662R (IC301) and CXA2523AR (IC302)

Pin No.	Pin Name	I/O	Description
46	LINKOFF	O	Unilink on/off control signal output for the SONY bus "L": link on, "H": link off
47	UNIREQ	O	Data request signal output terminal (for SONY bus) "H": request on Not used (open)
48	UNICKIO	I/O	Serial clock signal input from the system controller (IC501) or serial clock signal output to the SONY bus interface (IC505) and system controller (IC501) (for SONY bus)
49	UNISI	I	Serial data input from the SONY bus interface (IC505)
50	UNISO	O	Serial data output to the SONY bus interface (IC505)
51	MD-CKO	O	Serial data transfer clock signal output to the CXD2662R (IC301) and CXA2523AR (IC302)
52	MD-SI	I	Reading serial data signal input from the CXD2662R (IC301)
53	—	O	Not used (open)
54	SENS	I	Internal status (SENSE) input from the CXD2662R (IC301)
55	CC-XINT	I	Interrupt status input from the CXD2662R (IC301)
56	$\overline{\text{LIMIT-IN}}$	I	Detection input from the sled limit-in detect switch The optical pick-up is inner position when "L"
57	EJT-OK	I	Front panel open detection signal input terminal "L": eject possible
58	ERROR-PWM	O	PWM error monitor output terminal (C1 and ATER is output when test mode) Not used (open)
59	$\overline{\text{MD-RST}}$	O	Reset signal output to the PCM1718E (IC101), CXD2662R (IC301) and BH6518FS (IC303) "L": reset
60	BU-IN	I	Battery detect signal input from the SONY bus interface (IC505) and battery check circuit "H": battery on
61	$\overline{\text{BUS-ON}}$	I	SONY bus on/off control signal input from the system controller (IC501) "L": bus on
62	SQSY	I	Subcode Q sync (SCOR) input from the CXD2662R (IC301) "L" is input every 13.3 msec Almost all, "H" is input
63	$\overline{\text{C-SW}}$	I	Inputs a disc loading start or a disc eject completion detect switch detection signal "L": When loading start or eject completed of a disc loading operation
64	MD-LAT	O	Serial data latch pulse signal output to the CXD2662R (IC301) and CXA2523AR (IC302)
65	MD-ON	O	Power supply on/off control signal output of the MD mechanism deck section main power supply "H": power on
66	DEEMP	O	De-emphasis on/off control signal output to the PCM1718E (IC101) "H": de-emphasis on
67	A-MUTE	O	Audio muting on/off control signal output
68	—	O	Not used (open)
69	TSTCKO	O	Output of clock signal for the test mode display Not used (open)
70	TSTSO	O	Output of data for the test mode display Not used (open)
71	$\overline{\text{TSTM0D}}$	I	Setting terminal for the test mode "L": test mode, "H": normal mode
72	VCC	—	Power supply terminal (+5V)
73	NC	I	Not used (fixed at "H")
74 to 77	TOUT0 to TOUT3	O	Output of the 4×8 matrix test keys Not used (open)
78 to 80	TIN0 to TIN2	I/O	Input of the 4×8 matrix test keys ("L" is always output, except in test mode) Not used (open)

• MAIN BOARD IC501 MN101C49KTJ (US), MN101C49KTK (AEP, UK) (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	VREF-	I	Reference voltage (0V) input terminal (for A/D converter)
2	VSM	I	FM and AM signal meter voltage detection signal input from the FM/AM tuner unit (TU10) (A/D input)
3	NIL	I	Not used (fixed at "L")
4	KEYIN1	I	Key input terminal (A/D input) LSW902, LSW905 to LSW911 (LSW910 and LSW911 are AEP, UK models only), S902 to S905 (MENU, SOUND, ENTER, S SCROLL, D DISPLAY, LIST, AF, TA, ►►► ►►► SEEK +, ◄◄◄ ◄◄◄ SEEK -, DISC/PRESET +, DISC/PRESET -,)
5	KEYIN0	I	Key input terminal (A/D input) LSW901, LSW903, LSW904, LSW914 to LSW919, S906, S907 (OFF, SOURCE, MODE, 6, 5, 4, 3, 2, 1, D-BASS, MBP)
6	RCIN0	I	Rotary remote commander key input terminal (A/D input)
7	QUALITY	I	Noise level detection signal input at SEEK mode (A/D input)
8	MPTH	I	Multi-path detection signal input from the RDS decoder (IC51) (A/D input)
9	DSTSEL	I	Destination setting terminal (fixed at "L" in this set)
10	VREF+	I	Reference voltage (+5V) input terminal (for A/D converter)
11	VDD	—	Power supply terminal (+5V)
12	OSCOUT	O	Main system clock output terminal (18.432 MHz)
13	OSCIN	I	Main system clock input terminal (18.432 MHz)
14	VSS	—	Ground terminal
15	XIN	I	Sub system clock input terminal (32.768 kHz)
16	XOUT	O	Sub system clock output terminal (32.768 kHz)
17	MMOD	I	Selection signal of memory mode input terminal "L": single chip mode (fixed at "L")
18	LCDSO	O	Serial data output to the liquid crystal display driver (IC900)
19	LCDCE	O	Chip enable signal output to the liquid crystal display driver (IC900) "H" active
20	LCDCO	O	Serial data transfer clock signal output to the liquid crystal display driver (IC900)
21 to 23	NC	O	Not used (open)
24	$\overline{\text{SYSRST}}$	O	Reset signal output to the SONY bus interface (IC505) "L": reset
25	$\overline{\text{BUSON}}$	O	Bus on/off control signal output to the SONY bus interface (IC505) "L": bus on
26	KEYACK	I	Input of acknowledge signal for the key entry Acknowledge signal is input to accept function and eject keys in the power off status On at input of "H"
27	DAVN	I	Synchronized detection signal of RDS data block input from the RDS decoder (IC51) "H" active (AEP, UK models only)
28	BUIN	I	Battery detection signal input from the SONY bus interface (IC505) "L" is input at low voltage
29	SIRCS	I	SIRCS remote control signal input from the remote control receiver (IC971)
30, 31	NIL	I	Not used (fixed at "L")
32	NIH	I	Not used (fixed at "H")
33	$\overline{\text{RESET}}$	I	System reset signal input from the reset signal generator (IC602) and RESET switch (S702) "L": reset "L" is input for several 100 msec after power on, then it changes to "H"
34	$\overline{\text{NOSES}}$	I	Front panel block remove/attach detection signal input from the nose detection switch (S701) "L": front panel is attached
35	BEEP	O	Beep sound drive signal output to the power amplifier (IC611)
36	NCO	O	Not used (open)
37	$\overline{\text{TEST IN}}$	I	Setting terminal for the test mode "L": test mode, Normally: fixed at "H"
38	$\overline{\text{ACC IN}}$	I	Accessory detection signal input "L": accessory on
39	NCO	O	Not used (open)
40	TELATT	I	Telephone detection signal input terminal At input of "H", the signal is attenuated by -20 dB
41	NIH	I	Not used (fixed at "H")


# MDX-CA680/CA680X

Pin No.	Pin Name	I/O	Description
42	UNISO	O	Serial data output to the SONY bus interface (IC505)
43	UNISI	I	Serial data input from the SONY bus interface (IC505)
44	UNICKO	O	Serial clock signal output to the MD mechanism controller (IC501) and SONY bus interface (IC505)
45	IIC SIO	I/O	Two-way data IIC bus with the FM/AM tuner unit (TU10), RDS decoder (IC51) (AEP, UK models only) and electrical volume (IC401)
46	NCO	O	Not used (open)
47	IIC CKO	O	IIC bus clock signal output to the FM/AM tuner unit (TU10), RDS decoder (IC51) (AEP, UK models only) and electrical volume (IC401)
48	NCO	O	Not used (open)
49	TUNON	O	Tuner system power supply on/off control signal output to the BA4908 (IC601) “H”: tuner power on
50	PW ON	O	Main system power supply on/off control signal output to the BA4908 (IC601) “H”: power on
51 to 65	NCO	O	Not used (open)
66	$\overline{\text{AMPATT}}$	O	Power amplifier muting on/off control signal output to the power amplifier (IC611) “L”: muting on
67	AMPON	O	Standby on/off control signal output to the power amplifier (IC611) “L”: standby mode, “H”: amplifier on
68	NCO	O	Not used (open)
69	ATT	O	Audio line muting on/off control signal output “H”: muting on
70	$\overline{\text{VOLATT}}$	O	Pre amplifier muting on/off control signal output to the electrical volume (IC401) “L”: muting on
71 to 75	NCO	O	Not used (open)
76	COLSW	I	Setting terminal for the illumination color “L”: 2 colors, “H”: 1 color MDX-CA680: fixed at “L”, MDX-CA680X: fixed at “H”
77	COLSEL	I	Setting terminal for the illumination color “L”: amber, “H”: green MDX-CA680: not used (fixed at “L”), MDX-CA680X: fixed at “H”
78	DIMSEL	I	Setting terminal for the dimmer “L”: no dimmer, “H”: dimmer in (fixed at “L” in this set)
79 to 85	NCO	O	Not used (open)
86	EEP SIO	I/O	Two-way data EEPROM bus with the FM/AM tuner unit (TU10)
87	EEP CKO	O	EEPROM bus clock signal output to the FM/AM tuner unit (TU10)
88	NCO	O	Not used (open)
89	FLASHW	I	Internal flash memory data write mode detection signal input terminal “L”: data write mode Not used (fixed at “H”)
90	NS_MASK	O	Discharge control signal output for the noise detection circuit “H”: discharge
91	XKEYON	O	A/D converter power control signal output When the KEYACK (pin ②) that controls reference voltage power for key A/D conversion input is active, “L” is output from this terminal to enable the input
92	DOORIND	O	LED drive signal output of the MD disc slot illumination and ▲ indicator (LED810, LSW810) “H”: LED on “H” is output to turn on LED when front panel is opened
93	ILLON	O	Power on/off control signal output of the illumination LED and liquid crystal display driver (IC900) “H”: power on
94	$\overline{\text{DOORSW}}$	I	Front panel open/close detection signal input “L” is input when the front panel is closed
95	DAVSS	—	Ground terminal (for D/A converter)
96, 97	RE_IN1, RE_IN0	I	Dial pulse input of the rotary encoder (RE901) (for VOLUME control)
98	RCIN1	I	Rotary remote commander shift key input terminal “L”: shift key on
99	NIL	I	Not used (fixed at “L”)
100	DAVCC	—	Power supply terminal (+5V) (for D/A converter)






5-2. FRONT PANEL SECTION

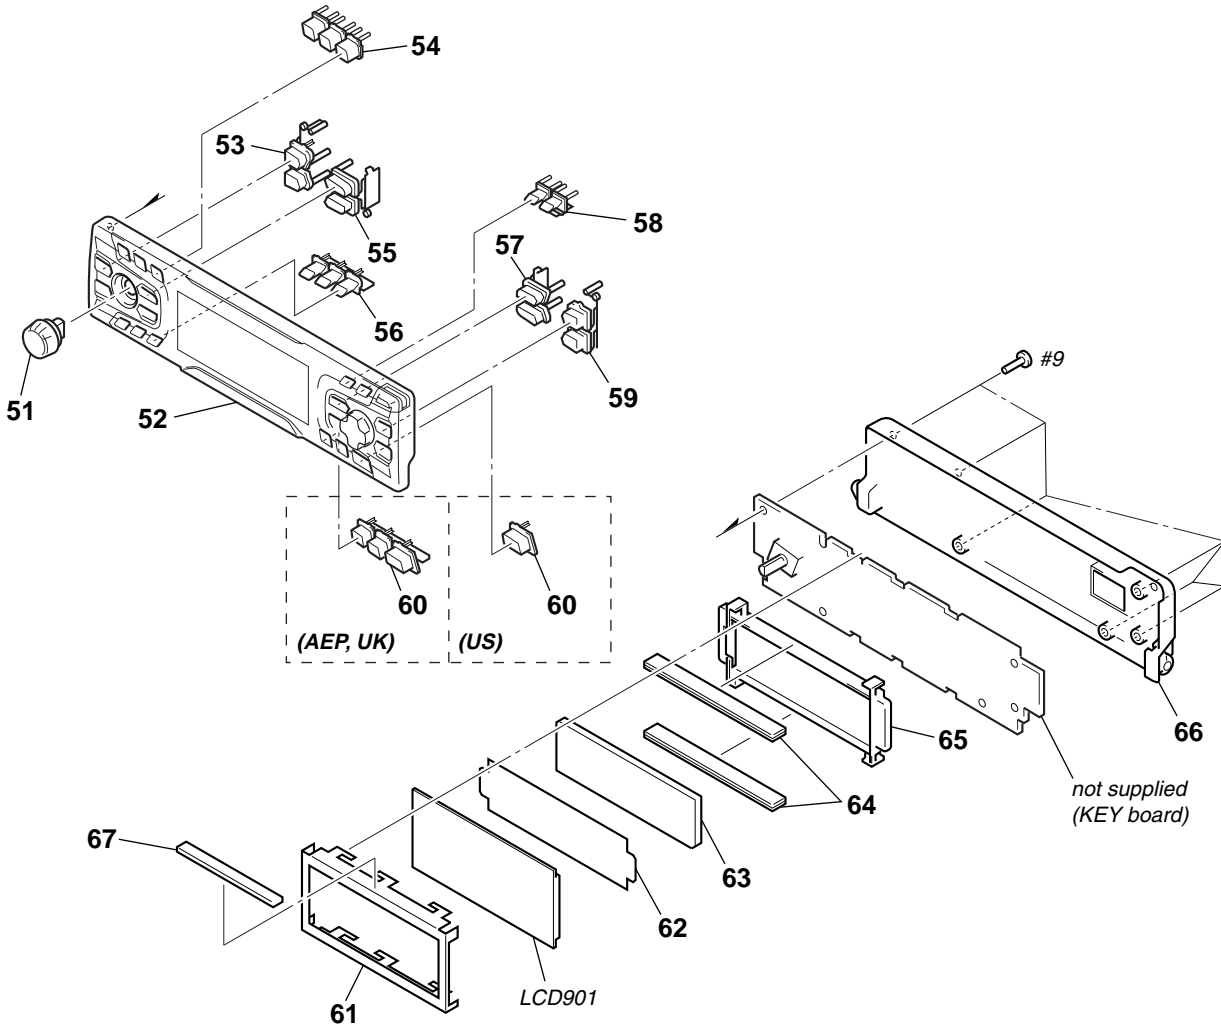


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	X-3380-080-1	KNOB (VOL) ASSY (CA680X)		60	3-223-792-01	BUTTON (AF/TA/OFF) (AEP, UK)	
51	X-3380-081-1	KNOB (VOL) ASSY (CA680)		60	3-223-792-11	BUTTON (AF/TA/OFF) (OFF) (US)	
52	X-3380-127-1	PANEL (SV) ASSY, FRONT (CA680X: US)		* 61	3-223-799-01	PLATE (LCD), GROUND	
52	X-3380-128-1	PANEL (SV) ASSY, FRONT (CA680)		* 62	3-223-800-01	ILLUMINATOR (LCD)	
52	X-3380-129-1	PANEL (SV) ASSY, FRONT (CA680X: AEP, UK)		* 63	3-223-797-01	PLATE (LCD), LIGHT GUIDE	
53	3-223-752-21	BUTTON (DSO/EQ7) (MBP. D-BASS)		64	1-694-780-11	CONDUCTIVE BOARD, CONNECTION	
54	3-223-750-01	BUTTON (1-3) (1. 2. 3)		* 65	3-223-798-01	HOLDER (LCD)	
55	3-223-753-01	BUTTON (SOURCE/MODE)		66	X-3380-079-1	PANEL ASSY, FRONT BACK	
56	3-223-751-01	BUTTON (4-6) (4. 5. 6)		67	3-231-770-01	SPACER (WINDOW)	
57	3-223-791-01	BUTTON (MENU/SOUND)		LCD901	1-804-295-11	DISPLAY PANEL, LIQUID CRYSTAL (CA680)	
58	3-223-789-01	BUTTON (DSPL/SCRL) (D. S)		LCD901	1-804-295-21	DISPLAY PANEL, LIQUID CRYSTAL (CA680X)	
59	3-223-790-01	BUTTON (LIST/ENTER)					

5-3. MECHANISM DECK SECTION-1  
(MG-164MA-138)

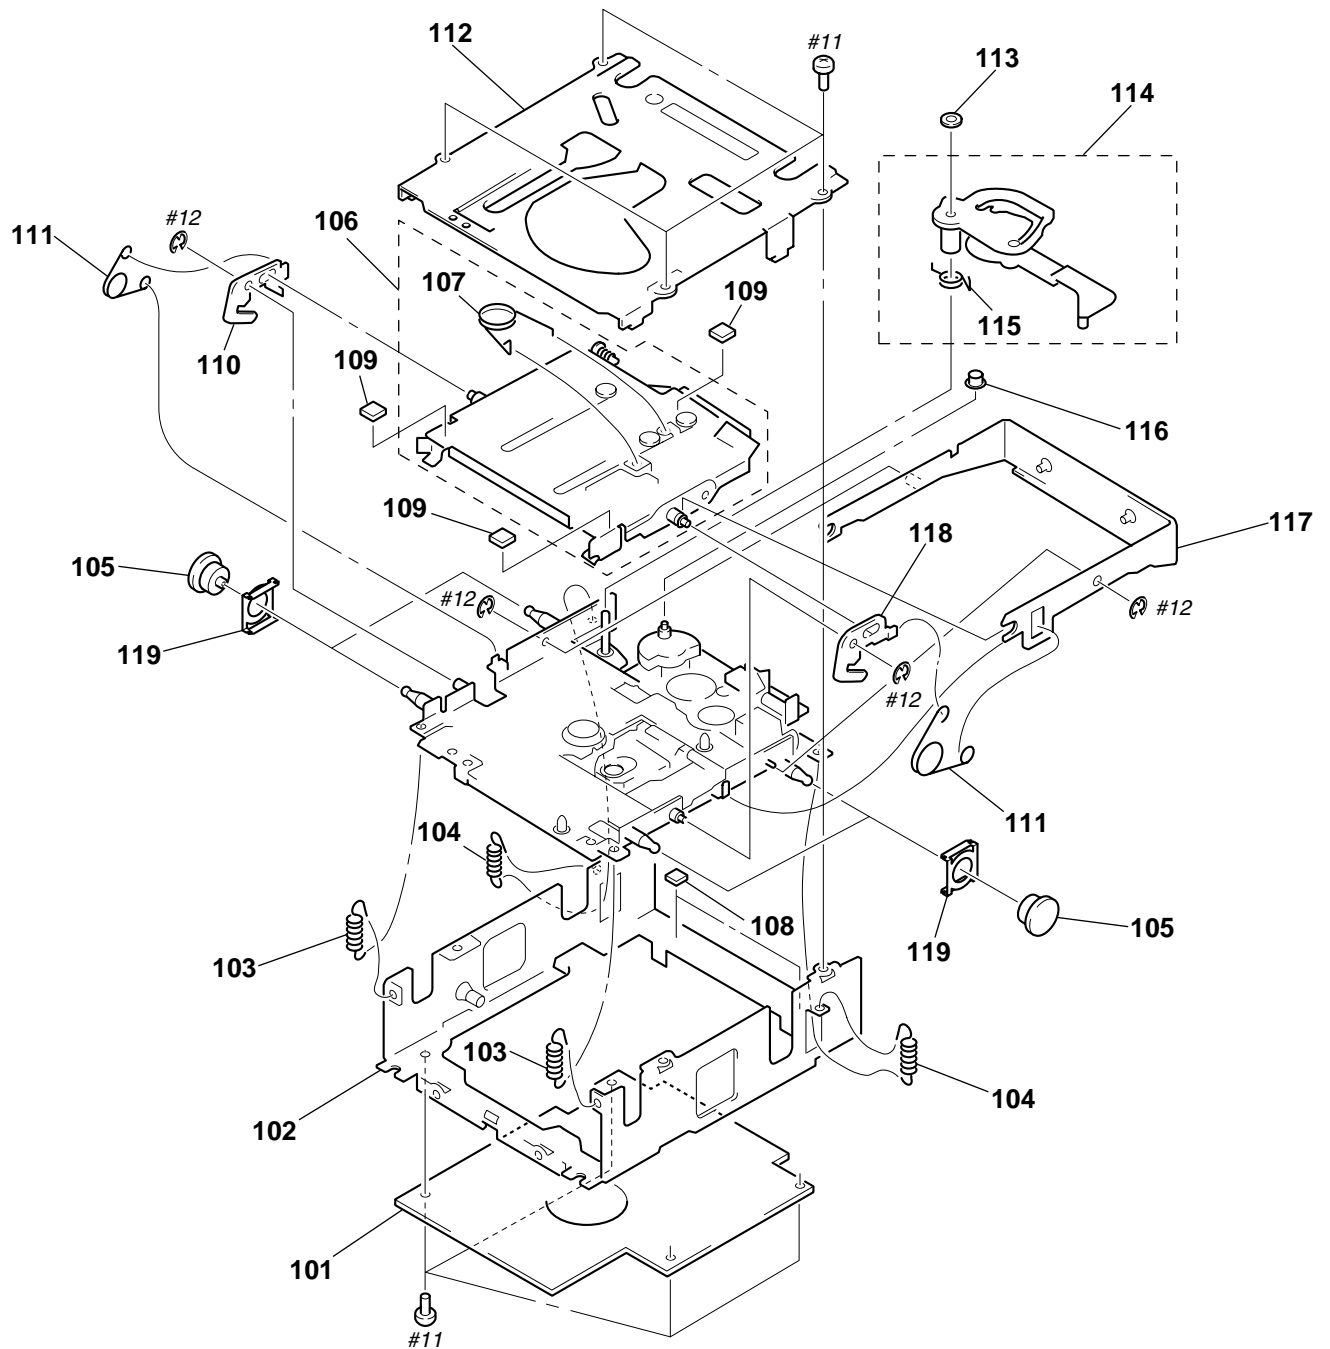

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 101	A-3326-729-A	SERVO BOARD, COMPLETE		111	3-919-281-01	SPRING (CHUCKING)	
* 102	X-3379-367-1	CHASSIS ASSY, MD		* 112	X-3379-368-1	COVER ASSY, MD	
103	3-032-714-01	SPRING (FLOAT F), TENSION		113	3-035-932-01	WASHER, STOPPER	
104	3-921-111-01	SPRING (FLOAT B), TENSION		* 114	X-3379-362-1	LEVER (LE23) ASSY	
105	3-931-897-61	DAMPER (T)		115	3-032-707-01	SPRING (LEVER LE)	
* 106	X-3376-796-1	HOLDER ASSY		116	3-925-034-01	ROLLER (GEAR E)	
107	3-032-682-01	SPRING (HOLDER)		* 117	X-3376-798-1	ARM ASSY, CHUCKING	
* 108	3-034-301-01	CUSHION (EJ2)		* 118	3-032-711-01	LEVER (LOCK L)	
* 109	3-034-302-01	CUSHION (EJ3)		* 119	3-220-096-01	BRACKET (DAMPER)	
* 110	3-032-712-01	LEVER (LOCK R)					

5-4. MECHANISM DECK SECTION-2  
(MG-164MA-138)

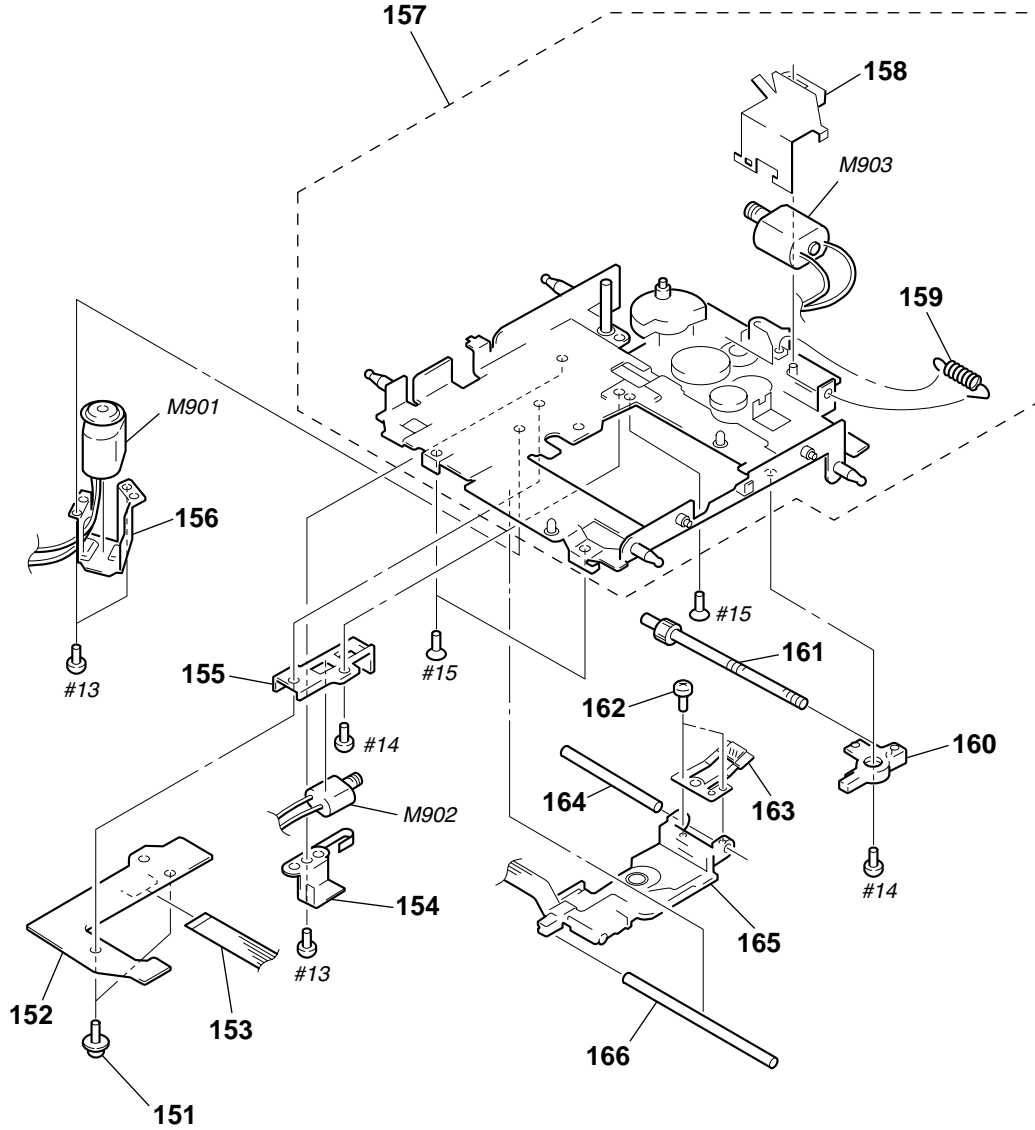

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	2-626-617-01	SCREW (2X8)		161	X-3373-213-1	SCREW ASSY, FEED	
152	A-3326-727-A	SENSOR BOARD, COMPLETE		162	3-939-590-07	SCREW (IB LOCK)	
153	1-757-311-11	CABLE, FLEXIBLE FLAT (11 CORE)		163	3-010-091-01	SPRING (SL FEED)	
154	3-919-283-01	BRACKET (SL)		164	3-919-293-01	SHAFT (OPT S), GUIDE	
* 155	3-032-704-01	BASE (SL)		$\Delta$ 165	8-583-065-03	OPTICAL PICK-UP KMS-241C/J1RP	
156	3-919-297-01	BRACKET (SP)		166	3-920-537-01	SHAFT (OPT L), GUIDE	
157	A-3315-218-A	CHASSIS (OP) ASSY		M901	A-3301-407-A	MOTOR ASSY, SP (SPINDLE)	
158	3-032-660-01	BRACKET (LO)		M902	A-3291-190-A	MOTOR ASSY, SL (SLED)	
159	3-032-669-01	SPRING (RACK), TENSION		M903	X-3379-451-1	MOTOR ASSY, LO (LOADING)	
* 160	3-032-705-01	BEARING (SL)					

## SECTION 6 ELECTRICAL PARTS LIST

KEY

## NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms.  
METAL: Metal-film resistor.  
METAL OXIDE: Metal oxide-film resistor.  
F: nonflammable

- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS  
In each case, u:  $\mu$ , for example:  
uA. . . :  $\mu$ A. . .      uPA. . . :  $\mu$ PA. . .  
uPB. . . :  $\mu$ PB. . .      uPC. . . :  $\mu$ PC. . .  
uPD. . . :  $\mu$ PD. . .
- CAPACITORS  
uF:  $\mu$ F
- COILS  
uH:  $\mu$ H

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		KEY BOARD *****		LED901	8-719-061-16	LED CL-190SR-CD-T (KEY ILLUMINATION) (CA680X)	
	1-694-780-11	CONDUCTIVE BOARD, CONNECTION		LED901	8-719-082-91	LED CL-165Y/FG-D-T (KEY ILLUMINATION) (CA680)	
*	3-223-797-01	PLATE (LCD), LIGHT GUIDE		LED902	8-719-082-80	LED LOM670 (MBP) (US)	
*	3-223-798-01	HOLDER (LCD)		LED902	8-719-082-81	LED LBM676 (MBP) (AEP, UK)	
*	3-223-799-01	PLATE (LCD), GROUND		LED903	8-719-082-80	LED LOM670 (D-BASS) (US)	
*	3-223-800-01	ILLUMINATOR (LCD)		LED903	8-719-082-81	LED LBM676 (D-BASS) (AEP, UK)	
	3-231-770-01	SPACER (WINDOW)		LED905	8-719-078-19	LED LWA673-R1S2*1 (LCD BACK LIGHT)	
		< CAPACITOR >		LED906	8-719-078-19	LED LWA673-R1S2*1 (LCD BACK LIGHT)	
C952	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V		LED909	8-719-078-19	LED LWA673-R1S2*1 (LCD BACK LIGHT)	
C953	1-115-412-11	CERAMIC CHIP 680PF 5% 25V		LED910	8-719-078-19	LED LWA673-R1S2*1 (LCD BACK LIGHT)	
C956	1-115-467-11	CERAMIC CHIP 0.22uF 10% 10V		LED913	8-719-061-16	LED CL-190SR-CD-T (KEY ILLUMINATION) (CA680X)	
C961	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		LED913	8-719-082-91	LED CL-165Y/FG-D-T (KEY ILLUMINATION) (CA680)	
C962	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		LED914	8-719-061-16	LED CL-190SR-CD-T (KEY ILLUMINATION) (CA680X)	
C971	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		LED914	8-719-082-91	LED CL-165Y/FG-D-T (KEY ILLUMINATION) (CA680)	
		< CONNECTOR >				< SWITCH >	
CN901	1-794-065-22	PLUG, CONNECTOR 14P		LSW901	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (OFF) (CA680X)	
		< DIODE >		LSW901	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (OFF) (CA680)	
D902	8-719-056-82	DIODE UDZ-TE-17-6.2B		LSW902	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (MENU) (CA680X)	
D903	8-719-056-82	DIODE UDZ-TE-17-6.2B		LSW902	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (MENU) (CA680)	
D904	8-719-056-82	DIODE UDZ-TE-17-6.2B		LSW903	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (SOURCE) (CA680X)	
D906	8-719-056-93	DIODE UDZ-TE-17-18B		LSW903	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (SOURCE) (CA680)	
D908	8-719-976-99	DIODE DTZ5.1B		LSW904	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (MODE) (CA680X)	
D971	8-719-056-82	DIODE UDZ-TE-17-6.2B		LSW904	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (MODE) (CA680X)	
		< IC >		LSW905	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (SOUND) (CA680X)	
IC900	8-759-826-21	IC LC75874W		LSW905	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (SOUND) (CA680X)	
IC971	8-749-012-25	IC RS-170-TU		LSW906	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (ENTER) (CA680X)	
		< LIQUID CRYSTAL DISPLAY >		LSW906	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (ENTER) (CA680)	
LCD901	1-804-295-11	DISPLAY PANEL, LIQUID CRYSTAL (CA680)					
LCD901	1-804-295-21	DISPLAY PANEL, LIQUID CRYSTAL (CA680X)					
		< LED >					
LED900	8-719-061-16	LED CL-190SR-CD-T (KEY ILLUMINATION) (CA680X)					
LED900	8-719-082-91	LED CL-165Y/FG-D-T (KEY ILLUMINATION) (CA680)					

# MDX-CA680/CA680X

## KEY

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
LSW907	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (S, SCROLL) (CA680X)		R912	1-216-831-11	METAL CHIP 6.8K 5%	1/16W (AEP, UK)
LSW907	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (S, SCROLL) (CA680X)		R913	1-216-833-11	METAL CHIP 10K 5%	1/16W (AEP, UK)
LSW908	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (D, DISPLAY) (CA680X)		R914	1-216-819-11	METAL CHIP 680 5%	1/16W
LSW908	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (D, DISPLAY) (CA680X)		R915	1-216-819-11	METAL CHIP 680 5%	1/16W
LSW909	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (LIST) (CA680X)		R916	1-216-821-11	METAL CHIP 1K 5%	1/16W
LSW909	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (LIST) (CA680)		R917	1-216-823-11	METAL CHIP 1.5K 5%	1/16W
LSW910	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (AF) (CA680X: AEP, UK)		R918	1-216-823-11	METAL CHIP 1.5K 5%	1/16W
LSW910	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (AF) (CA680)		R919	1-216-825-11	METAL CHIP 2.2K 5%	1/16W
LSW911	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (TA) (CA680X: AEP, UK)		R920	1-216-827-11	METAL CHIP 3.3K 5%	1/16W
LSW911	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (TA) (CA680)		R921	1-216-829-11	METAL CHIP 4.7K 5%	1/16W
LSW914	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (6) (CA680X)		R922	1-216-831-11	METAL CHIP 6.8K 5%	1/16W
LSW914	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (6) (CA680X)		R923	1-216-833-11	METAL CHIP 10K 5%	1/16W
LSW915	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (5) (CA680X)		R924	1-216-037-00	METAL CHIP 330 5%	1/10W
LSW915	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (5) (CA680X)		R925	1-216-864-11	SHORT 0	(CA680X)
LSW916	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (4) (CA680X)		R926	1-216-819-11	METAL CHIP 680 5%	1/16W
LSW916	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (4) (CA680X)		R928	1-216-029-00	METAL CHIP 150 5%	1/10W (CA680X)
LSW917	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (3) (CA680X)		R928	1-216-025-11	RES-CHIP 100 5%	1/10W (CA680)
LSW917	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (3) (CA680X)		R929	1-216-025-11	RES-CHIP 100 5%	1/10W (CA680)
LSW918	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (2) (CA680X)		R930	1-216-029-00	METAL CHIP 150 5%	1/10W (CA680X)
LSW918	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (2) (CA680X)		R930	1-216-025-11	RES-CHIP 100 5%	1/10W (CA680)
LSW919	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (1) (CA680X)		R931	1-216-025-11	RES-CHIP 100 5%	1/10W (CA680)
LSW919	1-786-112-11	SWITCH, KEY BOARD (WITH LED) (1) (CA680X)		R932	1-216-029-00	METAL CHIP 150 5%	1/10W (CA680X)
< TRANSISTOR >				R932	1-216-025-11	RES-CHIP 100 5%	1/10W (CA680)
Q901	8-729-904-75	TRANSISTOR DTD114EK (CA680X)		R933	1-216-025-11	RES-CHIP 100 5%	1/10W (CA680)
Q902	8-729-904-75	TRANSISTOR DTD114EK (CA680X)		R933	1-216-025-11	RES-CHIP 100 5%	1/10W (CA680)
< RESISTOR >				R934	1-216-029-00	METAL CHIP 150 5%	1/10W (CA680X)
R902	1-216-819-11	METAL CHIP 680 5%	1/16W	R934	1-216-025-11	RES-CHIP 100 5%	1/10W (CA680)
R903	1-216-819-11	METAL CHIP 680 5%	1/16W	R935	1-216-025-11	RES-CHIP 100 5%	1/10W (CA680)
R904	1-216-819-11	METAL CHIP 680 5%	1/16W	R935	1-216-025-11	RES-CHIP 100 5%	1/10W (CA680)
R905	1-216-821-11	METAL CHIP 1K 5%	1/16W	R936	1-216-031-00	METAL CHIP 180 5%	1/10W
R906	1-216-823-11	METAL CHIP 1.5K 5%	1/16W	R937	1-216-031-00	METAL CHIP 180 5%	1/10W (CA680)
R907	1-216-823-11	METAL CHIP 1.5K 5%	1/16W	R938	1-216-809-11	METAL CHIP 100 5%	1/16W (US)
R908	1-216-825-11	METAL CHIP 2.2K 5%	1/16W	R942	1-216-037-00	METAL CHIP 330 5%	1/10W
R909	1-216-827-11	METAL CHIP 3.3K 5%	1/16W	R943	1-216-031-00	METAL CHIP 180 5%	1/10W
R910	1-216-829-11	METAL CHIP 4.7K 5%	1/16W	R944	1-216-029-00	METAL CHIP 150 5%	1/10W
R911	1-216-864-11	SHORT 0 (AEP, UK)		R945	1-216-029-00	METAL CHIP 150 5%	1/10W
				R946	1-216-031-00	METAL CHIP 180 5%	1/10W (CA680X)
				R946	1-216-029-00	METAL CHIP 150 5%	1/10W (CA680)
				R948	1-216-029-00	METAL CHIP 150 5%	1/10W
				R950	1-216-029-00	METAL CHIP 150 5%	1/10W
				R952	1-216-864-11	SHORT 0	
				R954	1-216-809-11	METAL CHIP 100 5%	1/16W
				R955	1-216-809-11	METAL CHIP 100 5%	1/16W
				R956	1-216-809-11	METAL CHIP 100 5%	1/16W

KEY MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R957	1-216-841-11	METAL CHIP	47K 5% 1/16W	*	3-223-783-01	CHASSIS (BACK)	
R958	1-216-031-00	METAL CHIP	180 5% 1/10W		7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
R959	1-216-031-00	METAL CHIP	180 5% 1/10W				
R960	1-216-857-11	METAL CHIP	1M 5% 1/16W		7-685-793-09	SCREW +PTT 2.6X8 (S)	
R961	1-216-829-11	METAL CHIP	4.7K 5% 1/16W		7-685-794-09	SCREW +PTT 2.6X10 (S)	
R962	1-216-829-11	METAL CHIP	4.7K 5% 1/16W		7-685-797-09	SCREW +PTT 2.6X16 (S)	
R963	1-216-829-11	METAL CHIP	4.7K 5% 1/16W			< CAPACITOR >	
R966	1-216-029-00	METAL CHIP	150 5% 1/10W (CA680)	C11	1-162-918-11	CERAMIC CHIP	18PF 5% 50V
R967	1-216-029-00	METAL CHIP	150 5% 1/10W (CA680)	C13	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (US)
R968	1-216-029-00	METAL CHIP	150 5% 1/10W (CA680)	C14	1-104-665-11	ELECT	100uF 20% 10V
R969	1-216-027-00	METAL CHIP	120 5% 1/10W	C15	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
R971	1-216-027-00	METAL CHIP	120 5% 1/10W	C16	1-124-589-11	ELECT	47uF 20% 16V
R972	1-216-825-11	METAL CHIP	2.2K 5% 1/16W	C17	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
R973	1-216-809-11	METAL CHIP	100 5% 1/16W (US)	C19	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
R978	1-216-031-00	METAL CHIP	180 5% 1/10W (CA680X)	C21	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP, UK)
R978	1-216-029-00	METAL CHIP	150 5% 1/10W (CA680)	C22	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP, UK)
R979	1-216-029-00	METAL CHIP	150 5% 1/10W (CA680)	C23	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP, UK)
R980	1-216-027-00	METAL CHIP	120 5% 1/10W	C24	1-164-156-11	CERAMIC CHIP	0.1uF 25V (AEP, UK)
R981	1-216-027-00	METAL CHIP	120 5% 1/10W (CA680)	C25	1-164-315-11	CERAMIC CHIP	470PF 5% 50V (AEP, UK)
R982	1-216-027-00	METAL CHIP	120 5% 1/10W	C26	1-162-915-11	CERAMIC CHIP	10PF 0.5PF 50V (AEP, UK)
R983	1-216-027-00	METAL CHIP	120 5% 1/10W (CA680)	C27	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V (AEP, UK)
R984	1-216-027-00	METAL CHIP	120 5% 1/10W	C28	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V (AEP, UK)
R985	1-216-027-00	METAL CHIP	120 5% 1/10W (CA680)	C29	1-164-156-11	CERAMIC CHIP	0.1uF 25V (AEP, UK)
R986	1-216-027-00	METAL CHIP	120 5% 1/10W	C31	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
R987	1-216-027-00	METAL CHIP	120 5% 1/10W (CA680)	C32	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V
				C33	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V
				C34	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
		< ROTARY ENCODER >		C41	1-109-982-11	CERAMIC CHIP	1uF 10% 10V
RE901	1-476-507-11	ENCODER, ROTARY (VOLUME CONTROLL)		C42	1-109-982-11	CERAMIC CHIP	1uF 10% 10V
		< SWITCH >		C51	1-124-589-11	ELECT	47uF 20% 16V (AEP, UK)
S902	1-786-175-21	SWITCH, TACTILE (WITH LED) (▶▶▶▶, SEEK +)		C52	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V (AEP, UK)
S903	1-786-175-21	SWITCH, TACTILE (WITH LED) (◀◀◀◀, SEEK -)		C53	1-164-315-11	CERAMIC CHIP	470PF 5% 50V (AEP, UK)
S904	1-786-175-21	SWITCH, TACTILE (WITH LED) (DISC/PRESET +)		C54	1-162-921-11	CERAMIC CHIP	33PF 5% 50V (AEP, UK)
S905	1-786-175-21	SWITCH, TACTILE (WITH LED) (DISC/PRESET -)		C55	1-162-920-11	CERAMIC CHIP	27PF 5% 50V (AEP, UK)
S906	1-786-175-21	SWITCH, TACTILE (WITH LED) (D-BASS)		C56	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V (AEP, UK)
S907	1-786-175-21	SWITCH, TACTILE (WITH LED) (MBP)		C57	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP, UK)
*****				C58	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V (AEP, UK)
*	A-3283-058-A	MAIN BOARD, COMPLETE (CA680X: US)		C59	1-162-959-11	CERAMIC CHIP	330PF 5% 50V (AEP, UK)
*	A-3283-061-A	MAIN BOARD, COMPLETE (CA680)		C61	1-164-505-11	CERAMIC CHIP	2.2uF 16V (AEP, UK)
*	A-3283-065-A	MAIN BOARD, COMPLETE (CA680X: AEP, UK)		C62	1-164-739-11	CERAMIC CHIP	560PF 5% 50V (AEP, UK)
		*****					
*	3-040-998-01	BRACKET (IC)					
*	3-041-011-01	HEAT SINK (REG)					
*	3-223-780-11	HEAT SINK					

# MDX-CA680/CA680X

## MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C63	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V (AEP, UK)	C512	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C302	1-124-233-11	ELECT	10uF 20% 16V	C541	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C305	1-124-589-11	ELECT	47uF 20% 16V	C551	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C307	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C553	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C309	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C561	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C331	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C562	1-126-935-11	ELECT	470uF 20% 16V
C332	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C601	1-126-768-11	ELECT	2200uF 20% 16V
C333	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C602	1-165-319-11	CERAMIC CHIP	0.1uF 50V
C401	1-124-589-11	ELECT	47uF 20% 16V	C611	1-107-906-11	ELECT	10uF 20% 16V
C402	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C612	1-107-906-11	ELECT	10uF 20% 16V
C403	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	C613	1-107-906-11	ELECT	10uF 20% 16V
C404	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V	C614	1-107-906-11	ELECT	10uF 20% 16V
C405	1-126-160-11	ELECT	1uF 20% 50V	C617	1-165-319-11	CERAMIC CHIP	0.1uF 50V
C407	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C618	1-165-319-11	CERAMIC CHIP	0.1uF 50V
C411	1-126-160-11	ELECT	1uF 20% 50V	C621	1-104-665-11	ELECT	100uF 20% 10V
C412	1-126-160-11	ELECT	1uF 20% 50V	C622	1-125-710-11	DOUBLE LAYER	0.1F 5.5V
C413	1-126-160-11	ELECT	1uF 20% 50V	C631	1-126-160-11	ELECT	1uF 20% 50V
C414	1-126-160-11	ELECT	1uF 20% 50V	C651	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C415	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C653	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C416	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C662	1-107-906-11	ELECT	10uF 20% 16V
C421	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C663	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C422	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C682	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C431	1-124-233-11	ELECT	10uF 20% 16V	C714	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C433	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V	< CONNECTOR >			
C435	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	CN601	1-774-701-11	PIN, CONNECTOR	16P
C441	1-124-233-11	ELECT	10uF 20% 16V	CN701	1-784-456-11	CONNECTOR, FFC/FPC	14P
C442	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V	CNJ600	1-580-907-31	PLUG, CONNECTOR (BUS CONTROL IN)	
C445	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	CNP301	1-815-260-11	CONNECTOR, BOAR TO BOARD	30P
C451	1-124-233-11	ELECT	10uF 20% 16V	< DIODE >			
C453	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V	D1	8-719-073-01	DIODE	MA111- (K8).S0
C455	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	D21	8-719-073-01	DIODE	MA111- (K8).S0
C456	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D22	8-719-073-01	DIODE	MA111- (K8).S0
C461	1-124-233-11	ELECT	10uF 20% 16V	D23	8-719-976-99	DIODE	DTZ5.1B (AEP, UK)
C463	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V	D301	8-719-400-20	DIODE	MA152WA
C465	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	D331	8-719-056-83	DIODE	UDZ-TE-17-6.8B
C471	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V	D333	8-719-158-15	DIODE	RD5.6SB
C474	1-124-233-11	ELECT	10uF 20% 16V	D471	8-719-079-97	DIODE	CRZ22 (TE85L.SONY)
C475	1-107-906-11	ELECT	10uF 20% 16V	D472	8-719-079-97	DIODE	CRZ22 (TE85L.SONY)
C476	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	D473	8-719-079-97	DIODE	CRZ22 (TE85L.SONY)
C477	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D474	8-719-079-97	DIODE	CRZ22 (TE85L.SONY)
C479	1-124-589-11	ELECT	47uF 20% 16V	D475	8-719-079-97	DIODE	CRZ22 (TE85L.SONY)
C480	1-164-505-11	CERAMIC CHIP	2.2uF 16V	D476	8-719-079-97	DIODE	CRZ22 (TE85L.SONY)
C484	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D477	8-719-079-97	DIODE	CRZ22 (TE85L.SONY)
C501	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V (US)	D478	8-719-079-97	DIODE	CRZ22 (TE85L.SONY)
C501	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V (AEP, UK)	D479	8-719-073-01	DIODE	MA111- (K8).S0
C503	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D480	8-719-158-15	DIODE	RD5.6SB
C504	1-162-917-11	CERAMIC CHIP	15PF 5% 50V	D502	8-719-400-18	DIODE	MA152WK
C505	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	D552	8-719-422-64	DIODE	MA8062-M
C506	1-162-916-11	CERAMIC CHIP	10PF 0.5PF 50V (AEP, UK)	D553	8-719-056-93	DIODE	UDZ-TE-17-18B
C506	1-162-915-11	CERAMIC CHIP	12PF 5% 50V (US)	D554	8-719-072-70	DIODE	MA2ZD14001S0
C507	1-162-915-11	CERAMIC CHIP	10PF 0.5PF 50V	D555	8-719-056-93	DIODE	UDZ-TE-17-18B
C508	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	D558	8-719-801-78	DIODE	1SS184
C511	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D560	8-719-073-01	DIODE	MA111- (K8).S0
				D601	8-719-049-38	DIODE	1N5404TU
				D609	8-719-056-83	DIODE	UDZ-TE-17-6.8B
				D610	8-719-056-65	DIODE	1SS372-TE85L



Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D612	8-719-053-18	DIODE 1SR154-400TE-25		JC30	1-216-864-11	SHORT	0
D613	8-719-053-18	DIODE 1SR154-400TE-25		JC33	1-216-296-11	SHORT	0
D614	8-719-053-18	DIODE 1SR154-400TE-25		JC34	1-216-296-11	SHORT	0
D621	8-719-067-56	DIODE MA112-TX		JC35	1-216-296-11	SHORT	0
D665	8-719-820-05	DIODE 1SS181		JC37	1-216-296-11	SHORT	0
D701	8-719-978-69	DIODE DTZ-TT11-16B		JC41	1-216-296-11	SHORT	0 (AEP, UK)
D703	8-719-056-93	DIODE UDZ-TE-17-18B		JC42	1-216-296-11	SHORT	0 (AEP, UK)
D710	8-719-056-83	DIODE UDZ-TE-17-6.8B		JC43	1-216-296-11	SHORT	0 (AEP, UK)
D711	8-719-056-83	DIODE UDZ-TE-17-6.8B		JC44	1-216-296-11	SHORT	0
D712	8-719-056-83	DIODE UDZ-TE-17-6.8B		JC45	1-216-296-11	SHORT	0
D713	8-719-056-83	DIODE UDZ-TE-17-6.8B		JC47	1-216-296-11	SHORT	0
D714	8-719-056-83	DIODE UDZ-TE-17-6.8B		JC48	1-216-864-11	SHORT	0
D715	8-719-056-83	DIODE UDZ-TE-17-6.8B		JC49	1-216-296-11	SHORT	0
D716	8-719-056-83	DIODE UDZ-TE-17-6.8B		JC50	1-216-864-11	SHORT	0
D717	8-719-056-83	DIODE UDZ-TE-17-6.8B		JC51	1-216-296-11	SHORT	0 (AEP, UK)
D718	8-719-056-83	DIODE UDZ-TE-17-6.8B		JC52	1-216-296-11	SHORT	0 (AEP, UK)
D719	8-719-056-83	DIODE UDZ-TE-17-6.8B		JC53	1-216-296-11	SHORT	0
		< FUSE >		JC101	1-216-295-11	SHORT	0
FU601	1-532-877-11	FUSE (BLADE TYPE) (AUTO FUSE) (10A)		JC104	1-216-864-11	SHORT	0 (AEP, UK)
		< IC >		JC105	1-216-296-11	SHORT	0 (AEP, UK)
IC20	8-759-909-71	IC BA4558F-E2 (AEP, UK)		JC106	1-216-864-11	SHORT	0 (US)
IC51	8-759-492-59	IC SAA6588T-118 (AEP, UK)		JC107	1-216-864-11	SHORT	0 (US)
IC401	8-759-653-27	IC TDA7402TR				< COIL >	
IC501	8-759-830-31	IC MN101C49KTJ (US)		L500	1-419-476-11	INDUCTOR	250uH
IC501	8-759-830-32	IC MN101C49KTK (AEP, UK)		L671	1-410-750-41	INDUCTOR	0.47uH
IC505	8-759-449-89	IC BA8270F-E2				< JACK >	
IC601	8-759-661-47	IC BA4908-V3		PJ401	1-774-700-11	JACK, PIN 6P	
IC602	8-759-682-69	IC XC61AN4302MR				(BUS AUDIO IN, AUDIO OUT FRONT/REAR)	
IC611	8-759-827-14	IC TA8268AH				< TRANSISTOR >	
		< JACK >		Q21	8-729-120-28	TRANSISTOR	2SC1623-L5L6 (AEP, UK)
J10	1-815-185-11	JACK (FM/AM ANTENNA IN))		Q22	8-729-027-59	TRANSISTOR	DTC144EKA-T146
J561	1-566-822-41	JACK (REMOTE IN)				(AEP, UK)	
		< SHORT >		Q331	8-729-019-00	TRANSISTOR	2SD2394-G
JC7	1-216-296-11	SHORT	0	Q333	8-729-047-76	TRANSISTOR	FMC2A-T148
JC10	1-216-296-11	SHORT	0	Q335	8-729-047-76	TRANSISTOR	FMC2A-T148
JC11	1-216-296-11	SHORT	0 (AEP, UK)	Q336	8-729-920-85	TRANSISTOR	2SD1664-QR
JC12	1-216-296-11	SHORT	0	Q431	8-729-920-21	TRANSISTOR	DTC314TKH04
JC13	1-216-296-11	SHORT	0	Q441	8-729-920-21	TRANSISTOR	DTC314TKH04
JC14	1-216-296-11	SHORT	0	Q451	8-729-920-21	TRANSISTOR	DTC314TKH04
JC15	1-216-296-11	SHORT	0	Q461	8-729-920-21	TRANSISTOR	DTC314TKH04
JC16	1-216-296-11	SHORT	0	Q478	8-729-027-59	TRANSISTOR	DTC144EKA-T146
JC17	1-216-296-11	SHORT	0	Q479	8-729-027-23	TRANSISTOR	DTA114EKA-T146
JC18	1-216-296-11	SHORT	0	Q560	8-729-027-23	TRANSISTOR	DTA114EKA-T146
JC19	1-216-296-11	SHORT	0	Q631	8-729-120-28	TRANSISTOR	2SC1623-L5L6
JC21	1-216-296-11	SHORT	0	Q651	8-729-120-28	TRANSISTOR	2SC1623-L5L6
JC22	1-216-296-11	SHORT	0	Q662	8-729-047-76	TRANSISTOR	FMC2A-T148
JC23	1-216-296-11	SHORT	0	Q663	8-729-047-76	TRANSISTOR	FMC2A-T148
JC24	1-216-864-11	SHORT	0	Q664	8-729-027-23	TRANSISTOR	DTA114EKA-T146
JC25	1-216-296-11	SHORT	0	Q665	8-729-106-60	TRANSISTOR	2SB1115A-YQ
JC26	1-216-296-11	SHORT	0	Q701	8-729-900-53	TRANSISTOR	DTC114EK
JC27	1-216-296-11	SHORT	0			< RESISTOR >	
JC28	1-216-296-11	SHORT	0	R9	1-216-817-11	METAL CHIP	470 5% 1/16W
JC29	1-216-296-11	SHORT	0	R16	1-216-809-11	METAL CHIP	100 5% 1/16W
				R17	1-216-809-11	METAL CHIP	100 5% 1/16W

# MDX-CA680/CA680X

## MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R18	1-216-296-11	SHORT	0	R472	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
R21	1-216-825-11	METAL CHIP	2.2K 5%	R473	1-216-821-11	METAL CHIP	1K 5% 1/16W
			(AEP, UK)				
R22	1-216-825-11	METAL CHIP	2.2K 5%	R474	1-216-833-11	METAL CHIP	10K 5% 1/16W
			(AEP, UK)	R479	1-249-401-11	CARBON	47 5% 1/4W
R23	1-216-825-11	METAL CHIP	2.2K 5%	R480	1-216-295-11	SHORT	0
			(AEP, UK)	R482	1-216-295-11	SHORT	0
R24	1-216-833-11	METAL CHIP	10K 5%	R501	1-216-837-11	METAL CHIP	22K 5% 1/16W
			(AEP, UK)				
R25	1-216-833-11	METAL CHIP	10K 5%	R502	1-216-813-11	METAL CHIP	220 5% 1/16W
			(AEP, UK)	R504	1-216-821-11	METAL CHIP	1K 5% 1/16W
R26	1-216-809-11	METAL CHIP	100 5%	R505	1-216-821-11	METAL CHIP	1K 5% 1/16W
			(AEP, UK)	R506	1-216-821-11	METAL CHIP	1K 5% 1/16W
R27	1-216-845-11	METAL CHIP	100K 5%	R507	1-216-841-11	METAL CHIP	47K 5% 1/16W
			(AEP, UK)	R510	1-216-845-11	METAL CHIP	100K 5% 1/16W
R28	1-216-857-11	METAL CHIP	1M 5%	R511	1-216-845-11	METAL CHIP	100K 5% 1/16W
			(AEP, UK)	R512	1-216-864-11	SHORT	0
R29	1-216-809-11	METAL CHIP	100 5%	R515	1-216-864-11	SHORT	0 (US)
			(AEP, UK)				
R30	1-216-295-11	SHORT	0 (AEP, UK)	R516	1-216-845-11	METAL CHIP	100K 5% 1/16W
R31	1-216-831-11	METAL CHIP	6.8K 5%	R517	1-216-845-11	METAL CHIP	100K 5% 1/16W
				R521	1-216-809-11	METAL CHIP	100 5% 1/16W
R32	1-216-845-11	METAL CHIP	100K 5%	R524	1-216-833-11	METAL CHIP	10K 5% 1/16W
R41	1-216-841-11	METAL CHIP	47K 5%	R525	1-216-833-11	METAL CHIP	10K 5% 1/16W
R52	1-216-853-11	METAL CHIP	470K 5%				
			(AEP, UK)	R526	1-216-821-11	METAL CHIP	1K 5% 1/16W
R53	1-216-821-11	METAL CHIP	1K 5%	R527	1-216-821-11	METAL CHIP	1K 5% 1/16W
			(AEP, UK)	R528	1-216-833-11	METAL CHIP	10K 5% 1/16W
R54	1-218-345-11	RES-CHIP	9.1K 5%	R534	1-216-809-11	METAL CHIP	100 5% 1/16W
			(AEP, UK)	R535	1-216-809-11	METAL CHIP	100 5% 1/16W
R56	1-216-797-11	METAL CHIP	10 5%	R541	1-216-845-11	METAL CHIP	100K 5% 1/16W
			(AEP, UK)	R542	1-216-845-11	METAL CHIP	100K 5% 1/16W
R57	1-216-817-11	METAL CHIP	470 5%				(CA680X)
			(AEP, UK)	R543	1-216-845-11	METAL CHIP	100K 5% 1/16W
R60	1-216-797-11	METAL CHIP	10 5%				(CA680)
			(AEP, UK)	R545	1-216-845-11	METAL CHIP	100K 5% 1/16W
				R552	1-216-809-11	METAL CHIP	100 5% 1/16W
R102	1-216-864-11	SHORT	0				
R306	1-249-413-11	CARBON	470 5%	R553	1-216-809-11	METAL CHIP	100 5% 1/16W
			1/4W	R554	1-249-431-11	CARBON	15K 5% 1/4W
R331	1-249-415-11	CARBON	680 5%	R563	1-216-833-11	METAL CHIP	10K 5% 1/16W
R332	1-216-017-00	RES-CHIP	47 5%	R564	1-216-833-11	METAL CHIP	10K 5% 1/16W
R403	1-216-841-11	METAL CHIP	47K 5%	R575	1-216-809-11	METAL CHIP	100 5% 1/16W
R404	1-216-809-11	METAL CHIP	100 5%				
R405	1-216-813-11	METAL CHIP	220 5%	R576	1-216-809-11	METAL CHIP	100 5% 1/16W
			1/16W	R577	1-216-809-11	METAL CHIP	100 5% 1/16W
R406	1-216-813-11	METAL CHIP	220 5%	R602	1-216-073-00	METAL CHIP	10K 5% 1/10W
R407	1-216-813-11	METAL CHIP	220 5%	R605	1-216-295-11	SHORT	0
R408	1-216-813-11	METAL CHIP	220 5%	R609	1-216-821-11	METAL CHIP	1K 5% 1/16W
R413	1-216-821-11	METAL CHIP	1K 5%				
R414	1-216-821-11	METAL CHIP	1K 5%	R631	1-249-425-11	CARBON	4.7K 5% 1/4W
			1/16W	R632	1-216-841-11	METAL CHIP	47K 5% 1/16W
R415	1-216-833-11	METAL CHIP	10K 5%	R633	1-216-841-11	METAL CHIP	47K 5% 1/16W
R416	1-216-833-11	METAL CHIP	10K 5%	R634	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R432	1-216-841-11	METAL CHIP	47K 5%	R636	1-216-845-11	METAL CHIP	100K 5% 1/16W
R433	1-216-813-11	METAL CHIP	220 5%				
R442	1-216-841-11	METAL CHIP	47K 5%	R651	1-216-049-11	RES-CHIP	1K 5% 1/10W
			1/16W	R652	1-249-437-11	CARBON	47K 5% 1/4W
R443	1-216-813-11	METAL CHIP	220 5%	R653	1-216-833-11	METAL CHIP	10K 5% 1/16W
R452	1-216-841-11	METAL CHIP	47K 5%	R654	1-216-833-11	METAL CHIP	10K 5% 1/16W
R453	1-216-813-11	METAL CHIP	220 5%	R664	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R457	1-216-864-11	SHORT	0				
R458	1-216-864-11	SHORT	0	R665	1-249-393-11	CARBON	10 5% 1/4W
				R666	1-249-393-11	CARBON	10 5% 1/4W
R462	1-216-841-11	METAL CHIP	47K 5%	R667	1-249-393-11	CARBON	10 5% 1/4W
R463	1-216-813-11	METAL CHIP	220 5%	R668	1-249-393-11	CARBON	10 5% 1/4W
R471	1-216-841-11	METAL CHIP	47K 5%	R671	1-216-809-11	METAL CHIP	100 5% 1/16W

MAIN

SENSOR

SERVO

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R672	1-216-809-11	METAL CHIP	100 5% 1/16W	C201	1-164-161-11	CERAMIC CHIP 0.0022uF 10%	100V
R673	1-218-871-11	METAL CHIP	10K 0.5% 1/16W	C202	1-135-259-11	TANTALUM CHIP 10uF 20%	6.3V
R700	1-216-809-11	METAL CHIP	100 5% 1/16W	C301	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
R701	1-218-871-11	METAL CHIP	10K 0.5% 1/16W	C305	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
R702	1-218-871-11	METAL CHIP	10K 0.5% 1/16W	C306	1-117-863-11	CERAMIC CHIP 0.47uF 10%	6.3V
R707	1-216-049-11	RES-CHIP	1K 5% 1/10W	C307	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
R710	1-216-809-11	METAL CHIP	100 5% 1/16W	C308	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
R711	1-216-809-11	METAL CHIP	100 5% 1/16W	C309	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
R712	1-216-825-11	METAL CHIP	2.2K 5% 1/16W	C310	1-117-863-11	CERAMIC CHIP 0.47uF 10%	6.3V
R713	1-216-825-11	METAL CHIP	2.2K 5% 1/16W	C311	1-164-245-11	CERAMIC CHIP 0.015uF 10%	25V
R714	1-249-413-11	CARBON	470 5% 1/4W (CA680X)	C314	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
R714	1-249-409-11	CARBON	220 5% 1/4W (CA680)	C315	1-125-837-11	CERAMIC CHIP 1uF 10%	6.3V
R715	1-216-809-11	METAL CHIP	100 5% 1/16W	C316	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
R716	1-216-809-11	METAL CHIP	100 5% 1/16W	C317	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
R717	1-216-809-11	METAL CHIP	100 5% 1/16W	C318	1-104-852-11	TANTALUM CHIP 22uF 20%	6.3V
R718	1-216-809-11	METAL CHIP	100 5% 1/16W	C319	1-104-852-11	TANTALUM CHIP 22uF 20%	6.3V
R719	1-216-821-11	METAL CHIP	1K 5% 1/16W	C320	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V
		< SWITCH >		C321	1-162-969-11	CERAMIC CHIP 0.0068uF 10%	25V
S701	1-771-540-11	SWITCH, PUSH (1 KEY) (NOSE DETECT)		C322	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
S702	1-692-431-21	SWITCH, TACTILE (RESET)		C324	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
		< THERMISTOR >		C325	1-110-563-11	CERAMIC CHIP 0.068uF 10%	16V
TH600	1-801-792-21	THERMISTOR, POSITIVE		C326	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
		< TUNER UNIT >		C327	1-125-837-11	CERAMIC CHIP 1uF 10%	6.3V
TU10	A-3282-061-A	TUNER UNIT (TUX-020)		C328	1-162-966-11	CERAMIC CHIP 0.0022uF 10%	50V
		< VIBRATOR >		C329	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V
X51	1-579-242-41	VIBRATOR, CRYSTAL (4.332MHz) (AEP, UK)		C330	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
X501	1-781-294-21	VIBRATOR, CRYSTAL (18.432MHz) (US)		C331	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
X501	1-795-134-11	VIBRATOR, CRYSTAL (18.432MHz) (AEP, UK)		C333	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
X502	1-567-098-71	VIBRATOR, CRYSTAL (32.768kHz)		C336	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
*****							
	A-3326-727-A	SENSOR BOARD, COMPLETE	*****	C339	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
For the parts on the SENSOR board, replace the entire mounted board.							
*****							
*	A-3326-729-A	SERVO BOARD, COMPLETE	*****	C342	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
		< CAPACITOR >		C343	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C10	1-164-362-11	CERAMIC CHIP	470PF 5% 50V	C344	1-104-852-11	TANTALUM CHIP 22uF 20%	6.3V
C11	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C345	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C101	1-164-161-11	CERAMIC CHIP	0.0022uF 10% 100V	C346	1-104-852-11	TANTALUM CHIP 22uF 20%	6.3V
C102	1-135-259-11	TANTALUM CHIP	10uF 20% 6.3V	C347	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C103	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C349	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C104	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C350	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C105	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C351	1-104-852-11	TANTALUM CHIP 22uF 20%	10V
C106	1-135-210-11	TANTALUM CHIP	4.7uF 20% 10V	C352	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C107	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C353	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C108	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C356	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C109	1-135-210-11	TANTALUM CHIP	4.7uF 20% 10V	C357	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
				C358	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
				C359	1-162-923-11	CERAMIC CHIP 47PF 5%	50V
				C362	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
				C363	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
				C401	1-115-467-11	CERAMIC CHIP 0.22uF 10%	10V
				C402	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
				C403	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
				C501	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
				C503	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
				C504	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
				C505	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
				C506	1-104-852-11	TANTALUM CHIP 22uF 20%	10V
				C510	1-115-467-11	CERAMIC CHIP 0.22uF 10%	10V
				C511	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
				C513	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V

# MDX-CA680/CA680X

## SERVO

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C514	1-115-467-11	CERAMIC CHIP 0.22uF 10%	10V	R317	1-216-821-11	METAL CHIP 1K 5%	1/16W
C515	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	R318	1-216-833-11	METAL CHIP 10K 5%	1/16W
C516	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	R319	1-216-845-11	METAL CHIP 100K 5%	1/16W
		< CONNECTOR >		R320	1-216-855-11	METAL CHIP 680K 5%	1/16W
CN101	1-815-352-11	CONNECTOR, BOARD TO BOARD 30P		R324	1-216-827-11	METAL CHIP 3.3K 5%	1/16W
CN102	1-573-929-21	CONNECTOR, FFC/FPC (ZIF) 20P		R325	1-216-821-11	METAL CHIP 1K 5%	1/16W
* CN103	1-573-920-11	CONNECTOR, FFC/FPC (ZIF) 11P		R327	1-216-821-11	METAL CHIP 1K 5%	1/16W
		< DIODE >		R328	1-216-811-11	METAL CHIP 150 5%	1/16W
D301	8-719-977-03	DIODE DTZ5.6B		R329	1-216-819-11	METAL CHIP 680 5%	1/16W
D401	8-719-157-93	DIODE RD3.0SB2		R330	1-216-853-11	METAL CHIP 470K 5%	1/16W
		< IC >		R331	1-216-809-11	METAL CHIP 100 5%	1/16W
IC101	8-759-571-84	IC PCM1718E/2K		R332	1-216-809-11	METAL CHIP 100 5%	1/16W
IC301	8-752-404-64	IC CXD2662R		R333	1-216-819-11	METAL CHIP 680 5%	1/16W
IC302	8-752-080-95	IC CXA2523AR		R334	1-216-809-11	METAL CHIP 100 5%	1/16W
IC303	8-759-685-74	IC BH6518FS-E2		R335	1-216-815-11	METAL CHIP 330 5%	1/16W
IC304	8-759-096-87	IC TC7WU04FU (TE12R)		R336	1-216-853-11	METAL CHIP 470K 5%	1/16W
IC305	8-759-040-83	IC BA6287F		R337	1-216-853-11	METAL CHIP 470K 5%	1/16W
IC307	8-759-671-27	IC MSM51V4400E-70TS-K		R338	1-216-994-11	RES-CHIP 13K 5%	1/16W
IC401	8-759-385-17	IC NJM4580E (TE2)		R340	1-218-739-11	RES-CHIP 91K 5%	1/16W
IC501	8-752-921-42	IC CXP84340-231Q		R342	1-216-994-11	RES-CHIP 13K 5%	1/16W
IC502	8-759-321-61	IC HD74HC244FP-EL		R344	1-216-994-11	RES-CHIP 13K 5%	1/16W
		< COIL >		R346	1-216-842-11	METAL CHIP 56K 5%	1/16W
L101	1-412-058-11	INDUCTOR CHIP 10uH		R348	1-218-708-11	METAL CHIP 4.7K 0.5%	1/16W
L102	1-412-058-11	INDUCTOR CHIP 10uH		R349	1-216-025-11	RES-CHIP 100 5%	1/10W
L301	1-412-058-11	INDUCTOR CHIP 10uH		R350	1-216-797-11	METAL CHIP 10 5%	1/16W
L302	1-412-058-11	INDUCTOR CHIP 10uH		R351	1-218-700-11	METAL CHIP 2.2K 0.5%	1/16W
L501	1-412-058-11	INDUCTOR CHIP 10uH		R352	1-218-700-11	METAL CHIP 2.2K 0.5%	1/16W
		< TRANSISTOR >		R353	1-218-700-11	METAL CHIP 2.2K 0.5%	1/16W
Q301	8-729-230-49	TRANSISTOR 2SC2712-YG		R354	1-216-833-11	METAL CHIP 10K 5%	1/16W
Q302	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		R355	1-216-833-11	METAL CHIP 10K 5%	1/16W
Q303	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R356	1-216-833-11	METAL CHIP 10K 5%	1/16W
Q401	8-729-920-85	TRANSISTOR 2SD1664-QR		R357	1-216-017-00	RES-CHIP 47 5%	1/10W
Q402	8-729-106-60	TRANSISTOR 2SB1115A-YQ		R359	1-216-797-11	METAL CHIP 10 5%	1/16W
Q403	8-729-421-22	TRANSISTOR UN2211		R360	1-216-864-11	SHORT 0	
		< RESISTOR >		R361	1-216-825-11	METAL CHIP 2.2K 5%	1/16W
R101	1-216-073-00	METAL CHIP 10K 5%	1/10W	R362	1-216-811-11	METAL CHIP 150 5%	1/16W
R102	1-216-833-11	METAL CHIP 10K 5%	1/16W	R365	1-216-864-11	SHORT 0	
R104	1-216-049-11	RES-CHIP 1K 5%	1/10W	R367	1-216-864-11	SHORT 0	
R201	1-216-073-00	METAL CHIP 10K 5%	1/10W	R401	1-216-073-00	METAL CHIP 10K 5%	1/10W
R202	1-216-049-11	RES-CHIP 1K 5%	1/10W	R402	1-216-065-00	RES-CHIP 4.7K 5%	1/10W
R301	1-216-809-11	METAL CHIP 100 5%	1/16W	R403	1-216-065-00	RES-CHIP 4.7K 5%	1/10W
R302	1-216-809-11	METAL CHIP 100 5%	1/16W	R404	1-216-809-11	METAL CHIP 100 5%	1/16W
R303	1-216-809-11	METAL CHIP 100 5%	1/16W	R405	1-218-692-11	METAL CHIP 1K 0.5%	1/16W
R304	1-216-809-11	METAL CHIP 100 5%	1/16W	R406	1-218-716-11	METAL CHIP 10K 0.5%	1/16W
R305	1-216-809-11	METAL CHIP 100 5%	1/16W	R407	1-216-845-11	METAL CHIP 100K 5%	1/16W
R306	1-216-809-11	METAL CHIP 100 5%	1/16W	R501	1-216-821-11	METAL CHIP 1K 5%	1/16W
R307	1-216-809-11	METAL CHIP 100 5%	1/16W	R502	1-216-821-11	METAL CHIP 1K 5%	1/16W
R308	1-216-809-11	METAL CHIP 100 5%	1/16W	R503	1-216-821-11	METAL CHIP 1K 5%	1/16W
R310	1-216-821-11	METAL CHIP 1K 5%	1/16W	R504	1-216-821-11	METAL CHIP 1K 5%	1/16W
R312	1-216-825-11	METAL CHIP 2.2K 5%	1/16W	R505	1-216-821-11	METAL CHIP 1K 5%	1/16W
R316	1-216-821-11	METAL CHIP 1K 5%	1/16W	R506	1-216-845-11	METAL CHIP 100K 5%	1/16W
				R507	1-218-708-11	METAL CHIP 4.7K 0.5%	1/16W
				R510	1-216-864-11	SHORT 0	
				R511	1-216-847-11	METAL CHIP 150K 5%	1/16W
				R512	1-216-845-11	METAL CHIP 100K 5%	1/16W
				R516	1-216-809-11	METAL CHIP 100 5%	1/16W
				R517	1-216-809-11	METAL CHIP 100 5%	1/16W
				R518	1-216-809-11	METAL CHIP 100 5%	1/16W

SERVO

SUB

Ref. No.	Part No.	Description	Remark
R519	1-216-809-11	METAL CHIP 100 5%	1/16W
R520	1-216-809-11	METAL CHIP 100 5%	1/16W
R521	1-216-809-11	METAL CHIP 100 5%	1/16W
R522	1-216-821-11	METAL CHIP 1K 5%	1/16W
R523	1-216-821-11	METAL CHIP 1K 5%	1/16W
R524	1-216-821-11	METAL CHIP 1K 5%	1/16W
R525	1-216-845-11	METAL CHIP 100K 5%	1/16W
R526	1-216-825-11	METAL CHIP 2.2K 5%	1/16W
R527	1-216-825-11	METAL CHIP 2.2K 5%	1/16W
R528	1-216-825-11	METAL CHIP 2.2K 5%	1/16W
R529	1-216-825-11	METAL CHIP 2.2K 5%	1/16W
R530	1-216-825-11	METAL CHIP 2.2K 5%	1/16W
R531	1-216-845-11	METAL CHIP 100K 5%	1/16W
R532	1-216-809-11	METAL CHIP 100 5%	1/16W
R533	1-216-845-11	METAL CHIP 100K 5%	1/16W
R534	1-216-845-11	METAL CHIP 100K 5%	1/16W
R535	1-216-845-11	METAL CHIP 100K 5%	1/16W
R537	1-216-809-11	METAL CHIP 100 5%	1/16W
R538	1-216-845-11	METAL CHIP 100K 5%	1/16W
R539	1-216-845-11	METAL CHIP 100K 5%	1/16W
R540	1-216-845-11	METAL CHIP 100K 5%	1/16W
R542	1-216-845-11	METAL CHIP 100K 5%	1/16W
< COMPOSITION CIRCUIT BLOCK >			
RB503	1-233-412-11	RES, CHIP NETWORK 1K (3216)	
< THERMISTOR >			
TH501	1-810-421-11	THERMISTOR NTH5G36B103K01TE	
< VIBRATOR >			
X301	1-795-144-21	OSCILLATOR, CERAMIC (45MHZ)	
X501	1-760-365-11	VIBRATOR, CERAMIC (10MHZ)	
*****			
*	1-680-042-11	SUB BOARD	*****
*****			
*	1-792-195-11	CABLE, FLEXIBLE FLAT (14 CORE)	
	3-039-443-11	SHEET (CONNECTOR)	
< CAPACITOR >			
C814	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C819	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
< CONNECTOR >			
CNP810	1-794-064-12	SOCKET, CONNECTOR 14P	
< DIODE >			
D810	8-719-056-83	DIODE UDZ-TE-17-6.8B	
D817	8-719-056-93	DIODE UDZ-TE-17-18B	
D818	8-719-056-83	DIODE UDZ-TE-17-6.8B	
D821	8-719-056-83	DIODE UDZ-TE-17-6.8B	
< LED >			
LED810	8-719-082-38	LED CL-270SR-C-TS	(DISC SLOT ILLUMINATION) (CA680X)


Ref. No.	Part No.	Description	Remark
LED810	8-719-082-40	LED CL-270FG-C-TS	(DISC SLOT ILLUMINATION) (CA680)
< SWITCH >			
LSW810	1-771-883-11	SWITCH, TACTILE (WITH LED) (▲)	(CA680X)
LSW810	1-786-113-11	SWITCH, TACT (WITH LED) (▲)	(CA680)
*****			
MISCELLANEOUS			
*****			
22	1-792-195-11	CABLE, FLEXIBLE FLAT (14 CORE)	
24	1-776-207-82	CORD (WITH CONNECTOR) (POWER) (US)	
24	1-776-527-61	CORD (WITH CONNECTOR) (ISO) (POWER)	(AEP, UK)
64	1-694-780-11	CONDUCTIVE BOARD, CONNECTION	
153	1-757-311-11	CABLE, FLEXIBLE FLAT (11 CORE)	
△165	8-583-065-03	OPTICAL PICK-UP KMS-241C/J1RP	
CNP810	1-794-064-11	SOCKET, CONNECTOR 14P	
LCD901	1-804-295-11	DISPLAY PANEL, LIQUID CRYSTAL	(CA680)
LCD901	1-804-295-21	DISPLAY PANEL, LIQUID CRYSTAL	(CA680X)
M901	A-3301-407-A	MOTOR ASSY, SP (SPINDLE)	
M902	A-3291-190-A	MOTOR ASSY, SL (SLED)	
M903	X-3379-451-1	MOTOR ASSY, LO (LOADING)	
*****			
HARDWARE LIST			
*****			
#1	7-685-792-09	SCREW +PTT 2.6X6 (S)	
#2	7-621-772-20	SCREW +B 2X5	
#3	7-627-553-28	SCREW, PRECISION +P 2X2.5	
#4	7-685-790-01	SCREW +PTT 2.6X4 (S)	
#5	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
#6	7-685-793-09	SCREW +PTT 2.6X8 (S)	
#7	7-685-794-09	SCREW +PTT 2.6X10 (S)	
#8	7-685-797-09	SCREW +PTT 2.6X16 (S)	
#9	7-685-106-19	SCREW +P 2X10 TYPE2 NON-SLIT	
#11	7-685-851-04	SCREW +BVTT 2X4 (S)	
#12	7-624-102-04	STOP RING 1.5, TYPE-E	
#13	7-627-852-37	PRECISION SCREW +P1.7X1.8 TYPE3	
#14	7-621-772-08	SCREW +B 2X3	
#15	7-621-555-10	SCREW +K 2X3	
*****			
ACCESSORIES & PACKING MATERIALS			
*****			
3-227-351-11	MANUAL, INSTRUCTION (ENGLISH)		(CA680X: US)
3-227-352-11	MANUAL, INSTRUCTION, INSTALL		(ENGLISH, FRENCH) (CA680X: US)
3-227-353-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH, GERMAN, DUTCH, ITALIAN)		(CA680/CA680X: AEP, UK)
3-227-354-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, FRENCH, GERMAN, DUTCH, ITALIAN)		(CA680/CA680X: AEP, UK)
X-3378-490-1	CASE (PANEL) ASSY (for FRONT PANEL)		
*****			

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

# MDX-CA680/CA680X

Ver 1.1 2001.05

Ref. No.	Part No.	Description	Remark
PARTS FOR INSTALLATION AND CONNECTIONS			
*****			
501	X-3373-602-1	FRAME ASSY	
502	3-040-979-01	COLLAR	
503	3-233-644-01	SPRING, FITTING	
504	X-3368-725-1	SCREW ASSY, FITTING (US)	
505	3-934-325-01	SCREW, +K (5X8) TAPPING	
506	3-924-961-01	SUPPORT (ND), FITTING (US)	
507	1-776-207-82	CORD (WITH CONNECTOR) (POWER) (US)	
508	X-3366-405-1	SCREW ASSY (EXP), FITTING (AEP, UK)	
509	1-465-459-21	ADAPTER, ANTENNA (AEP, UK)	
510	1-776-527-61	CORD (WITH CONNECTOR) (ISO) (POWER)	(AEP, UK)

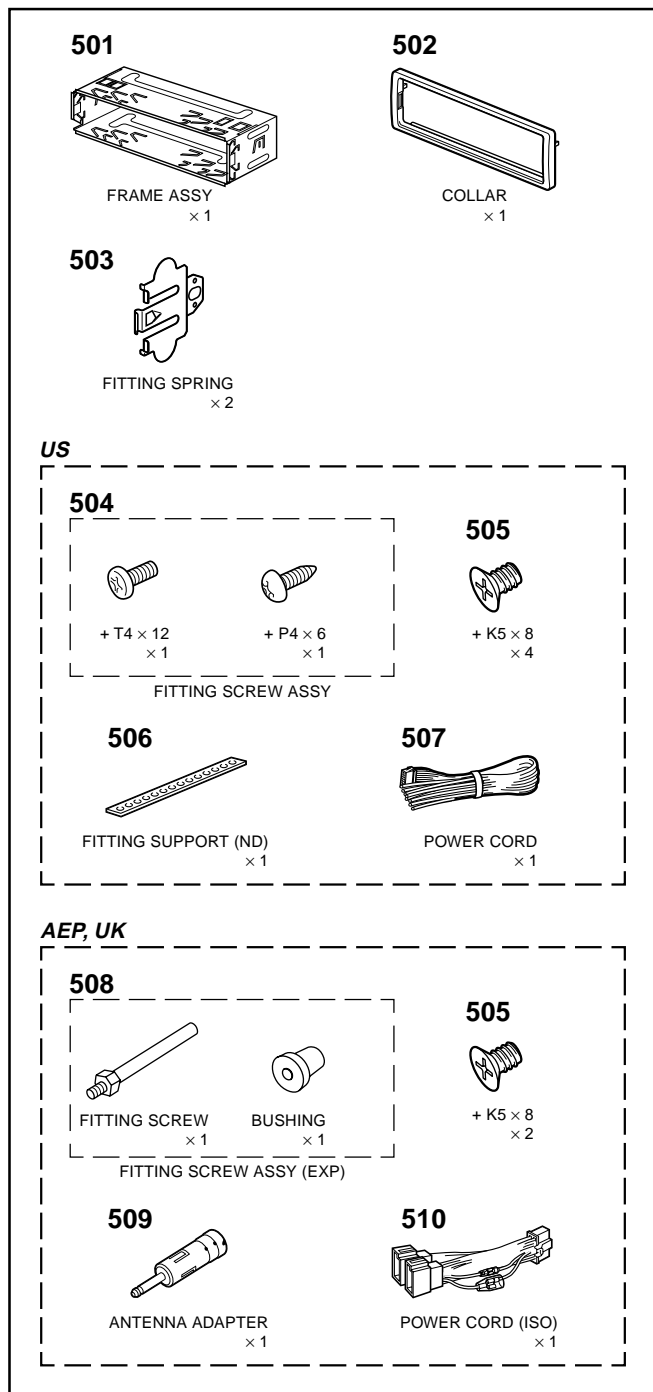

MEMO

